Water Heater Unit



Thermo Top C Additional Heater 00 0002

Installation Instructions

Jeep Compass

Diesel from Model Year 2007 Left-hand drive vehicle



WARNING!

Hazard warning:

Incorrect installation or repair of Webasto heating systems may cause a fire or result in the emission of carbon monoxide, which can be fatal. Serious or fatal injuries can be caused as a result.

Specialist company training, technical documentation, specialized tools and equipment are required to install and repair Webasto heating and cooling systems.

NEVER attempt to install or repair Webasto heating or cooling systems if you have not successfully completed the company training and thereby acquired the required technical skills, or if you do not have access to the required technical documentation, tools and equipment needed to carry out correct installation and repairs.

ALWAYS follow all Webasto installation and repair instructions and observe all warnings.

Webasto does not accept any liability for defects and damage that are attributable to installation by untrained staff.

Table of Contents

Validity	2	Preparing installation	10
Heater Unit/Installation Kit	3	Preparing installation location	11
Foreword	3	Installing heater unit	13
General Instructions	3	Fuel	15
Special Tools	3	Water	18
Explanatory Notes on Document	4	Combustion air	22
Preliminary Work	5	Exhaust gas	23
Heater unit installation location	5	Final Work	25
Electrical system	6	Operating Instructions for End Customer	26
Fan controller for manual air conditioning	7	Template for Perforated Fastening Strap	27
Remote option (Telestart)	8	Template for Diesel fuel standpipe	28
Remote option (Thermo Call)	9	,	

Validity

Manufacturer	Model	Туре	EG-BE No./ABE
Daimler Chrysler (USA)	Compass	pk	e11*2001/116*0142

Engine type	Engine model	Output in kW	Displacement in cm ³
BSY/BYL	Diesel	103	1968

Vehicle and engine types, equipment variants and national specifications not listed in these installation instructions have not been tested. However, installation according to these installation instructions may be possible.

The installation location of a digital timer and summer/winter switch should be confirmed with the end customer before installation.

Heater Unit/Installation Kit

Quantity	Description	Order No.:
1	LU Thermo Top C (D) with digital timer	See price list
1	LU Thermo Top C (D) with Telestart	See price list
1	Installation kit for Jeep Compass CRD	1312903A

Foreword

These installation instructions apply to Jeep Compass Diesel vehicles - for validity, see page 2 - from model year 2007 and later, assuming technical modifications to the vehicle do not affect installation, any liability claims excluded. Depending on the vehicle version and equipment, modifications may be necessary during installation with respect to these installation instructions.



However, the stipulations in the "installation instructions" and "operating and maintenance instructions" for the *Thermo Top C/P/E* must always be observed.

The corresponding rules of technology and any information from the vehicle manufacturer should be observed during the installation work.

General Instructions

Installation should be carried out according to the general, standard rules of technology. Unless specified otherwise, fasten hoses, lines and wiring harnesses to original vehicle lines and wiring harnesses using cable ties.

Sharp edges should be fitted with edge protectors (split-open plastic hose).

Spray unfinished body areas, e.g. drilled holes, with anti-corrosion wax (Tectyl 100K, Order No. 111329).

Special Tools

- Torque wrench for 2.0 10 Nm
- Hose clamping pliers
- Metric thread-setter kit

Explanatory Notes on Document

To provide you with a quick overview of the individual working steps, you will find an identification mark on the outside top right corner of the page in question.

Mechanical system



Electrical system



Water



Fuel



Exhaust gas



Combustion air



Special features are highlighted using the following symbols:



Specific risk of injury or fatal accidents.



Specific risk of damage to components.



Specific risk of fire or explosion.



Reference to general installation instructions of Webasto components or to the manufacturer's vehicle-specific documents.



Reference to a special technical feature.



The arrow in the vehicle icon indicates the position on the vehicle and the viewing angle.

All dimensions are in mm!

Tightening torque of hose clamps = 2.0 + 0.5 Nm!


Tightening torque of Ejot screws, Ejot studs = 10 Nm!

Preliminary Work

WARNING!

- Open the fuel tank cap, ventilate the tank.
- Close the tank cap again.
- Disconnect the battery "earth" or "ground" connection.
- Depressurize the cooling system.
- Copy the factory number from the original type label to the duplicate type label.
- Remove years that do not apply from the duplicate label.
- Attach the duplicate label (type label) in the appropriate place.
- Remove the battery.
- Remove the engine design cover.
- Remove the entire air filter.
- Remove the lower engine cover.
- Remove the bumper.
- Remove the left wheel well trim.
- Remove the seat bench of the rear bench seat.
- Open the tank-fitting service lid on the right and left.
- Remove the fuel-tank sending unit on the right according to the manufacturer's instructions; open the quick-release couplings inside the fuel tank.
- Remove the fuel-tank sending unit on the left according to the manufacturer's instructions (the fuel-tank sending unit is installed on the left).
- Remove the lower left instrument panel trim.
- Remove the lower steering column trim.
- Remove the trim above the pedals.
- Remove the trim below the glove compartment.

Remove page 26 "Operating Instructions for End Customer" and add to the vehicle operating instructions.

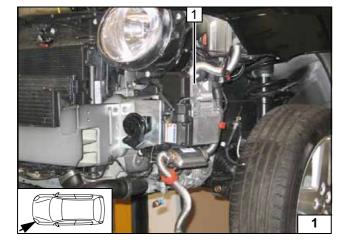

Heater unit installation location

1 Heater unit

Installation location


<u>.</u>



Electrical system


Power supply


- 1 Positive battery terminal
- 2 Ground point

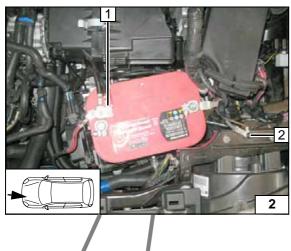

Digital timer


- 1 Summer/winter switch option
- 2 Digital timer

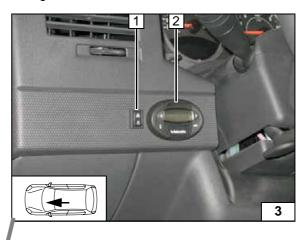

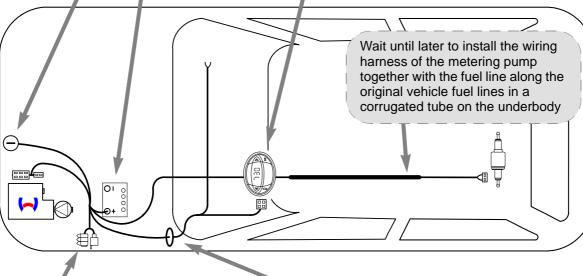




Wiring harness installation diagram

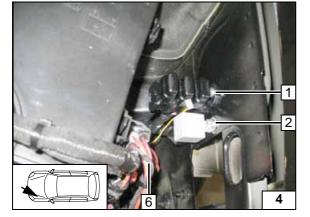

Fuse holder, relay K3

- 1 Fuse holder, 4.5 mm dia. hole, 5.5x13 self-tapping screw
- **2** K3 relay, 4.5 mm dia. hole; 5.5x13 self-tapping screw

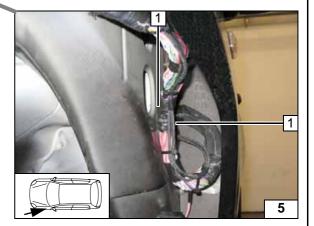


Wiring harness pass through


1 Protective rubber plug

7

Fan controller for manual air conditioning

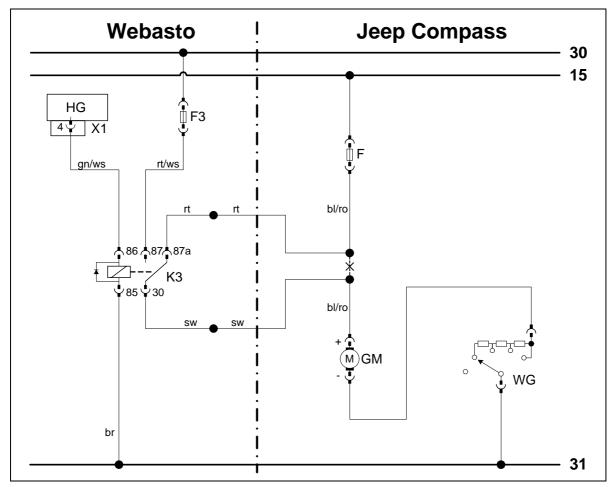

Weba	asto components	Vehic	le components	Colo	rs and symbols	
HG	Heater unit TT-C	GM	Fan motor	rt	red	
X1	6-pin heater unit connector	WG	Resistor group	ws	white	
F3	Fuse, 25 A	F	Fan fuse	sw	black	
K3	Fan relay			br	brown	
				gn	green	
		·		Х	Cutting point	
				Wirin	Wiring colors may vary.	

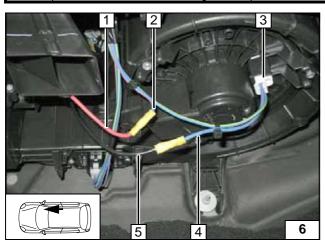

Connection to 2-pin connector **3** from the blower motor.

Produce connections as shown in wiring diagram.

- 1 Red (rt) wire from K3/87a
- 2 Blue/red (bl/rt) wire of fan fuse
- 4 Blue/red (bl/rt) wire of fan motor
- 5 Black (sw) wire from K3/30

i


Wiring diagram

Legend



Connecting fan-motor



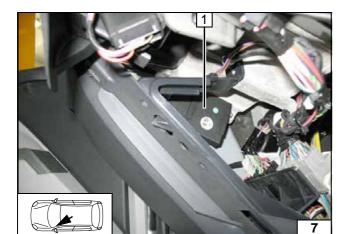


Remote option (Telestart)

1 Fasten receiver with adhesive tape




Installing receiver

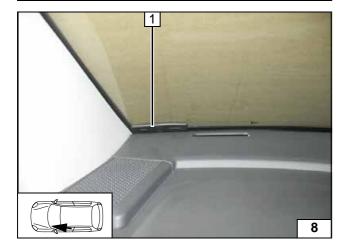

1 Antenna



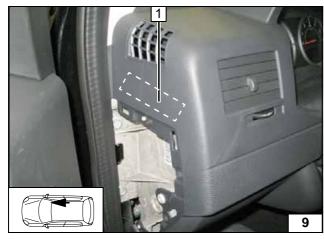


Temperature sensor for HTM100 only



Fasten temperature sensor 1 with adhesive tape on air duct behind instrument panel trim (see marking).

Installing tempera-ture sensor



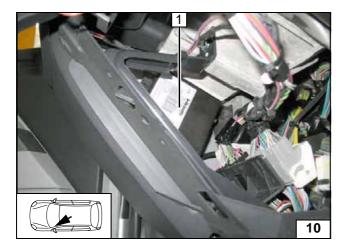


Remote option (Thermo Call)

1 Fasten receiver with adhesive tape




Installing receiver

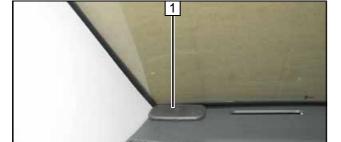

1 Antenna


Installing antenna

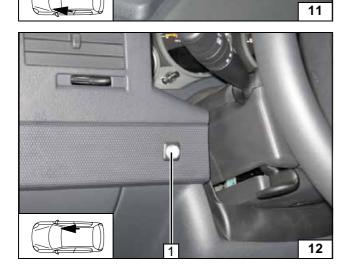

1 Pushbutton

Installing push button



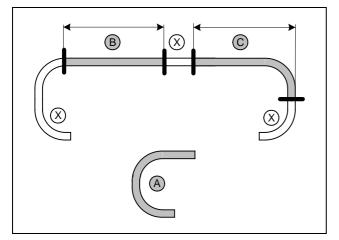

Preparing installation


A = Molded hose

b = 1030

c = 1040

Discard section X

Cutting coolant hoses to length

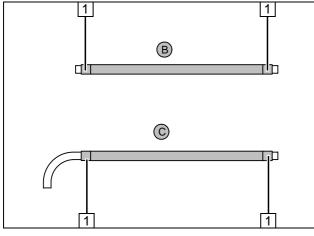


Push braided protection hoses onto hose ${\bf B}$ and ${\bf C}$ and cut to length.

Cut heat shrink plastic tubing to length.

1 25 mm long heat shrink plastic tubing [4x]




Preparing coolant hoses

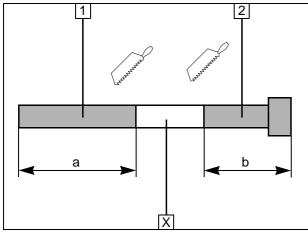

- 1 Exhaust pipe a = 210
- **2** Exhaust end section b = 450

Discard section ${\bf X}$


Preparing exhaust pipe

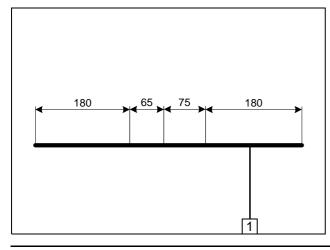

1 Edge protection

Cutting edge protection to size




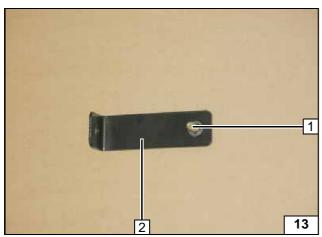

- 1 M6x20 bolt, pin lock
- 2 Bracket




Preparing bracket for coolant hoses

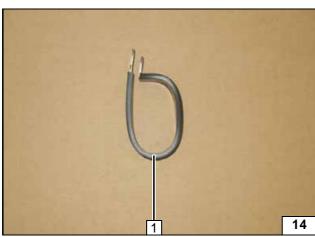

Shape 48 mm dia. rubber-coated p-clamps 1 [2x] provided as shown.



Preparing rubber-coated p-clamps

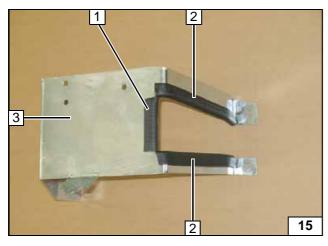

Preparing installation location

- 1 Edge protection 65
- 2 Edge protection 180 [2x]
- 3 Bracket


Preparing bracket

1 Exhaust muffler, M6x20 bolt, flanged nut 2 Bracket

Preparing bracket






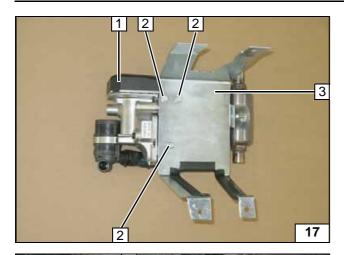

Insert two washers between heater unit and bracket 2 at position 3.


- 2 Ejot screw [2x]3 Ejot screw, washer [2x]

Preassembling heater unit

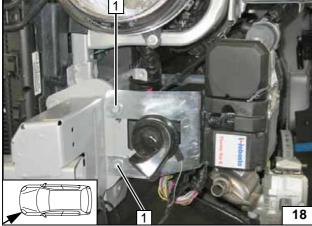

1 Loosely mount original vehicle bolt [2x].

Copying hole pattern

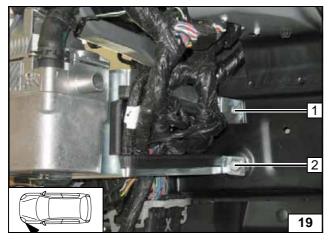


Be carefully not to damage wiring harness of heater unit when inserting! Remove heater unit after copying 9.1 mm dia. hole pattern 1.



2 Loosely mount M8x20 bolt, spring lockwasher


Copying hole pattern

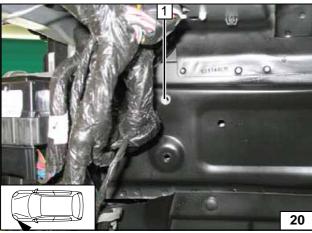

1 9.1 mm dia. hole; M6 rivet nut

Installing rivet nut




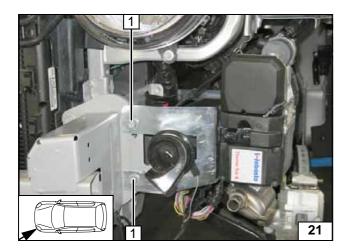


Installing heater unit

1 Original vehicle bolt [2x]

Installing bracket

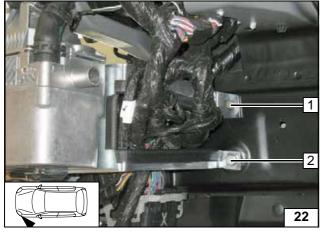


Be carefully not to damage wiring harness of heater unit when inserting!

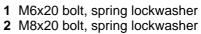



Installing bracket

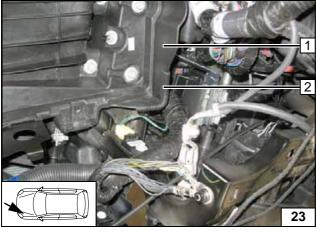

Mount 75 mm edge protection 2 on battery carrier 1.



Installing edge protection




Push through perforation of heater unit cover 2 and insert clip-type cable tie 3.



1 Wiring harness of heater unit

Mounting wiring harness of heater unit



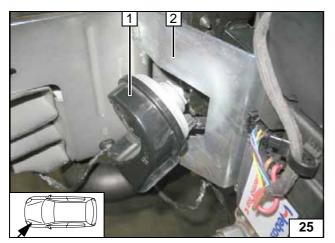

Ensure proper freedom of movement of horn 1 to bracket 2.



Aligning horn



Fuel

CAUTION!

Open the vehicle's fuel tank cap, ventilate the tank and then re-close the tank lock.


Catch any fuel running off with an appropriate container.

Install fuel line and metering-pump wiring harness so that they are protected against stone impact. Unless specified otherwise, always fasten using cable ties.

Mount the fuel line and wiring harness with rub protection on sharp edges.


WARNING!

The fuel line and wiring harness are routed to the metering pump in as shown in the wiring harness routing diagram.

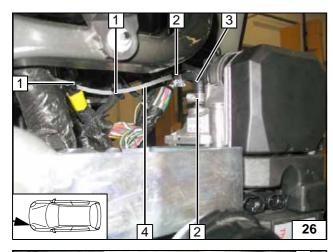

- 1 Cable tie [2x]
- 2 10 mm dia. clamp [2x]
- 3 90° molded hose
- 4 Fuel line

Connection to heater unit

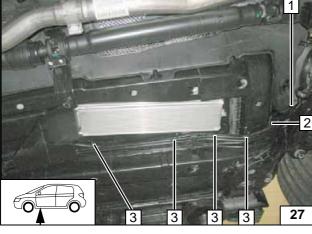


Route fuel line and wiring harness of metering pump 1 in corrugated tube 2 above original vehicle fuel line.

3 Cable tie



Installing lines

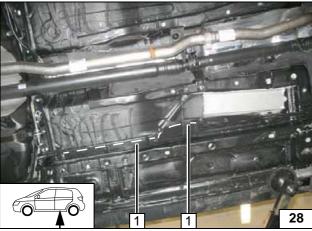


Route fuel line and wiring harness of metering pump **1** above original vehicle fuel line.




Installing lines



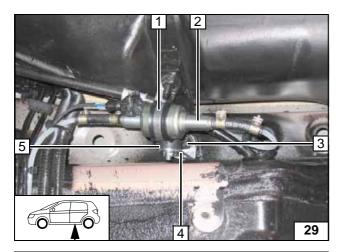


Bend and drill perforated bracket **4** in accordance with template.

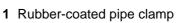

- 2 Metering pump
- 3 Original vehicle bolt
- 5 Silent block, flanged nut [2x]



Installing metering pump

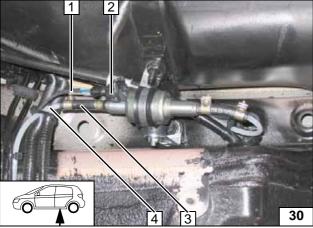


Check the position of the components; adjust if necessary. Check that they have free clearance.



- 1 Metering pump wiring harness
- 2 Metering pump connector
- 3 Hose section, 10 mm dia. clamp [2x]
- 4 Fuel line from heater unit



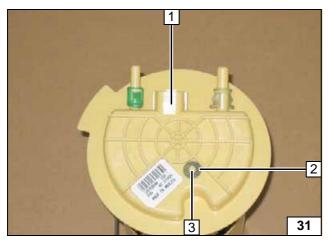

Remove fuel-tank sending unit 1 in accordance with manufacturer's specifications.



- **2** Lay washer with outside dia. = 17.6 mm on bars
- 3 Copy 6 mm dia. hole pattern





Cut fuel standpipe 1 to length, shape and install, see installation instructions.




Removing fuel

1312904A_EN 16

32



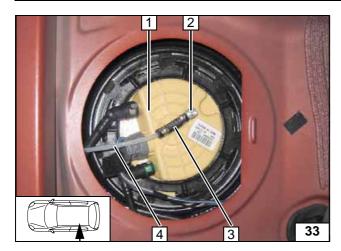


Install fuel-tank sending unit **1** in accordance with manufacturer's specifications.


- 2 Fuel standpipe3 Molded hose, 10 mm dia.clamp
- 4 Fuel line



Connecting fuel line

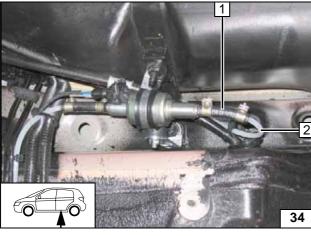

Check the position of the components; adjust if necessary. Check that they have free clearance.

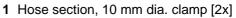

2 Fuel line



Connecting metering pump





Water


WARNING!

Any coolant running off should be collected using an appropriate container. Install hoses so that they are kink-free. Unless specified otherwise, always fasten using cable ties. Position clamps so that no other hose can be damaged! When installing the coolant hose, the heater unit must be filled with coolant.

The connection should be "inline" based on the following diagram:



Coolant routing diagram

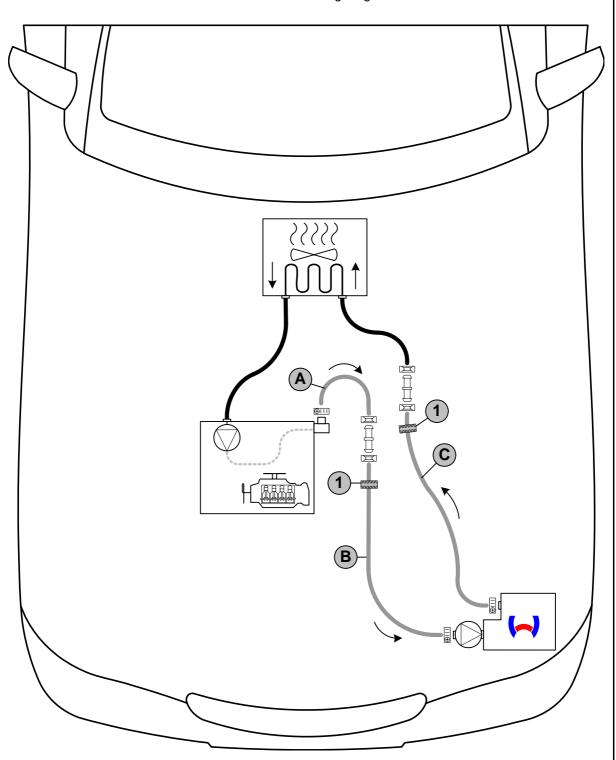


All spring clips = 27 mm dia.! All hose clamps ⊕ □ = 20-27 mm dia.! All connecting pipes □□ = 20x20 dia..

1 = red(rt) rubber isolator [2x].





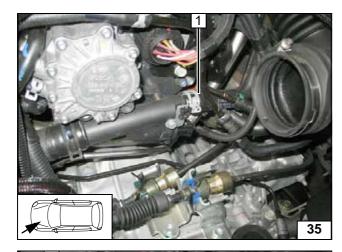

Pull hose off engine outlet 1; original vehicle clamp will not be reused.




Cutting point



Turn original vehicle clamp 1.




Connecting engine outlet

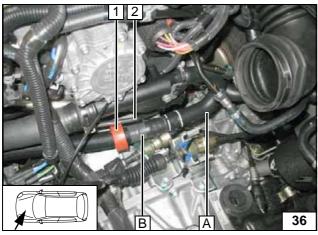

Align red (rt) rubber isolator 1 relative to oil pressure line 2.




Connecting engine outlet

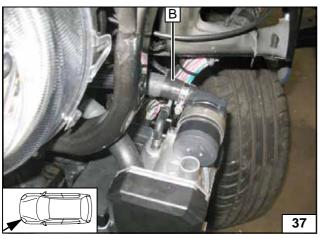


Connecting heater unit



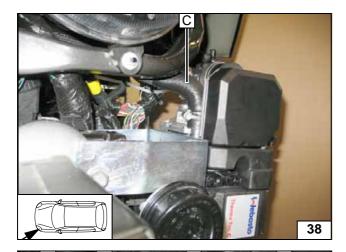


Connecting heater unit

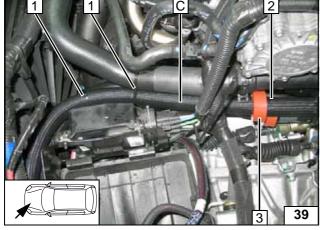

Align red (rt) rubber isolator 3 relative to oil pressure line 2.

1 Cable tie

Routing in engine compartment

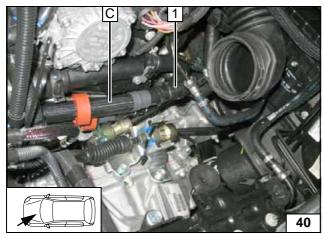


1 Hose on heat exchanger inlet




Con-necting heat exchanger inlet

- 1 Original vehicle bolt2 48 mm dia. rubber-coated p-clamp

Installing p-clamp

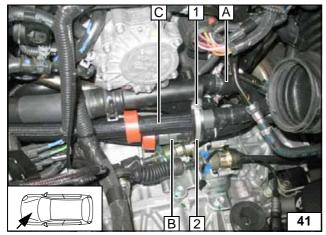




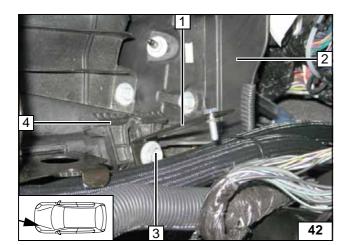

Loosely mount bracket 1 so that battery can be installed later.

- 2 Battery carrier3 Original vehicle bolt4 Battery clamping piece


Loosely mount bracket

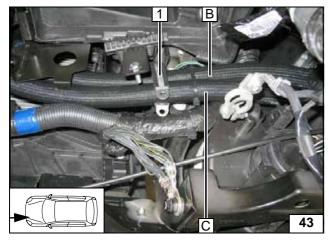

Position 48 mm dia. rubber-coated p-clamp 1. Install vehicle battery.




Premounting p-clamp

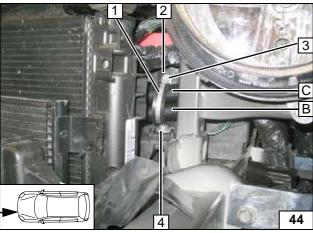

- 1 48 mm dia. rubber-coated p-clamp
- 2 Bracket
- 3 Flanged nut, M6x20 bolt premounted4 Original vehicle bolt of battery bracket

Installing p-clamp




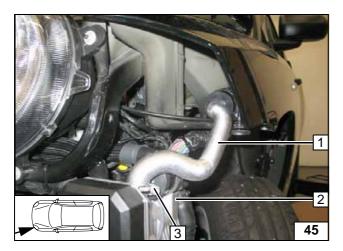

Combustion air

- 1 Combustion-air intake pipe
- 2 Heater unit
- 3 27 mm dia. clamp


Installing intake pipe

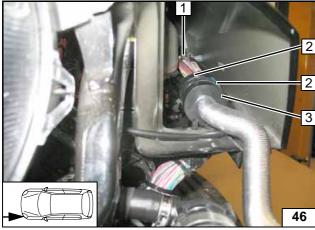

Fasten air intake muffler **3** to original vehicle wiring harness **1** with cable ties **2** [2x].



Installing muffler

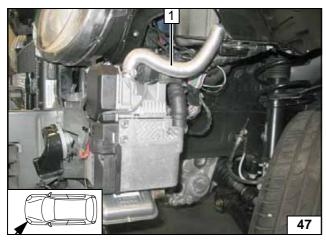


Shape intake pipe **1** and ensure sufficient space is available for left turn signals by positioning bumper.



Shaping intake pipe




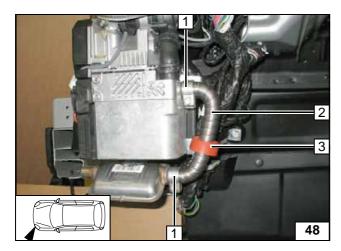

Exhaust gas

- 1 Hose clamp [2x]
- 2 Exhaust pipe
- 3 Red (rt) rubber isolator

Installing exhaust pipe

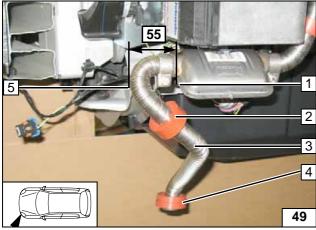


Bend exhaust end section 3 so that spacing of 55 mm is achieved between muffler fold 1 and outer edge 5.



- 2 Red (rt) rubber isolator
- 3 Exhaust end section, hose clamp
- 4 Red (rt) rubber isolator with groove

Installing exhaust end section

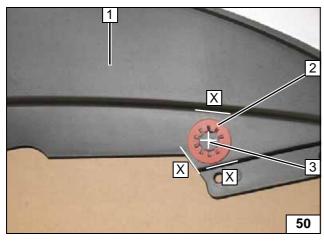


Position red (rt) rubber isolator with groove 2 on underside of bumper at left 1 with a distance of 5 mm to markings X and copy hole pattern.

42 mm dia. hole at position 3



Cutting out underride protection

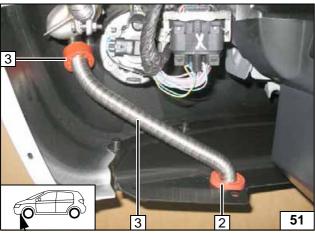

Install bumper.


Align red (rt) rubber isolator **3** relative to bumper.

- 1 Red (rt) rubber isolator with groove
- 2 Exhaust end section

F

Installing exhaust end section



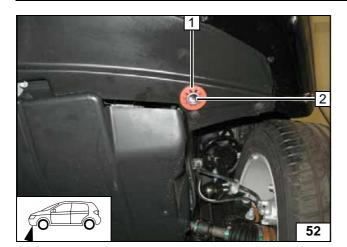

Align exhaust end section **2** flush on red rubber isolator **1**.



Aligning exhaust end section



Final Work

WARNING!

Reassemble the disassembled components in reverse order.

Check all hoses, clamps and all electrical connections for firm seating.

Secure all loose cables using cable ties.

Only use manufacturer-approved coolant.

Spray the heater unit components with anti-corrosion wax (Tectyl 100K, Order No. 111329).

- Connect the battery
- Fill and bleed the coolant circuit according to the vehicle manufacturer's specifications.
- Set the digital timer.
- Make settings on A/C control panel according to the "Operating Instructions for End Customer".
- Check the proper operation of the additional heater, see the operating instructions/installation instructions.
- Attach the "Switch off additional heater before refueling" sticker to the left-hand B-pillar.







Webasto AG Postfach 80 - 82132 Stockdorf Hotline 01805 / 932278 - Hotfax 0395 / 5592-353 http://www.webasto.de

Operating Instructions for End Customer



Please remove page and add to the vehicle operating instructions.

Note:

We recommend matching the heating time to the driving time.

Heating time = driving time

Example:

For a driving time of approx. 20 min. (in one direction), we recommend not exceeding a switch-on time of 20 min.

If the summer/winter switch option has been installed, this must be switched in accordance with the time of year. The heater unit will then only switch on the vehicle fan to ventilate the vehicle interior in the position Winter heat and in the position Summer .



Before parking the vehicle, make the following settings:

Note:

On vehicle with a factory-installed alarm system, the passenger compartment monitoring must be deactivated. Please see the vehicle owner's manual for instructions.




- 1 Air outlet to windshield
- 2 Set fan to level "1", or possibly "2"
- 3 Set temperature to "max."

Manual air conditioning



Template for Perforated Fastening Strap

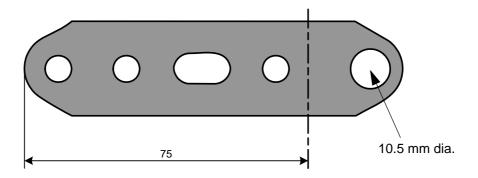





Template for Diesel fuel standpipe

