

Operating Instructions

Upgraded Auxiliary Heater for Additional Heater

Audi Q7

with Automatic Air Conditioning

General Instructions

Safety precautions for handling additional heater:

The additional heater operates independently of the vehicle's heating system and can be used while driving or when stopped.

If the additional heater runs several times during a longer period, the vehicle battery is discharged. You can prevent this by occasionally driving the vehicle for a few miles or charging the battery by running the engine.

The exhaust system of the additional heater may not be blocked or clogged by snow, mud or other objects. The exhaust gases must be able to exit unhindered.

The running additional heater is supplied with fuel from the vehicle fuel tank. Therefore, you should not run the additional heater when very little fuel is left in the fuel tank.



WARNING!

- The additional heater must be switched off during refueling.
- Do not start or operate the additional heater in unventilated rooms. The exhaust gases of the additional heater contain odorless and colorless carbon monoxide, a toxic gas - extreme danger! Carbon monoxide can lead to unconsciousness and death.
- Never park the vehicle in areas in which the hot exhaust system can come into contact with dry grass, underbrush, spilled fuel or other highly flammable materials.
- Do not place objects, food or medications in front of the warm air outlet of the additional heater. The warm air flowing out can damage heat-sensitive objects, food or medications or render them unusable.

Note

To ensure proper operation of the additional heater, the fuel level in the tank must be above the "Reserve" level.

We recommend matching the heating time to the driving time.

The following rule of thumb applies: driving time = heating time.

Example: For a driving time of 20 min., the additional heating time is not to exceed 20 min.

Have the condition of your battery checked before the start of the winter season (additional heating season).

Your auxiliary heater must be switched to - **AUTO** - (see the chapter Hot and Cold in the vehicle logbook).

The additional heating function is not available to you.

Proper commissioning of the additional heater is only ensured with the Webasto T91 radio remote control (included in the original Webasto upgrade kit).



Photo T91

Webasto AG

Postfach 80
82131 Stockdorf
GERMANY

<http://www.webasto.com>

Subject to change

© 2007 All Rights Reserved