

Water Heater Unit



Thermo Top C Additional Heater ^{e1} 00 0002

Installation Instructions

Ford Transit

2.2 liter diesel

from Model Year 2007

For left-hand drive vehicles only

Manual air conditioning



WARNING!

Hazard warning:

Incorrect installation or repair of Webasto heating systems may cause a fire or result in the emission of carbon monoxide, which can be fatal. Serious or fatal injuries can be caused as a result.

Specialist company training, technical documentation, specialized tools and equipment are required to install and repair Webasto heating and cooling systems.

NEVER attempt to install or repair Webasto heating or cooling systems if you have not successfully completed the company training and thereby acquired the required technical skills, or if you do not have access to the required technical documentation, tools and equipment needed to carry out correct installation and repairs.

ALWAYS follow all Webasto installation and repair instructions and observe all warnings.

Webasto does not accept any liability for defects and damage that are attributable to installation by untrained staff.

Table of Contents

Validity	2	Preparing installation location	9
Heater Unit/Installation Kit	3	Preparing heater unit	10
Foreword	3	Installing heater unit	11
General Instructions	3	Exhaust system	13
Special Tools	3	Coolant connection	15
Explanatory Notes on Document	4	Fuel Connection	18
Preliminary Work	5	Final Work	20
Heater unit installation location	5	Operating Instructions for End Customer	21
Electrical Connections	6		
Fan controller	7		
Remote option (Telestart)	8		

Validity

Manufacturer	Model	Type	EG-BE No./ABE
Ford	Transit	F*6	e11 * 2001 / 116 * 0284 * ...
Ford	Transit	F*6	e11 * 2001/116 * 0286 * ...
Ford	Transit	F*6	L744
Ford	Transit	F*6	L758

Engine type	Engine model	Output in kW	Displacement in cm ³
P8FA	Diesel	63	2198
QVFA	Diesel	81	2198
SRFA	Diesel	85	2198
QVFA	Diesel	96	2198
PGFA	Diesel	103	2198

Vehicle and engine types, equipment variants and national specifications not listed in these installation instructions have not been tested. However, installation according to these installation instructions may be possible.

The installation location of a digital timer and summer/winter switch should be confirmed with the end customer before installation.

Heater Unit/Installation Kit

Quantity	Description	Order No.:
1	Delivery scope of Ford Transit 2.2 liter diesel without heater control	1311717A
or		
1	Installation kit for Ford Transit 2.2 liter diesel in conjunction with <i>Thermo Top C</i> retail accessories	1311724A

Optional heater control either:

Quantity	Description	Order No.:
1	Digital timer	9010869A
1	Telestart T91	9016028A
1	Thermo-Call TC2	9016027A

Foreword

These installation instructions apply to Ford Transit 2.2 liter diesel vehicles - for validity, see page 2 - from model year 2007 and later, assuming technical modifications to the vehicle do not affect installation, any liability claims excluded. Depending on the vehicle version and equipment, modifications may be necessary during installation with respect to these installation instructions.

However, where this is the case the stipulations in the "installation instructions" and "operating and maintenance instructions" for the *Thermo Top C* should be observed.

The corresponding rules of technology and any information from the vehicle manufacturer should be observed during the installation work.

General Instructions

Installation should be carried out according to the general, standard rules of technology. Unless specified otherwise, fasten hoses, lines and wiring harnesses to original vehicle lines and wiring harnesses using cable ties.

Sharp edges must be provided with rub protection (cut-open fuel hose)!

Spray unfinished body areas, e.g. drilled holes, with anti-corrosion wax (Tectyl 100K, Order No. 111329).

 
Special Tools

- Torque wrench for 2.0 - 10 Nm
- Hose clamping pliers
- Metric thread-setter kit


Explanatory Notes on Document

To provide you with a quick overview of the individual working steps, you will find an identification mark on the outside top right corner of the page in question.


Mechanical system

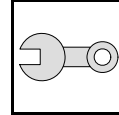


Electrical system

 


Coolant connection

 


Fuel connection

 

Exhaust system

 

Combustion air

 

Special features are highlighted using the following symbols:



Specific risk of injury or fatal accidents.



Specific risk of damage to components.



 
Specific risk of fire or explosion.



Reference to general installation instructions of Webasto components or to the manufacturer's vehicle-specific documents.



Reference to a special technical feature.



The arrow in the vehicle icon indicates the position on the vehicle and the viewing angle.

All dimensions are in mm!

Tightening torque of hose clamps = 2.0 + 0.5 Nm!


Tightening torque of Ejet screws, Ejet studs = 10 Nm!

Preliminary Work

WARNING!

- Open the fuel tank cap and vent the fuel tank.
- Close the tank cap again.
- Disconnect battery "earth" or "ground" connection!
- Depressurize the cooling system!
- Copy the factory number from the original type label to the duplicate type label.
- Remove years that do not apply from duplicate label.
- Attach the duplicate label (type label) in the appropriate place.
- Remove the right-hand headlight
- Expose the central electrical box in the footwell of the front passenger side
- Detach the glove compartment and fold it downward (only with Telestart).

Remove page 21 "Operating Instructions for End Customer" and add to the vehicle operating instructions.

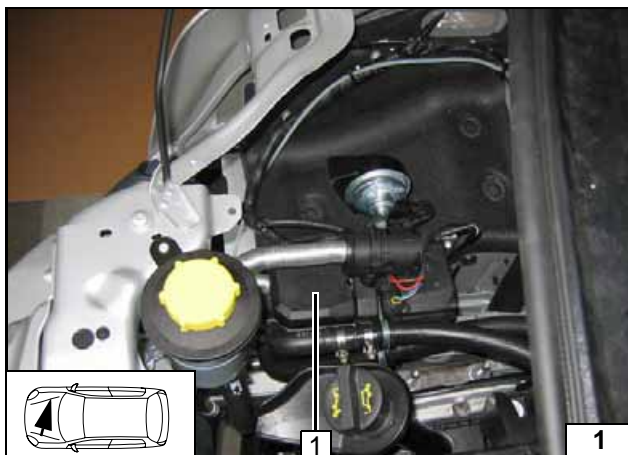

Heater unit installation location

1 Heater unit


Installation location



Electrical Connections



Preparing wiring harness pass through

Disconnect original vehicle wiring harness **2** and twist wiring harness pass through **1** to right as shown in illustration below. Cut out insulation mat at marking.

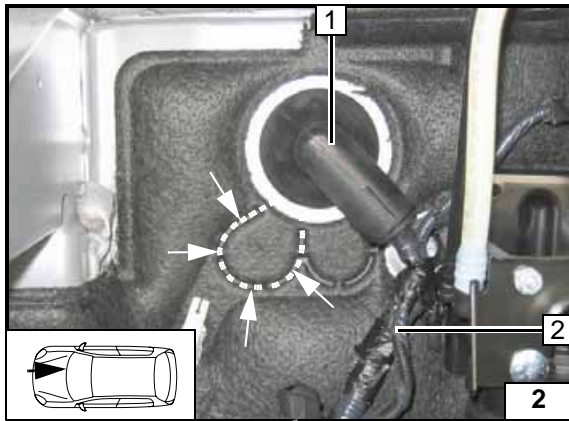


Wiring harness pass through

- 1 Wiring harness pass through turned
- 2 Wiring harness of fan controller
- 3 Wiring harness of digital timer
- 4 Original vehicle protective rubber plug

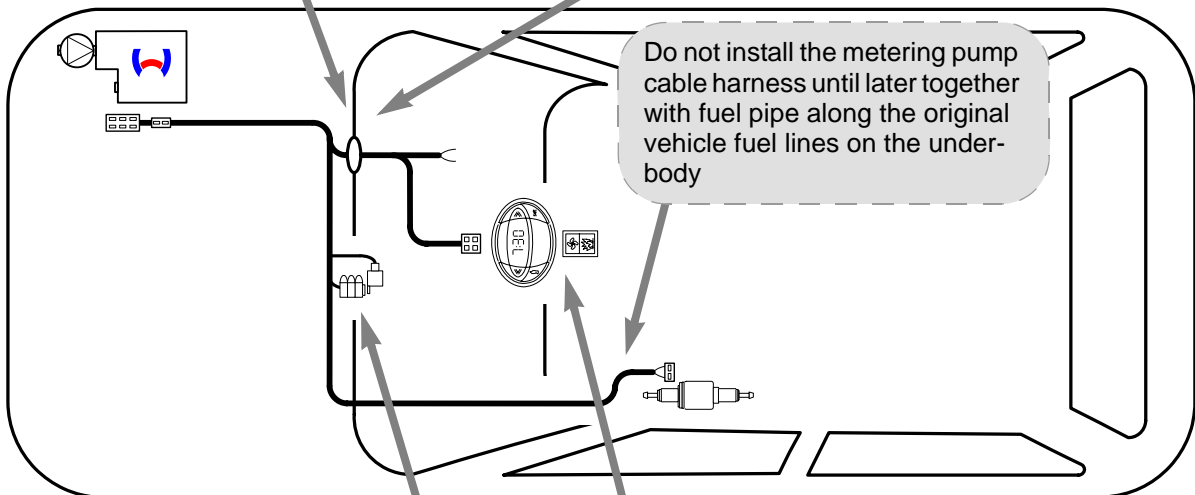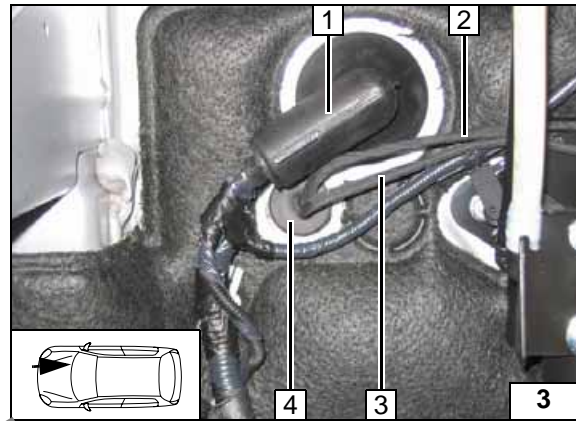


Wiring harness installation diagram

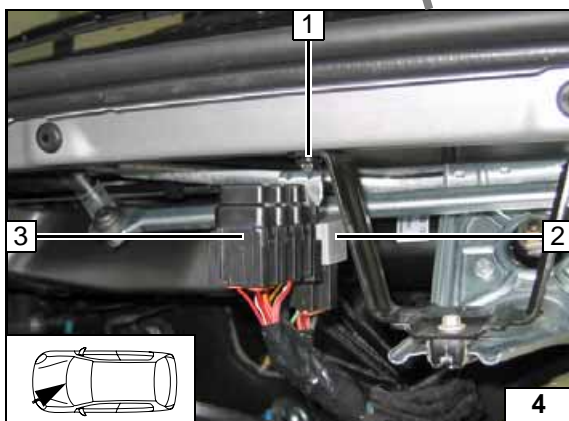

Fuse holder, K3 relay

- 1 Angle bracket, flanged nut on original vehicle bolt
- 2 K3 relay, M5x12 bolt, retaining plate of fuse holder, M5 flanged nut
- 3 Fuse holder

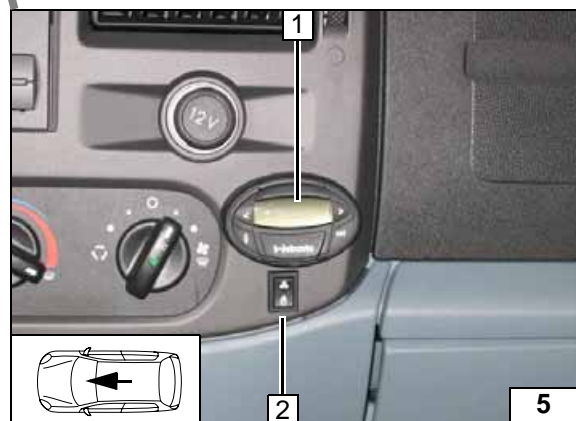


Digital timer and summer/winter switch option

- 1 Digital timer
- 2 Summer/winter switch, drilled hole 12 mm dia.




Fan controller

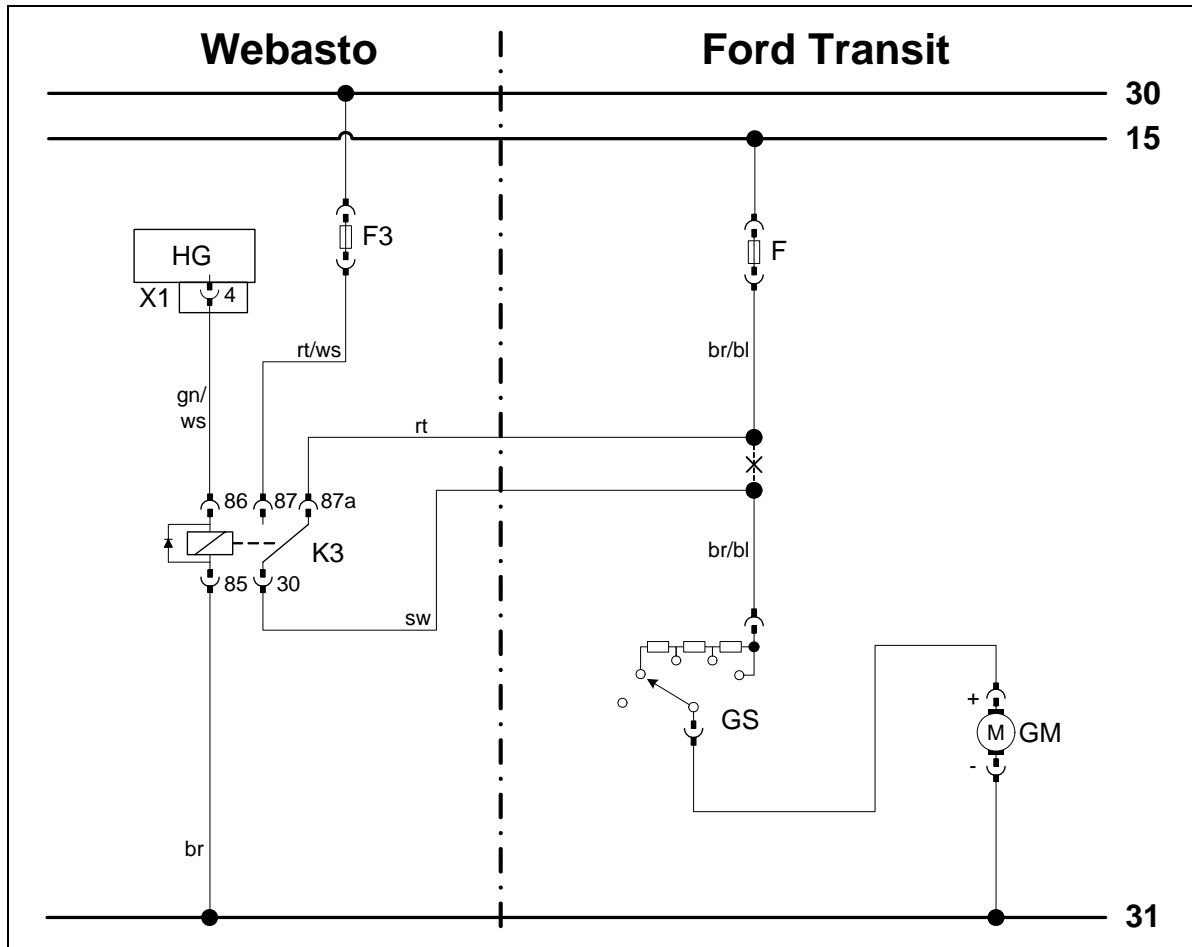

Wiring diagram

Webasto components		Vehicle components		Colors and symbols	
HG	Heater unit TT-C	GM	Fan motor	rt	red
X1	6-pin connector	GS	Fan switch	ws	white
F3	25 A fuse	F	Fuse 40A	sw	black
K3	Fan relay			br	brown
				gn	green
				bl	blue
				X	Cutting point
				Wiring colors may vary.	

Legend

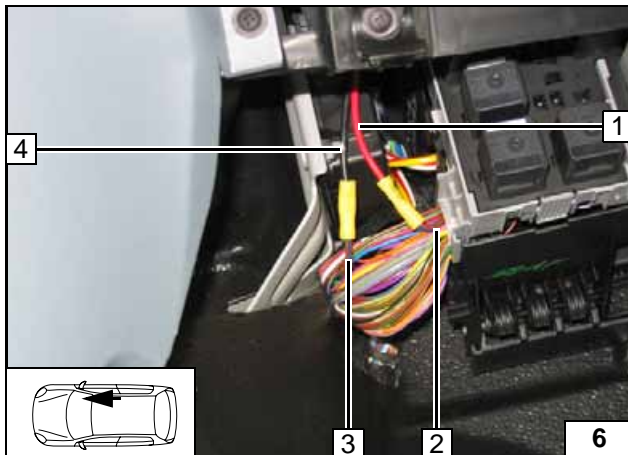


Connection to central electrical box. Produce connections as shown in wiring diagram.

- 1 Red (rt) wire from K3/87a
- 2 Brown/blue (br/bl) wire of fan switch
- 3 Brown/blue (br/bl) wire of 40 A fuse
- 4 Black (sw) wire of K3/30



Connecting central electrical box

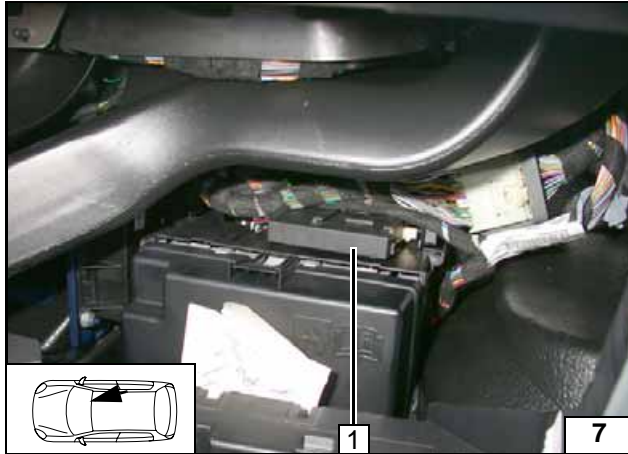


Remote option (Telestart)

Fasten receiver 1 with adhesive tape.




Installing receiver

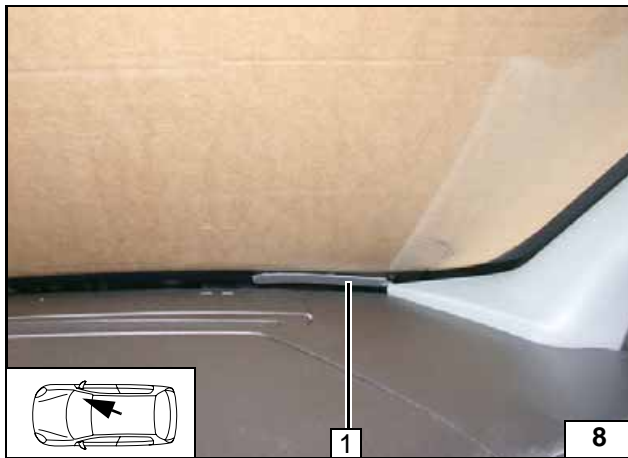

1 Antenna

Installing antenna


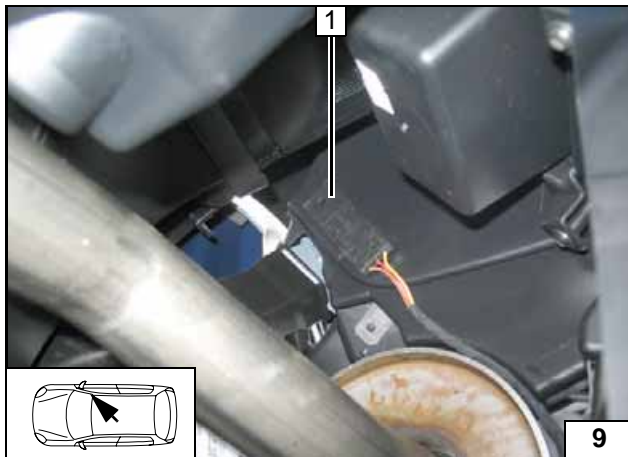


Temperature sensor HTM100

Fasten temperature sensor 1 with adhesive tape.



 
Installing temperature sensor

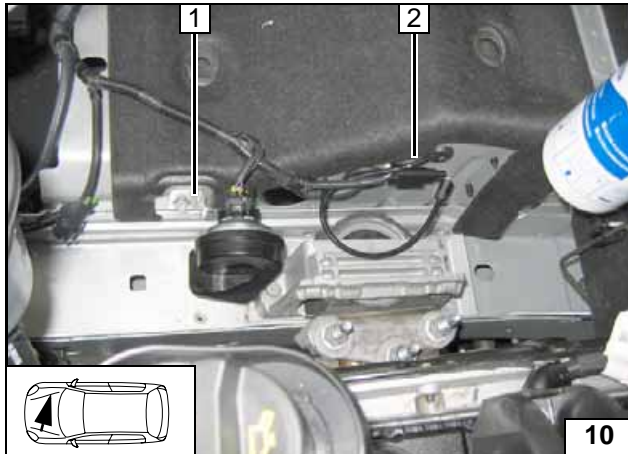

Preparing installation location

- 1 Remove horn with bracket
- 2 Detach retaining clip from original vehicle wiring harness


Removing horn

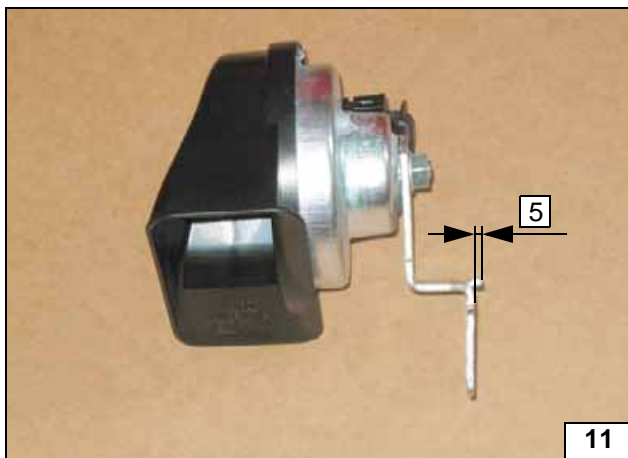

Shorten lug of horn bracket to 5 mm.




Preparing bracket

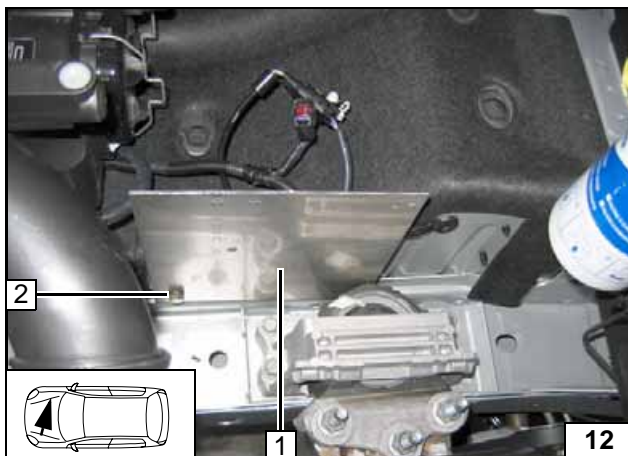

Drill out bracket 1 at position 2 to 8.5 mm dia. before installation.

- 2 Loosely mount M8x30 bolt, spring lock-washer, 15 mm spacer sleeve in existing threaded hole

Loosely preassembling bracket


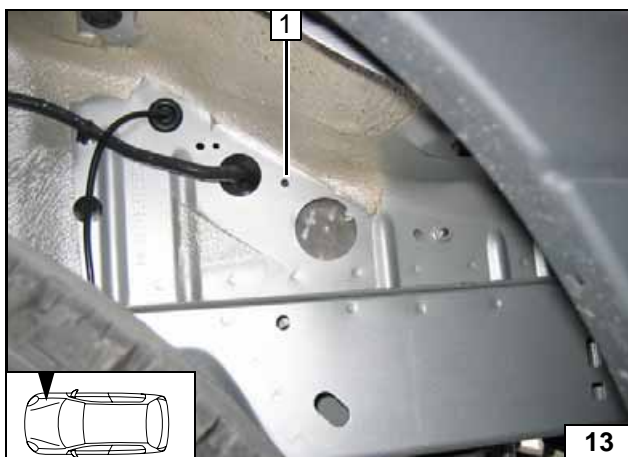


Remove bracket after copying.

- 1 Copy hole pattern to bracket and drill out hole in body to 7 mm dia.

 
Copying hole pattern



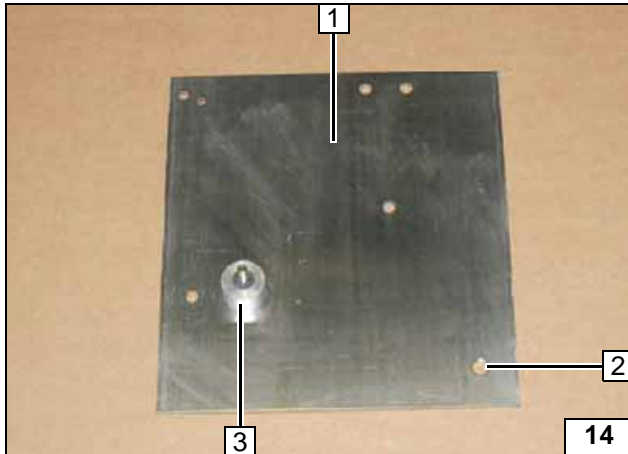


- 1 Bracket
- 2 Drill out 8 mm dia. hole
- 3 7 mm dia. hole, M6x30 bolt, 15 mm spacer sleeve of pin lock

Preparing bracket

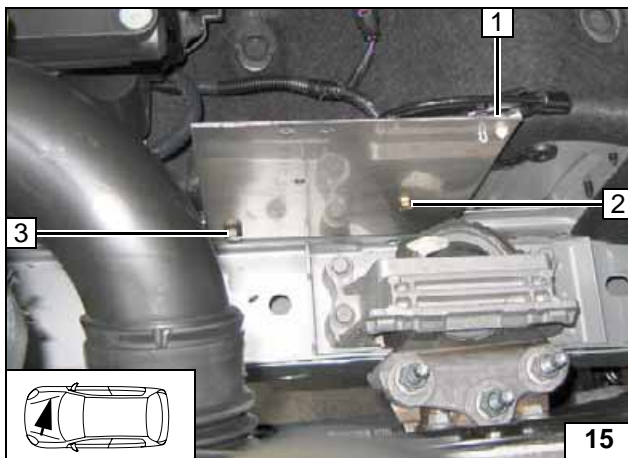

- 1 Mount retaining clip of original vehicle wiring harness in hole
- 2 Flanged nut on preassembled bolt
- 3 M8x30 bolt, spring lockwasher, 15 mm spacer sleeve in existing threaded hole

Installing bracket

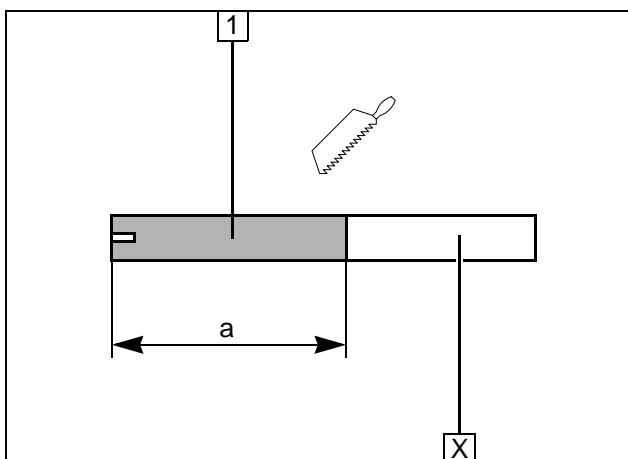


Preparing heater unit

- 1 Combustion air pipe
a = 260

Discard section X

Cutting combustion air pipe to length


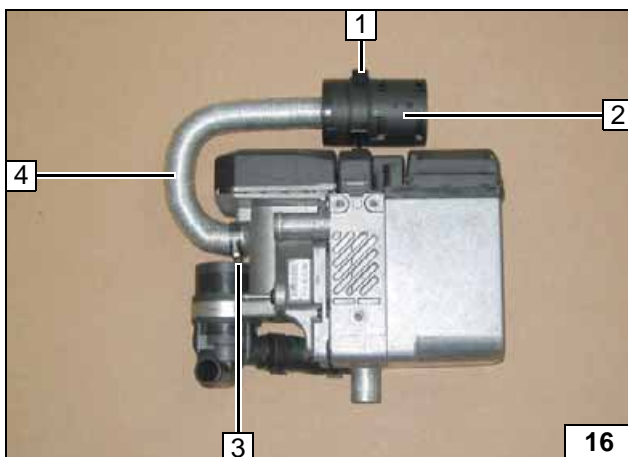


Break through perforation on heater unit cover and mount retaining clip 1.

- 2 Muffler
- 3 27 mm dia. hose clamp
- 4 Combustion-air intake pipe



 
Preassembling muffler

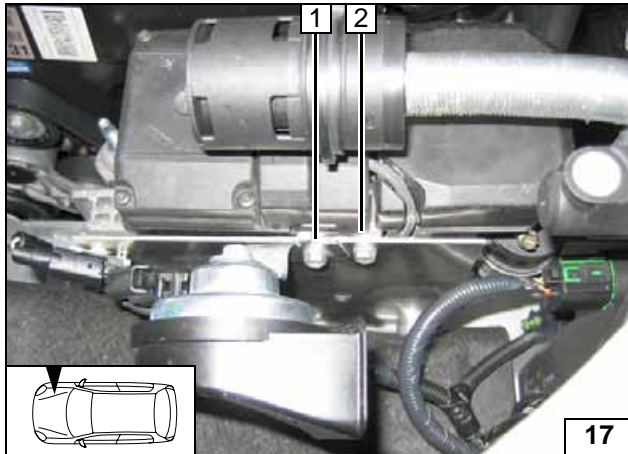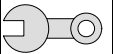

Installing heater unit


- 1 E-jot screw, horn with bracket
- 2 E-jot screw

Loosely mounting heater unit

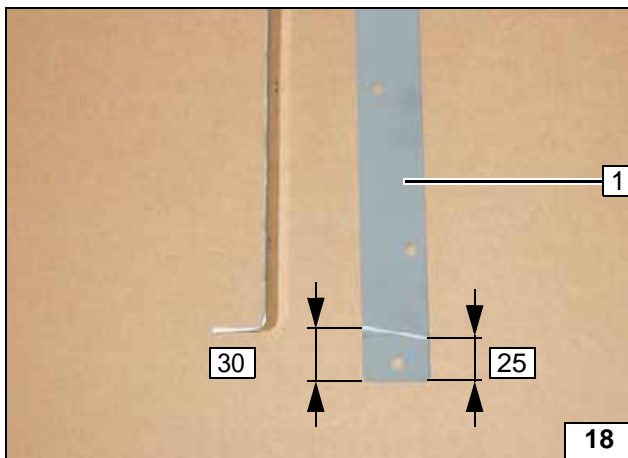

- 1 Angle down strut


Preparing strut

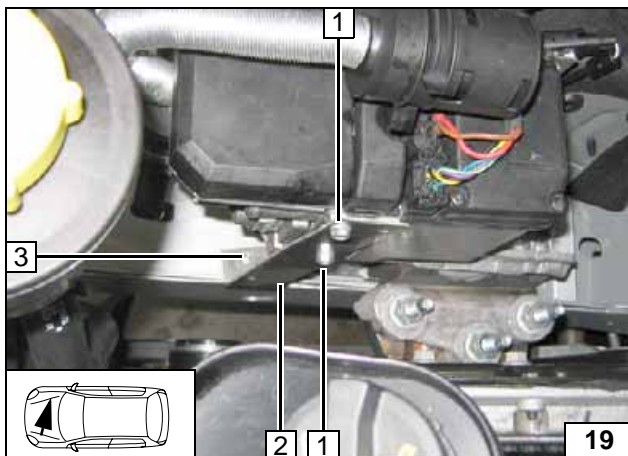

- 1 E-jot screw [2x]
- 2 Strut
- 3 Copy hole pattern



Loosely mounting strut


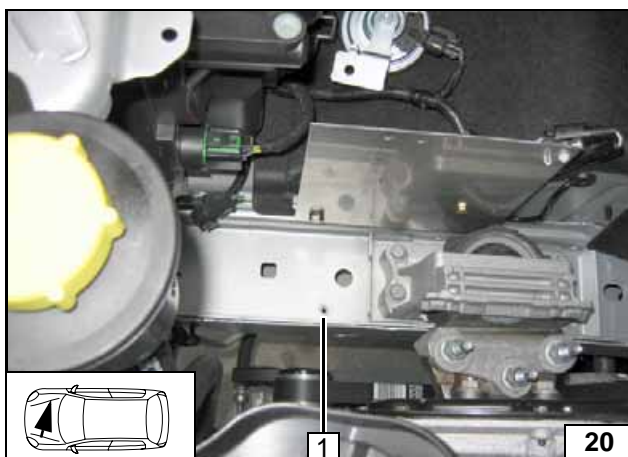


Remove heater unit with strut.

- 1 Drill 9.1 mm dia. hole; install M6 rivet nut



 Installing rivet nut

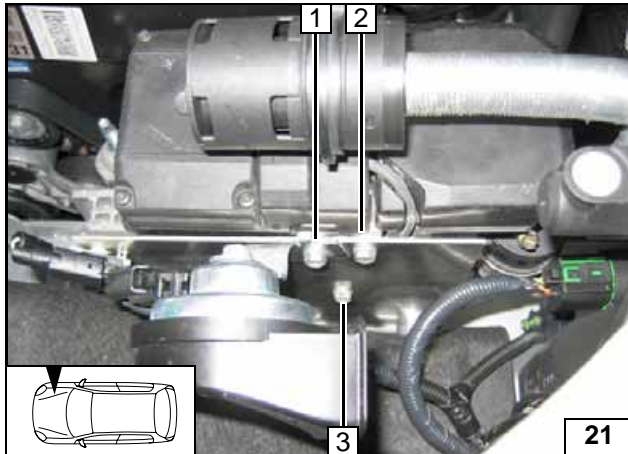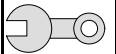


Insert two washers between heater unit and bracket at Position 3.
First install E-jot screw at position 3.

- 1 E-jot screw, horn with bracket
- 2 E-jot screw
- 3 E-jot screw, washer [2x]



Installing heater unit


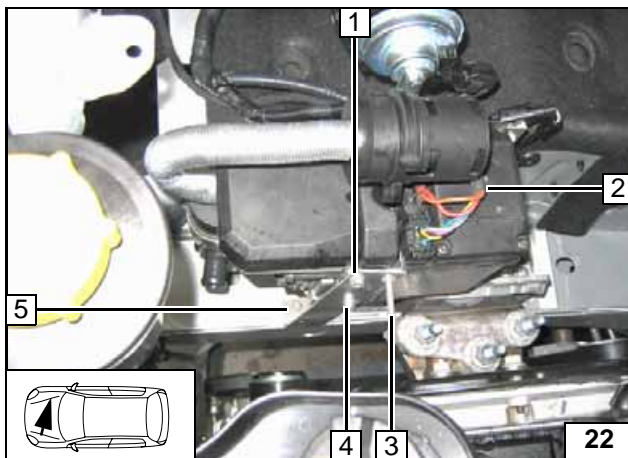


Insert two washers between heater unit and strut at position 4.

- 1 E-jot screw
- 2 Push on wiring harness
- 3 E-jot stud
- 4 E-jot screw, washer [2x]
- 5 M8x50 bolt, spring lockwasher, 30 mm spacer sleeve in rivet nut



 Installing strut

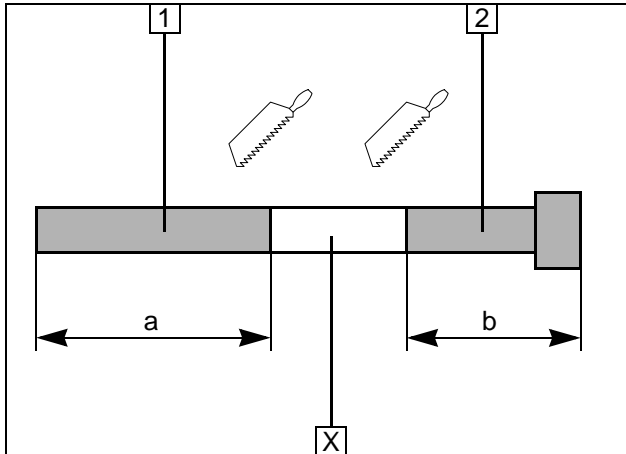


Exhaust system

- 1 Exhaust pipe
a = 520
- 2 Exhaust end section
b = 70


Discard section X

Preparing exhaust pipe

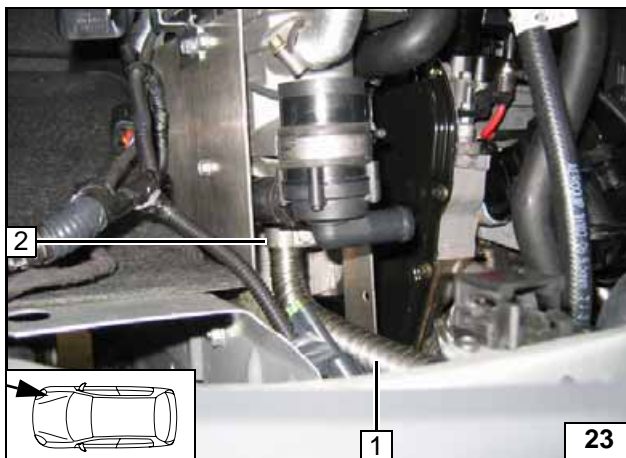


- 1 Exhaust pipe
- 2 Hose clamp

Installing exhaust pipe

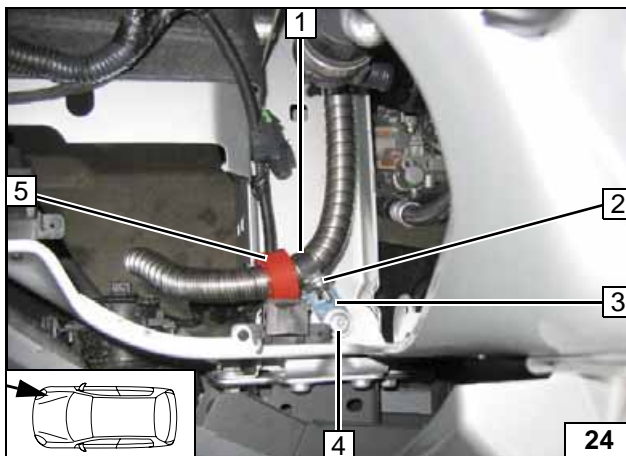



- 1 P-clamp
- 2 M6x20 bolt, flanged nut
- 3 Angle bracket
- 4 Original vehicle bolt
- 5 Push on red (rt) rubber isolator

Routing exhaust pipe

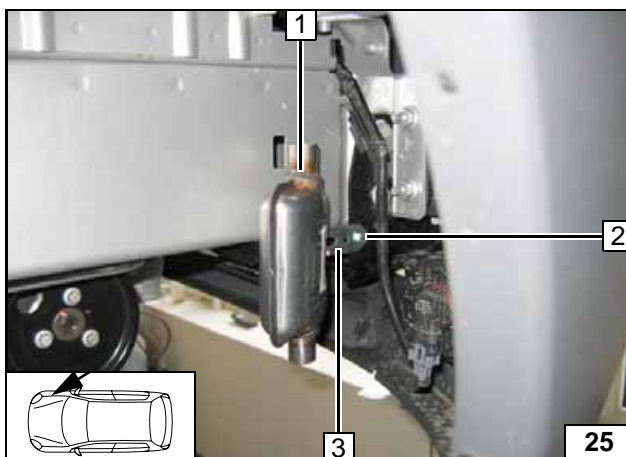


- 1 Muffler, M6x20 bolt, flanged nut on perforated bracket
- 2 Mount M6x20 bolt, flanged nut in existing hole
- 3 Perforated bracket

 Installing muffler

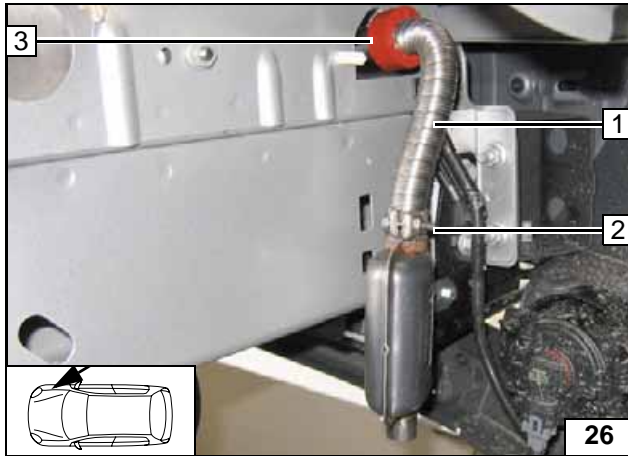


- 1 Exhaust pipe
- 2 Hose clamp
- 3 Position red (rt) rubber isolator

Installing exhaust pipe

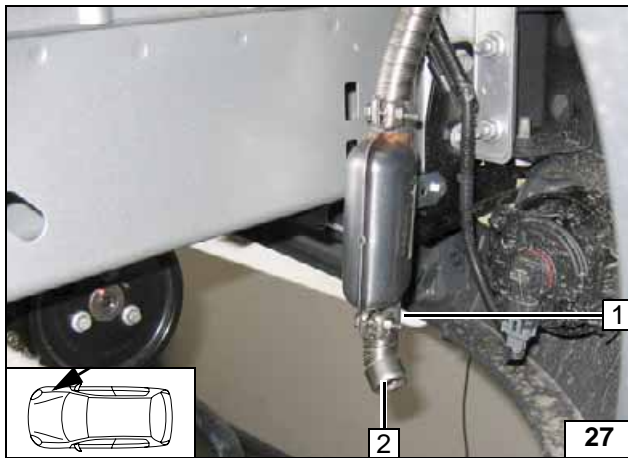

- 1 Hose clamp
- 2 Exhaust end section

 Installing end section




Coolant connection

WARNING!

Tighten all hose clamps to 2.0 + 0.5 Nm.

Any coolant running off should be collected using an appropriate container!


Route coolant hoses kink-free! Unless specified otherwise, always fasten using cable ties. Position hose and spring clips so that no other hose can be damaged! The connection should be "inline" based on the following diagram:

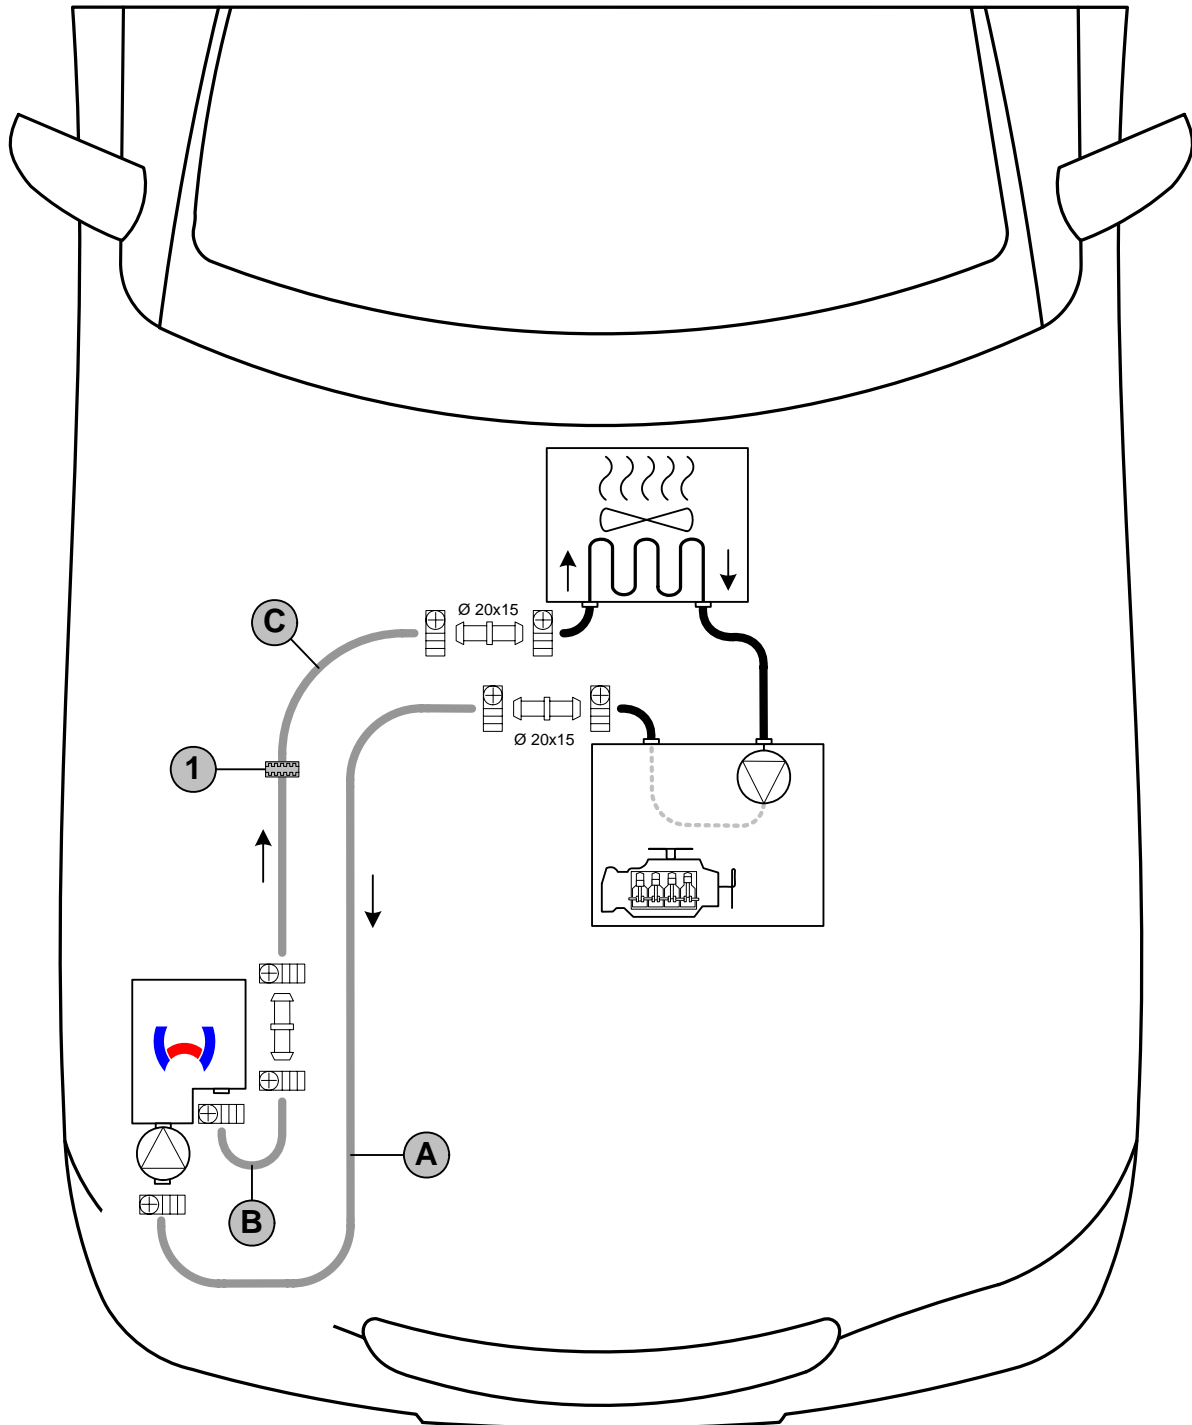

Coolant routing diagram

All connecting pipes without a specific designation (□□□) = dia. 18x20.
 All hose clamps ⊕ ⊞ ⊞ ⊞ = 20-27 mm dia.!
 1 = Black (sw) rubber isolator [⊞⊞⊞⊞]




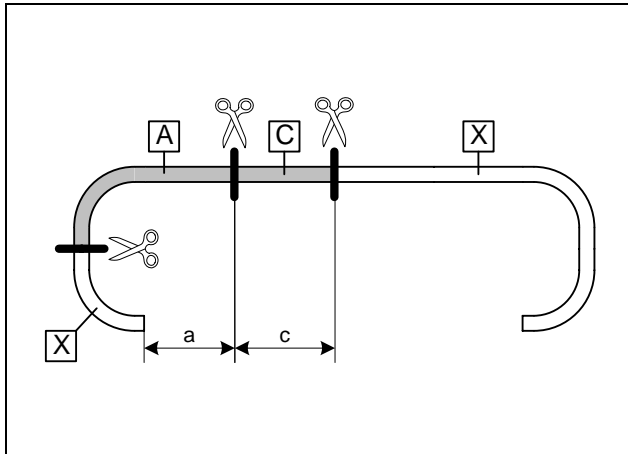

a = 470
c = 400

Discard section **X**


Cutting coolant hoses to length

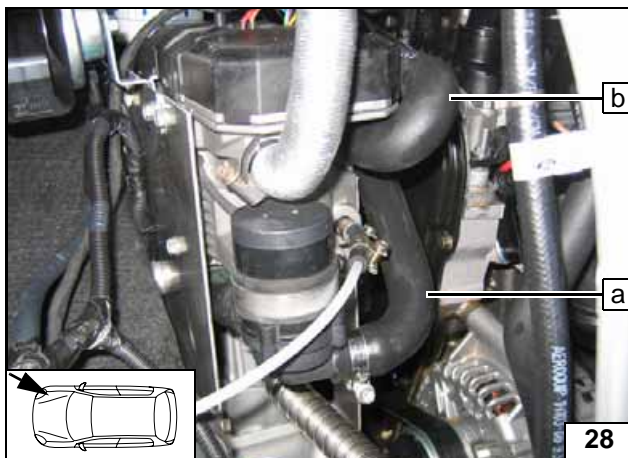

Hose **B** (180° elbow included) with short leg on heater unit outlet.




Connecting heater unit

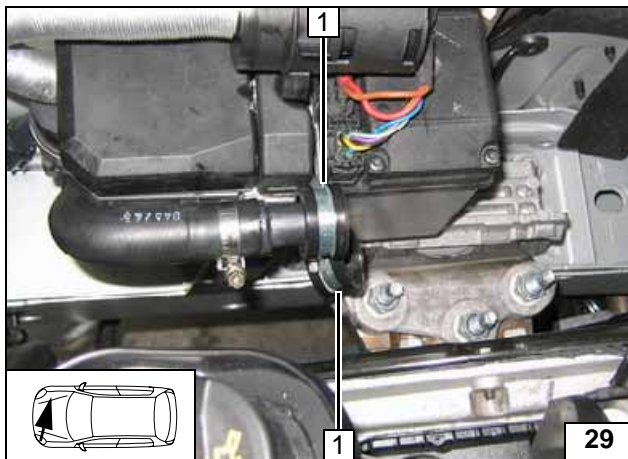

1 Rubber-coated p-clamp [2x], flanged nut on stud bolt

Installing p-clamps

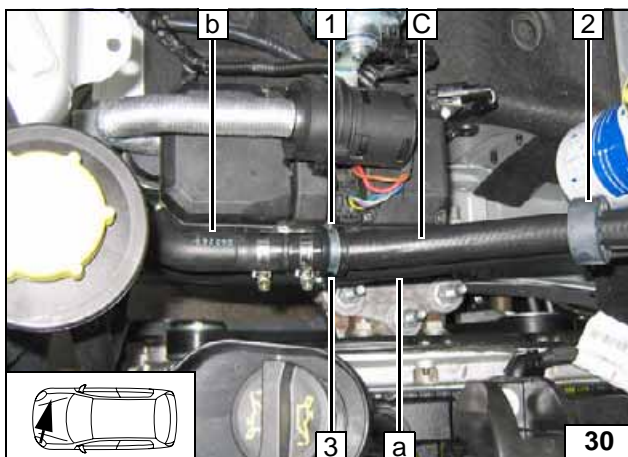

Connect hose **B** and **C**
Route hose **A** through lower p-clamp **3** and hose **C** through upper p-clamp **1**.

2 Black (sw) rubber isolator




Routing in engine compartment



1 Hose on engine outlet/heat exchanger inlet

Cutting point

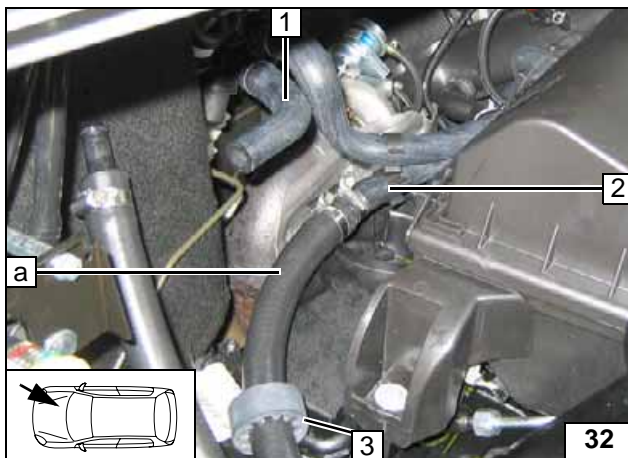


Turn hose section of heat exchanger inlet 1 on connection piece to right.



2 Engine outlet hose section
3 Push on black (sw) rubber isolator and position

Connecting engine outlet

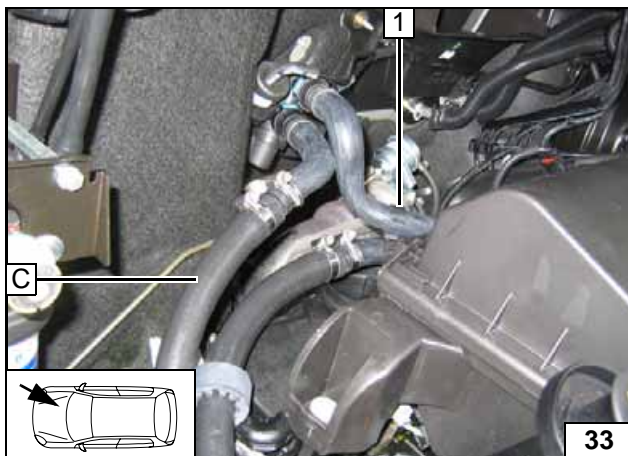


Before connecting, fill the coolant hoses with coolant.



1 Spacer bracket

 Connecting heat exchanger inlet

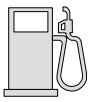

Fuel Connection

CAUTION!


Open the vehicle's fuel tank cap, ventilate the tank and then re-close the tank lock.

Catch any fuel running off with an appropriate container.

Install fuel line and metering-pump wiring harness so that they are protected against stone impact. Unless specified otherwise, always fasten using cable ties. Mount the fuel line and wiring harness with rub protection on sharp edges.


WARNING!

The fuel line and wiring harness are routed to the metering pump in as shown in the wiring harness routing diagram.

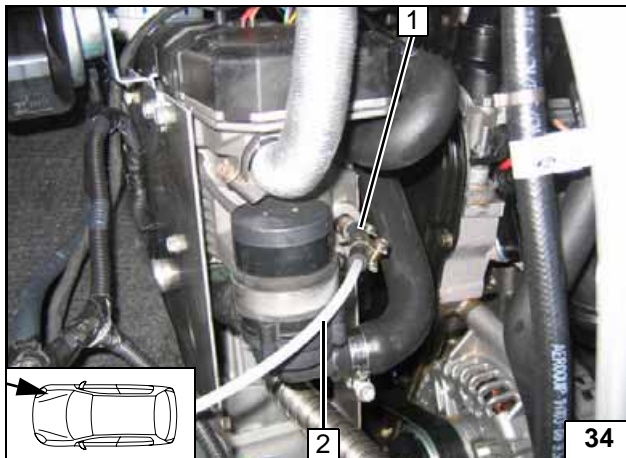


- 1 Hose section, 10 mm dia. hose clamp [2x]
- 2 Fuel line

Connect-
ing heater
unit

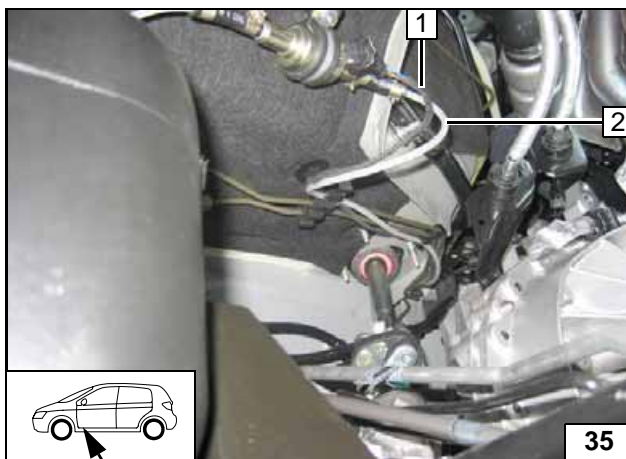

- 1 Metering pump wiring harness
- 2 Fuel line

Installing
lines

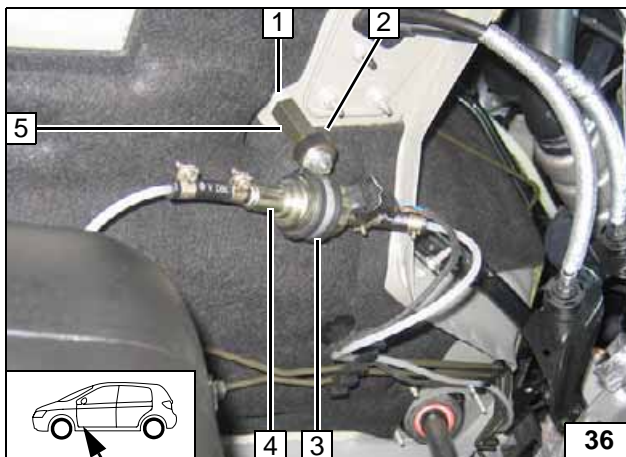


Ensure proper installation position of metering pump 4, see "Installation Instructions".

- 1 Original vehicle stud bolt
- 2 Silent block, flanged nut
- 3 Rubber-coated pipe clamp
- 5 M6x40 spacer nut



Installing
metering
pump

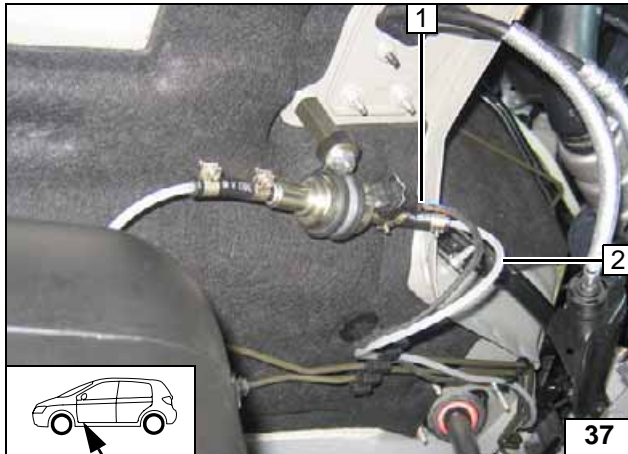


Connect fuel line **2** from heater unit to pressure side of metering pump [side with connector].

- 1 Wiring harness of metering pump, single-wire seal, tab connector, connector housing



Connecting metering pump

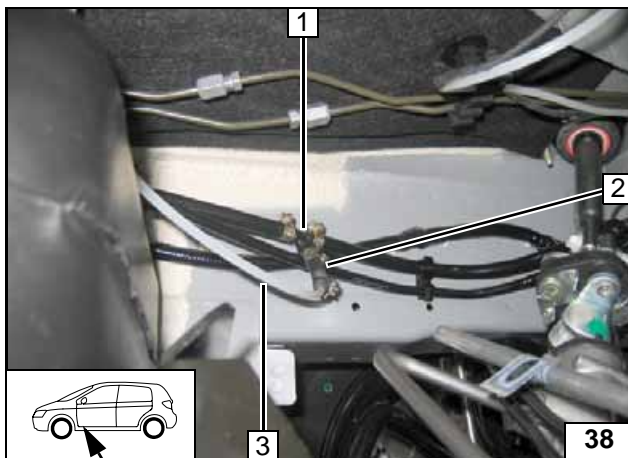


Separate fuel supply line at position 1.

- 1 Fuel standpipe, 12 mm dia. hose clamps [2x]
- 2 Hose section, 10 mm dia. hose clamp [2x]
- 3 Fuel line



Removing fuel

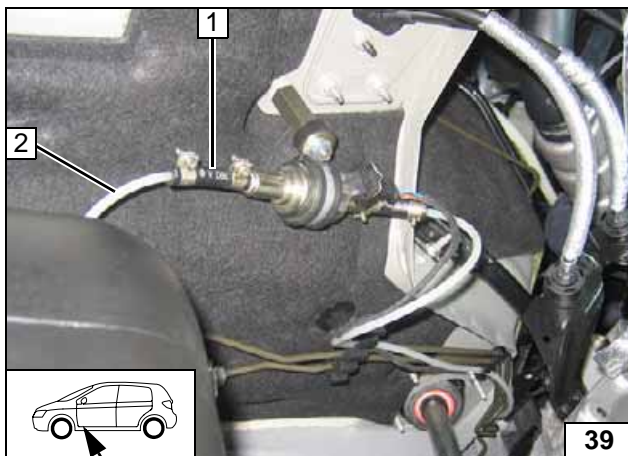


Fuel line **2** from fuel standpipe on intake side of metering pump [side without connector]. Check position of components; adjust if necessary. Check that they have free clearance.

- 1 Hose section, 10 mm dia. hose clamp [2x]



 Connecting metering pump



Final Work

WARNING!

Mount removed parts in reverse order.

Check all hoses, clamps and all electrical connections for firm seating.

Secure all loose cables using cable ties.

Only use manufacturer-approved coolant.

Spray heater unit components with anti-corrosion wax (Tectyl 100K, Order No. 111329).

- Connect the battery.
- Fill and bleed the coolant circuit according to the vehicle manufacturer's specifications.
- Set the digital timer.
- Make settings on A/C control panel according to the "Operating Instructions for End Customer".
- Check the proper operation of the additional heater, see the operating instructions/installation instructions.
- Attach the "Switch off additional heater before refueling" sticker to the left-hand B-pillar.



Webasto AG
Postfach 80 - 82132 Stockdorf
Hotline 01805 / 932278 - Hotfax 0395 / 5592-353
<http://www.webasto.de>

Operating Instructions for End Customer


Please remove page and add to the vehicle operating instructions.



When operating over short distances, it is recommended that additional electrical consumers not be used!

Rule of thumb for operating additional heater: driving time = heating time!

Before parking the vehicle, make the following settings:

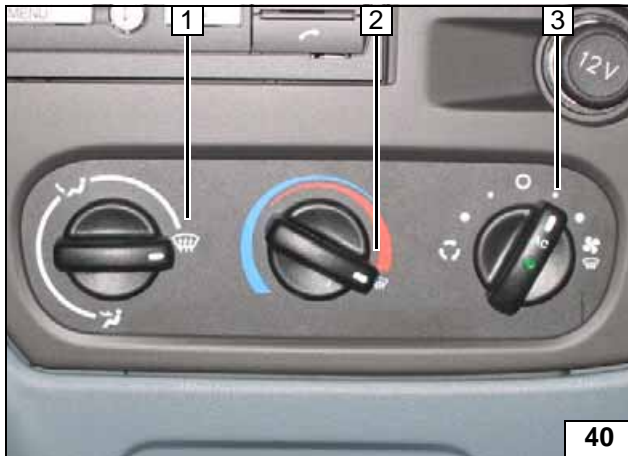

- 1 Air outlet to windshield
- 2 Set temperature to "max."
- 3 Set fan to level "1"

Manual air conditioning