

Water Heater



Thermo Top E Parking Heater


00 0003

Thermo Top C Parking Heater


00 0002

Thermo Top P Parking Heater


00 0104

Installation documentation

Skoda Octavia

1.2 and 1.4 TSI

from Model Year 2009

Left-hand drive vehicle

Manual transmission



WARNING!

Hazard warning:

Incorrect installation or repair of Webasto heating systems may cause a fire or result in the emission of carbon monoxide, which can be fatal. Serious or fatal injuries can be caused as a result.



Specialist company training, technical documentation, specialised tools and equipment are required to install and repair Webasto heating and cooling systems. Only original Webasto parts must be used. For this, also see the catalog of air and water heater accessories from Webasto.

NEVER attempt to install or repair Webasto heating or cooling systems if you have not successfully completed the company training and thereby acquired the required technical skills, or if you do not have access to the required technical documentation, tools and equipment needed to carry out correct installation and repairs.

ALWAYS follow all Webasto installation and repair instructions and observe all warnings.

The initial startup is to be executed with the Webasto Thermo Test Diagnosis.

Webasto does not accept any liability for defects and damage that are attributable to installation by untrained staff.

Table of Contents

Validity	2	Premounting heater	13
Heater / Installation Kit	3	Preparing installation location	14
Foreword	3	Installing heater	15
General Instructions	3	Fuel Connection	16
Special Tools	3	Coolant circuit	19
Explanatory Notes on Document	4	1.2 TSI	20
Preliminary Work	5	1.4 TSI	22
Heater installation location	5	Exhaust gas	26
Electrical system	6	Final Work	27
Fuse holder and K3 relay	7	Operating Instructions for End Customer	28
Climatic fan controller	8		
Climatronic fan controller	9		
Digital timer	12		
Remote option Telestart	12		

Validity

Manufacturer	Model	Type	EG-BE No./ABE
Skoda	Octavia	1Z	e11 * 2001/116 * 0230 * ...

Engine type	Engine model	Output in kW	Displacement in cm ³
CBZB	Petrol TSI	77	1197
CAXA	Petrol TSI	90	1390

Vehicle and engine types, equipment variants and national specifications not listed in these installation instructions have not been tested. However, installation according to this installation documentation may be possible.

The installation location of a digital timer and summer/winter switch should be confirmed with the end customer before installation.

Heater / Installation Kit

Quantity	Description	Order No.:
1	Retail accessories <i>Thermo Top E / C / P</i>	See Price list
1	Installation Kit Skoda Octavia 2009 1.2 and 1.4 TSI manual transmission	1314750B
1	Heater control	See Price list

Also required with Climatronic

Quantity	Description	Order No.:
1	Climatronic kit	9013645A

Heater recommended for the respective vehicle class:

Vehicle	Heater
Compact car	Thermo Top E
Mid-size car, estate car	Thermo Top C
Full-size car, van, Offroader	Thermo Top P

The selection of the heater is based on the passenger compartment size of the vehicle and the level of comfort required by the customer!



Foreword

This installation documentation applies to Skoda Octavia vehicles 1.2 and 1.4 TSI - for validity, see page 2 - from model year 2009 and later, assuming technical modifications to the vehicle do not affect installation, any liability claims excluded. Depending on the vehicle version and equipment, modifications may be necessary during installation with respect to this installation documentation.

However, the stipulations in this "installation documentation" and the "operating and maintenance instructions" for the *Thermo Top C/E /P* must always be observed.

The corresponding rules of technology and any information from the vehicle manufacturer should be observed during the installation work.

General Instructions

Installation should be carried out according to the general, standard rules of technology. Unless specified otherwise, fasten hoses, lines and wiring harnesses to original vehicle lines and wiring harnesses using cable ties.

Sharp edges should be fitted with rub protection (split-open plastic hose).

Spray unfinished body areas, e.g. drilled holes, with anti-corrosion wax (Tectyl 100K, Order No. 111329).


Special Tools

- Torque wrench for 2.0 - 10 Nm
- Hose clamping pliers
- Unlocking tool


Explanatory Notes on Document

To provide you with a quick overview of the individual working steps, you will find an identification mark on the outside top right corner of the page in question.


Mechanical system

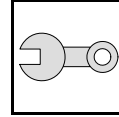


Electrical system

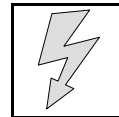


Coolant circuit

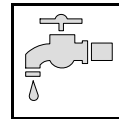


Fuel

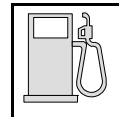

Exhaust gas

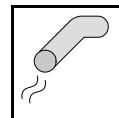

Combustion air

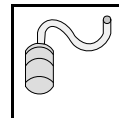

Special features are highlighted using the following symbols:



Specific risk of injury or fatal accidents.



Specific risk of damage to components.




Specific risk of fire or explosion.



Reference to general installation instructions of Webasto components or to the manufacturer's vehicle-specific documents.



Reference to a special technical feature.

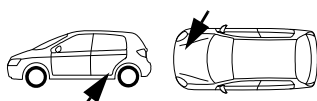

The arrow in the vehicle icon indicates the position on the vehicle and the viewing angle.

All dimensions are in mm!

Tightening torque of hose clamps = 2.0 + 0.5 Nm!


Tightening torque of Ejoy screws, Ejoy studs = 10 Nm!

Preliminary Work

Warning!

- Open the fuel tank cap, ventilate the tank.
- Close the fuel tank cap again.
- Depressurise the cooling system.
- Copy the factory number from the original type label to the duplicate type label.
- Remove years that do not apply from the duplicate label.
- Attach the duplicate label (type label) in the appropriate place.
- Disconnect the battery "earth" or "ground" connection.
- Remove the battery
- Remove the battery carrier
- Remove the air cleaner housing.
- Remove the windscreen wiper.
- Remove the coolant reservoir cap.
- Remove the resonator.
- Remove the left-hand headlight.
- Remove the left front wheel
- Remove the front section of the left front wheel well trim
- Remove the underride protection
- Remove the right-hand underbody trim
- Remove the rear bench seat
- Open the tank-fitting service lid.
- Remove the footwell trim on the driver's side
- Remove the lower instrument panel trim on the driver's side
- Remove the footwell trim on the driver's side (Only with Climatronic).

Remove page 28 "Operating Instructions for End Customer" and add to the vehicle operating instructions.

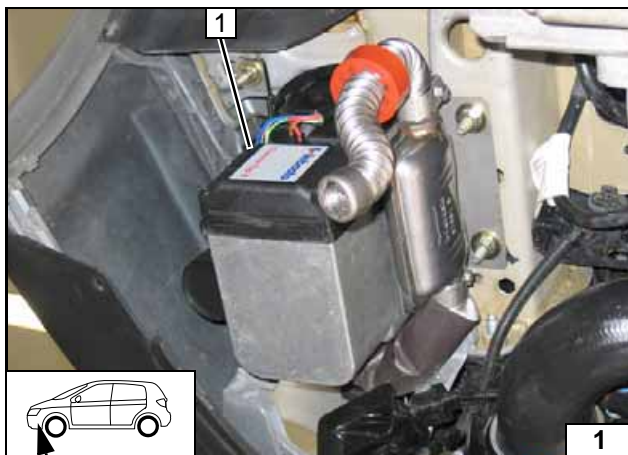

Heater installation location

1 Heater

Installation location






Electrical system

Wiring harness routing


Route excess lengths from wiring harness of heater 1 in cable duct below battery and secure with cable ties.

Wiring harness pass through in engine compartment

- 1 Original vehicle wiring harness pass through
- 2 Wiring harnesses for fan controller and heater control

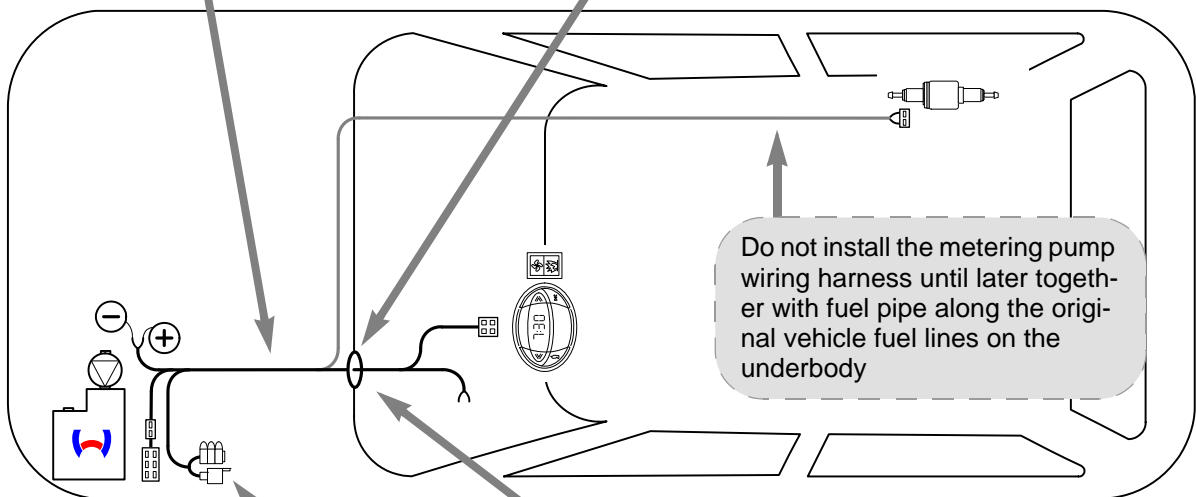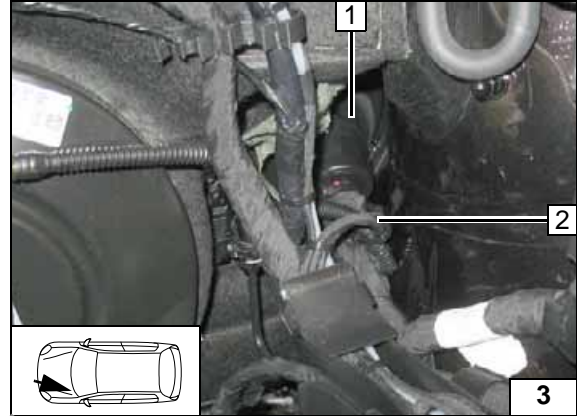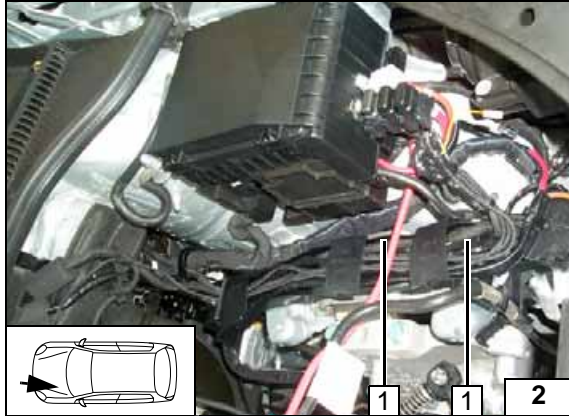


Wiring harness routing diagram

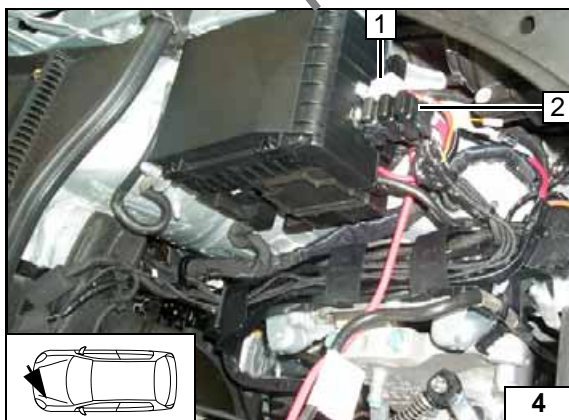


Fuse holder, K3 relay

Description of installation for K3 relay 1 and fuse carrier 2 on Page 7

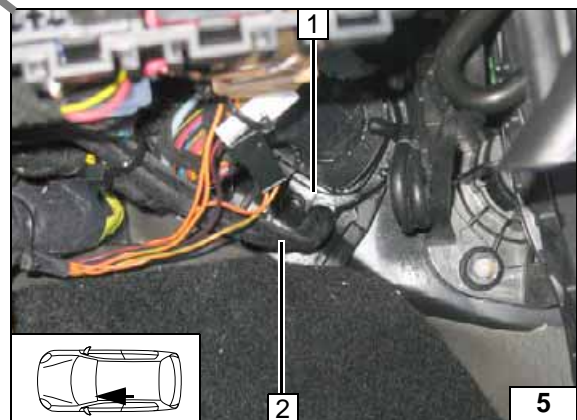

Wiring harness pass through of passenger compartment

- 1 Original vehicle wiring harness pass through
- 2 Wiring harnesses for fan controller and heater control

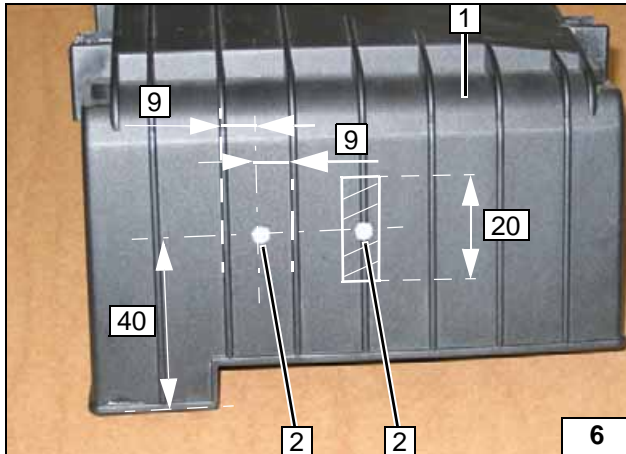


Fuse holder and K3 relay

Cut away bar in shaded area.

- 1 Cover of fuse/relay carrier in engine compartment
- 2 5.0 mm dia. hole [2x]




Holes for fuse holder and K3 relay

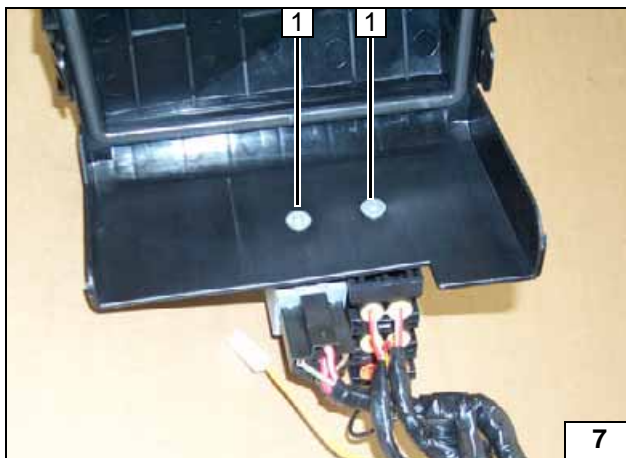

- 1 M5x12 countersunk head screw [2x]

Installing fuse holder and K3 relay

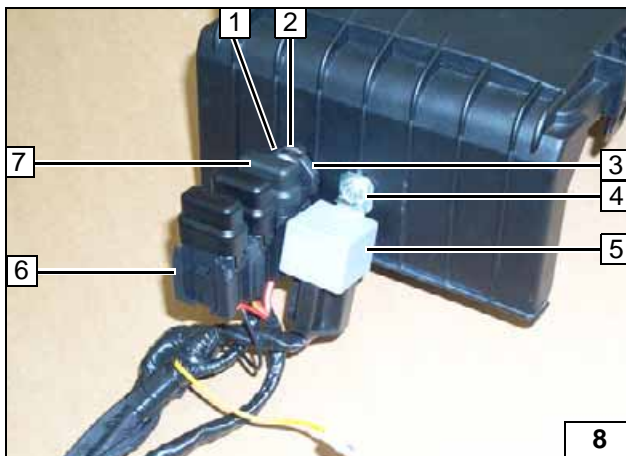


On vehicles with Climatronic, replace 25 A fuse F3 7 with provided 5A fuse.

- 1 M5 flanged nut
- 2 Large diameter washer (between cover and retaining plate)
- 3 Retaining plate
- 4 M5 flanged nut
- 5 K3 relay
- 6 Fuse holder



Installing fuse holder and K3 relay

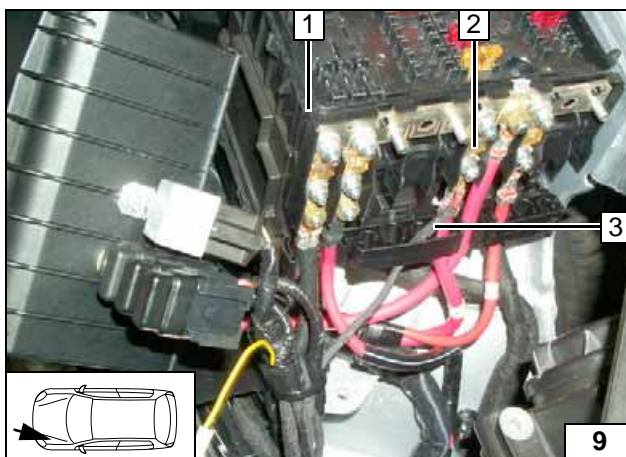

Route brown (br) earth wire to original vehicle earth support point below headlight and connect.


- 1 Fuse/relay carrier
- 2 Original main vehicle fuse
- 3 Red (rt) positive wire



Connecting positive and earth wire




Climatic fan controller

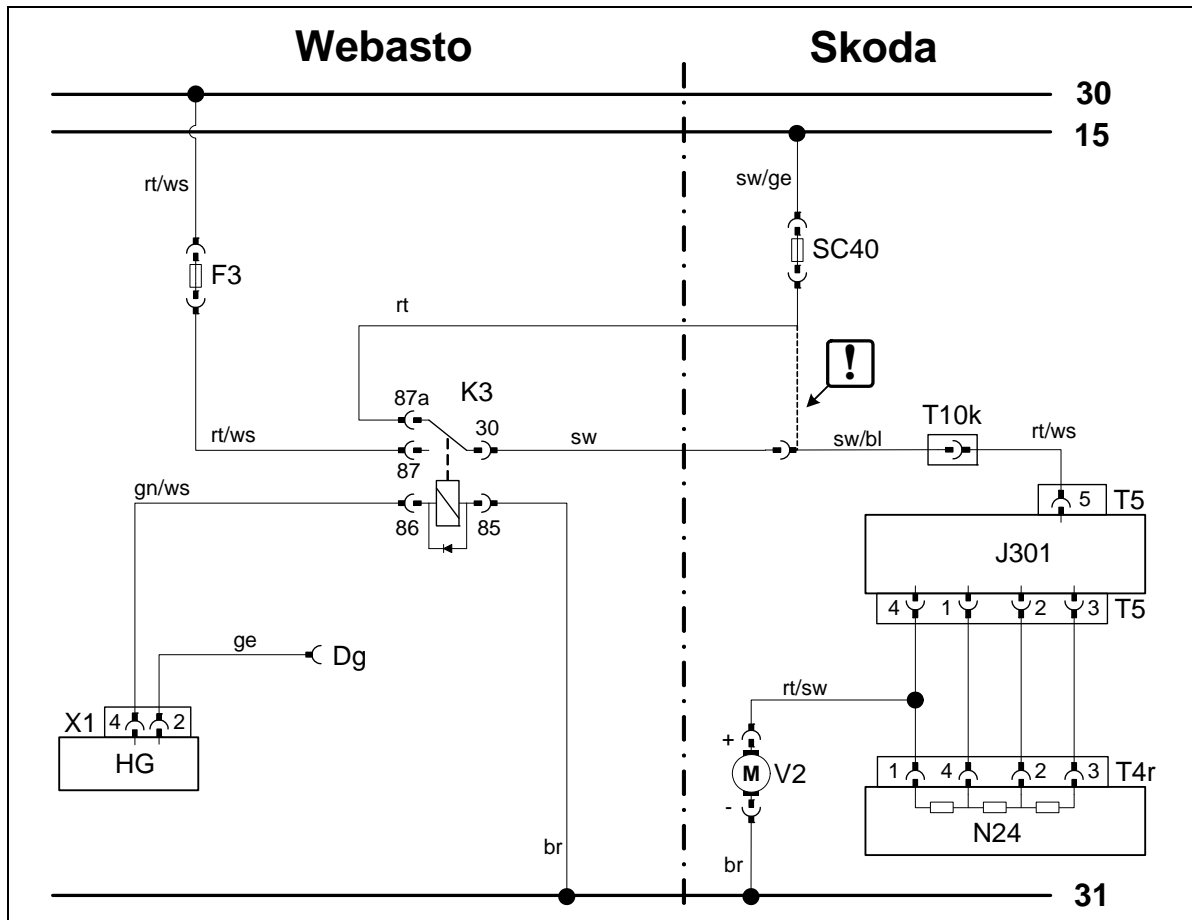

Climatic wiring diagram

Webasto components		Vehicle components		Colours and symbols	
HG	Heater TT-C/E/P	SC40	40 A fan fuse	rt	red
X1	6-pin heater connector	J301	Control unit of air conditioning	ws	white
F3	25 A fuse F3	N24	Resistor group	sw	black
K3	Fan relay	V2	Fan motor	br	brown
Dg	Diagnosis connection			gn	green
				ge	yellow
				bl	blue
				Detach wire end from SC40.	
				Wiring colours may vary.	

Legend

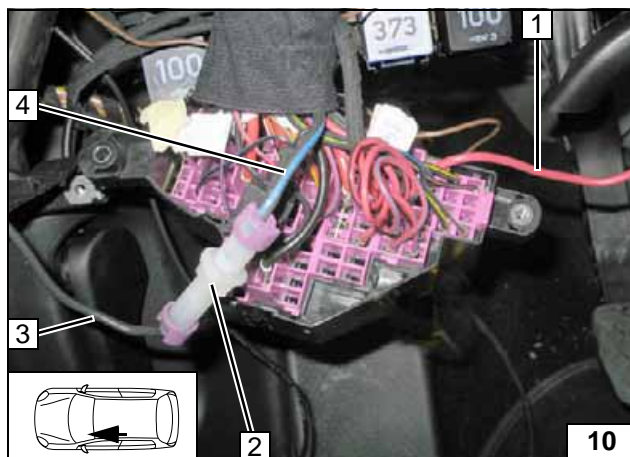

Connection on original vehicle fuse carrier (instrument panel at upper left). Detach black/blue (sw/bl) 4² wire 4 on fuse output SC40. Produce connection as shown in wiring diagram.


- 1 Red (rt) wire of K3/87a engaged in fuse output SC40
- 2 AMP housing
- 3 Black (sw) wire to K3/30



Fan controller




Climatronic fan controller

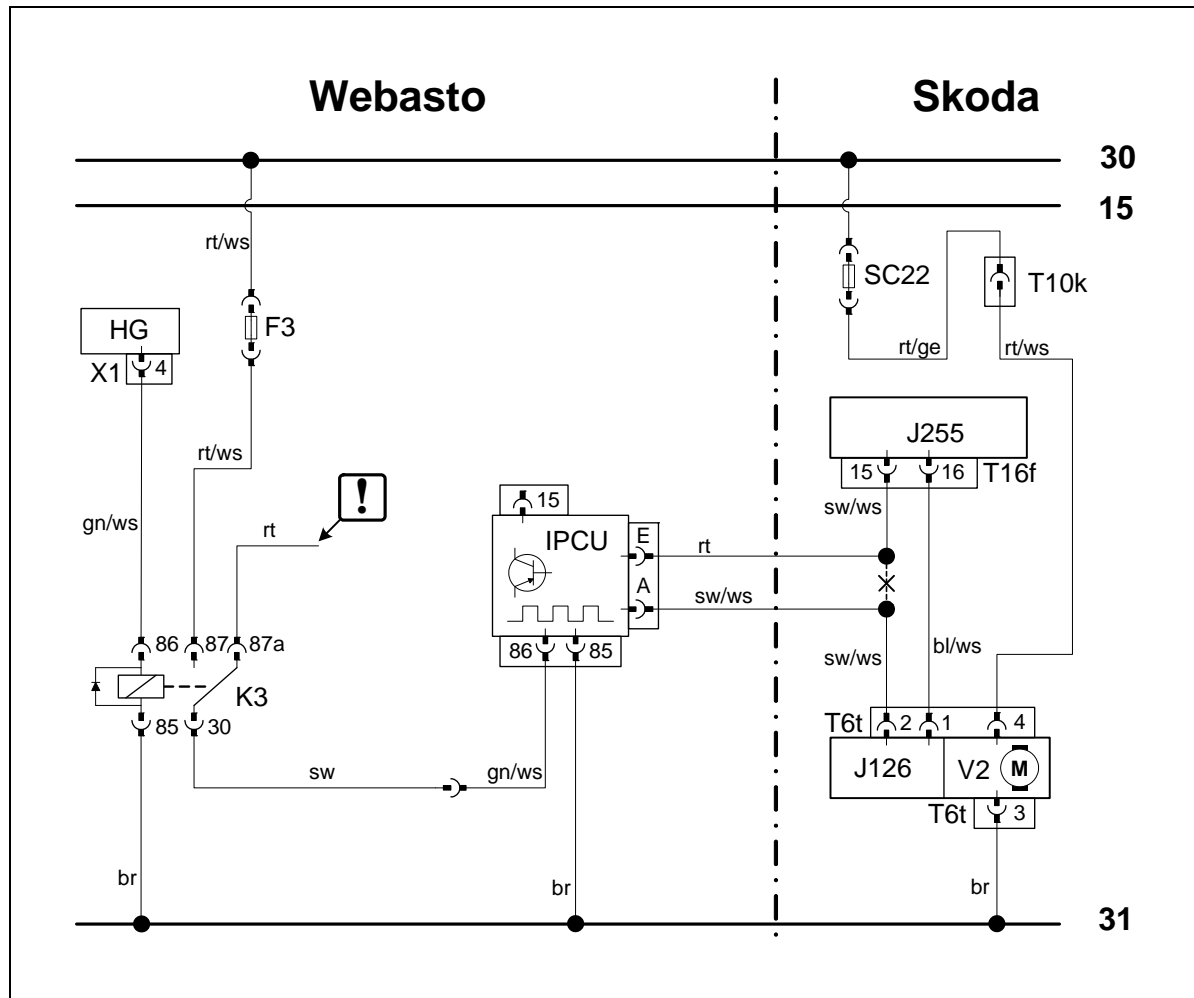

Climatronic wiring diagram

Webasto components		Vehicle components		Colours and symbols	
HG	Heater TT-C/E/P	SC22	40 A fan-fuse	rt	red
X1	6-pin heater connector	J255	Climatronic control unit	ws	white
F3	Replace 25 A fuse F3 with 5A fuse.	V2	Fan motor	sw	black
K3	Fan relay	J126	Fan control unit	br	brown
IPCU	Pulse width modulator			gn	green
				ge	yellow
				bl	blue
				X	Cutting point
				!	Insulate wire ends and tie back
					Wiring colours may vary.

Legend

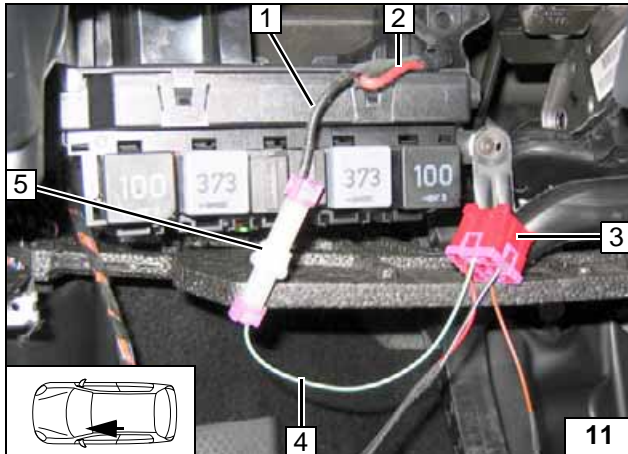


Produce connections as shown in wiring diagram. Insulate red (rt) wire 2 from K3/87a and tie back.

- 1 Black (sw) wire to K3/30
- 3 Socket of IPCU module
- 4 Green/white (gn/ws) wire of IPCU/86
- 5 AMP connector



Preparing IPCU

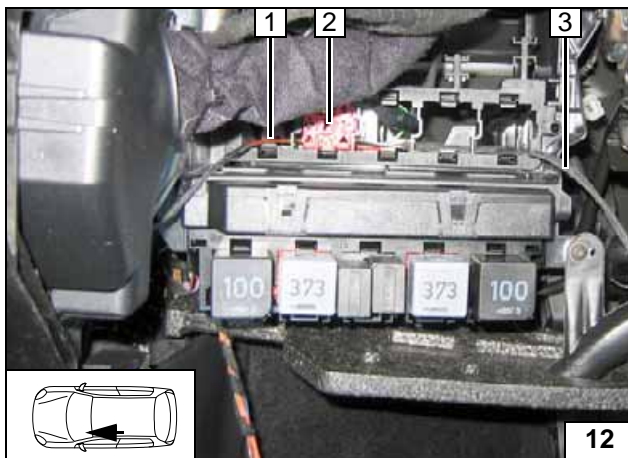


Position of free socket dependent on vehicle equipment.

- 1 Brown (br) wire of IPCU/85
- 2 Socket for IPCU module mounted
- 3 IPCU wiring harness




Preparing IPCU

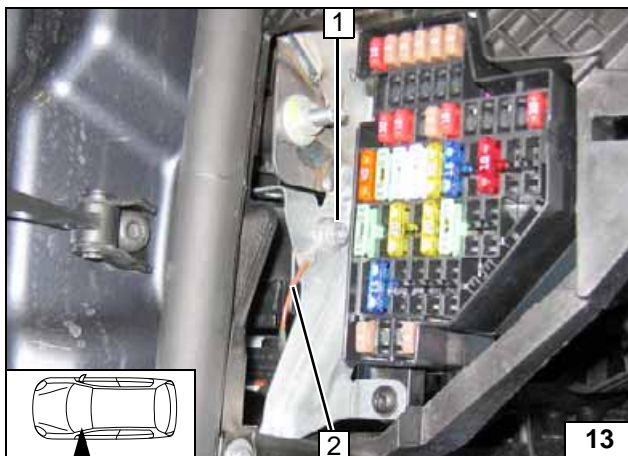

- 1 Original vehicle bolt
- 2 Brown (br) wire of IPCU/85

Earth connection of IPCU


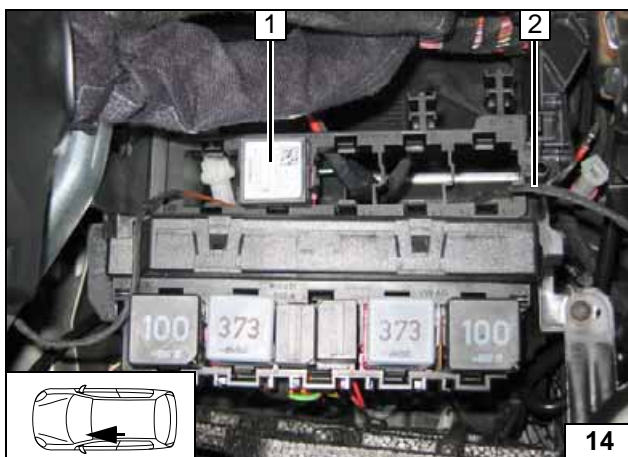


Route wiring harness from IPCU module 2 along air duct to centre console.

- 1 Connect IPCU



Routing wiring harness

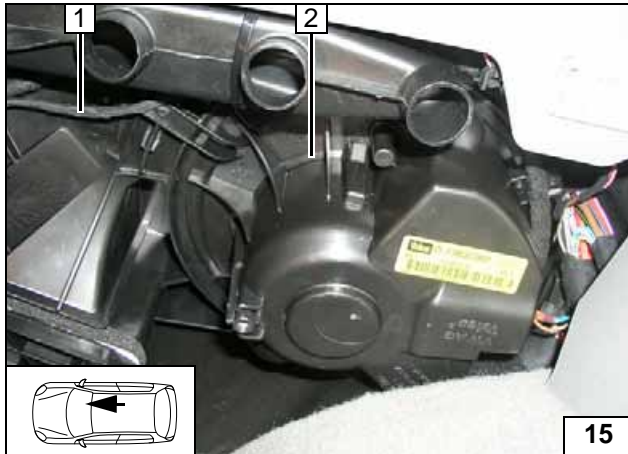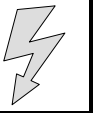


Route wiring harness from IPCU module along original vehicle wires to fan unit.

- 1 IPCU wiring harness
- 2 Fan unit



Detaching fan unit

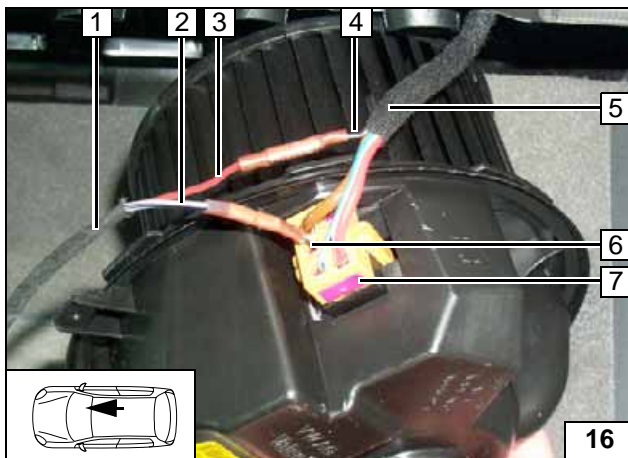


Disconnect fan unit. Produce connections as shown in wiring diagram.

- 1 IPCU wiring harness
- 2 Black/white (sw/ws) wire of IPCU/A
- 3 Red (rt) wire of IPCU/E
- 4 Black/white (sw/ws) wire of Climatronic control unit
- 5 Original vehicle wiring harness
- 6 Black/white (sw/ws) wire of connector T6t/2
- 7 Connector T6t



Connection to fan unit


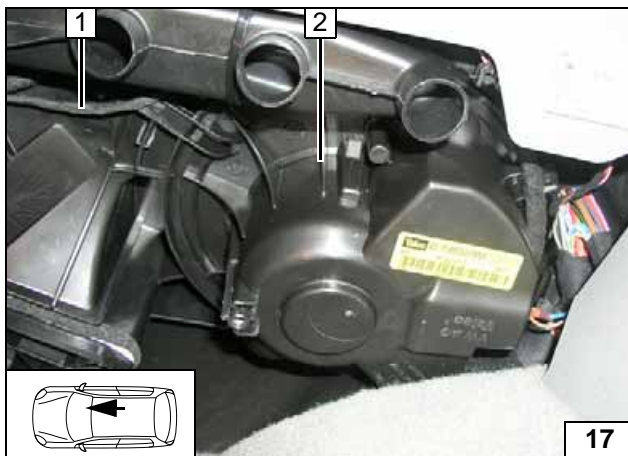


Reinstall fan unit 2.

- 1 IPCU wiring harness



Installing fan unit

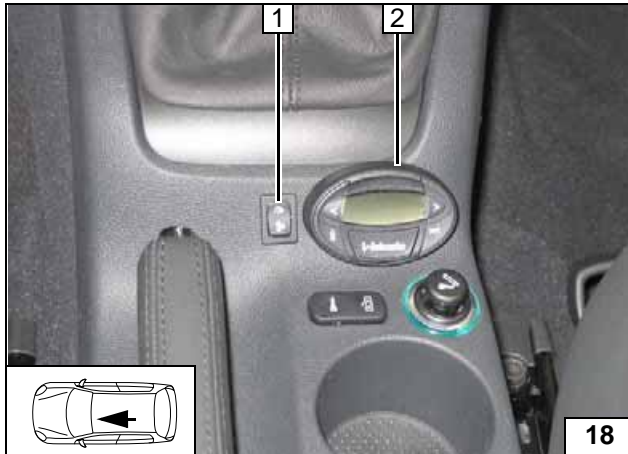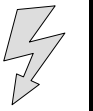


Digital timer

- 1 Summer/winter switch
- 2 Digital timer



Installing digital timer

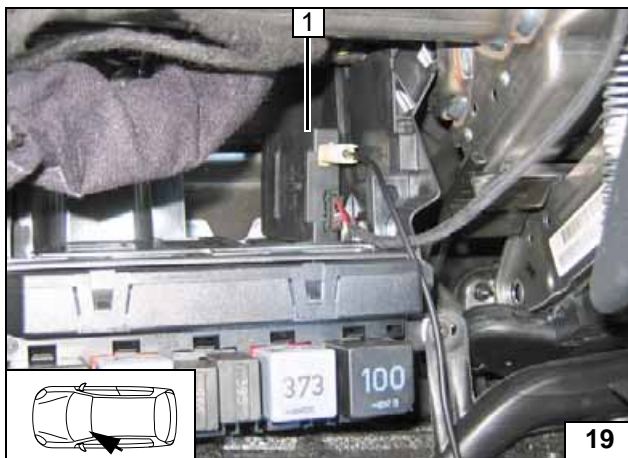


Remote option Telestart

Fasten receiver 1 with double-sided adhesive tape.



Installing receiver

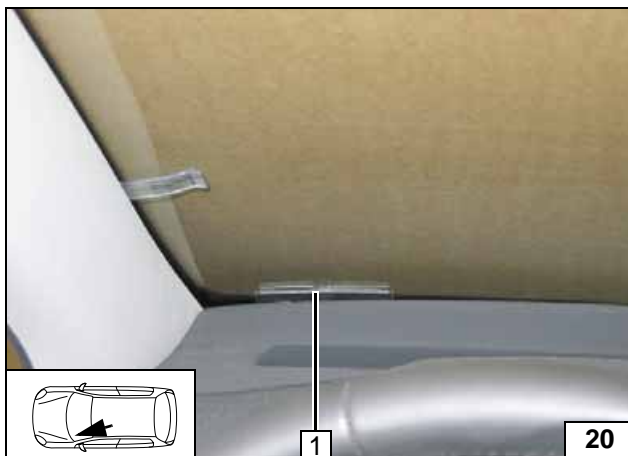

- 1 Antenna

Gluing on antenna





Temperature sensor T100 HTM

Fasten temperature sensor 1 with double-sided adhesive tape.



Installing temperature sensor

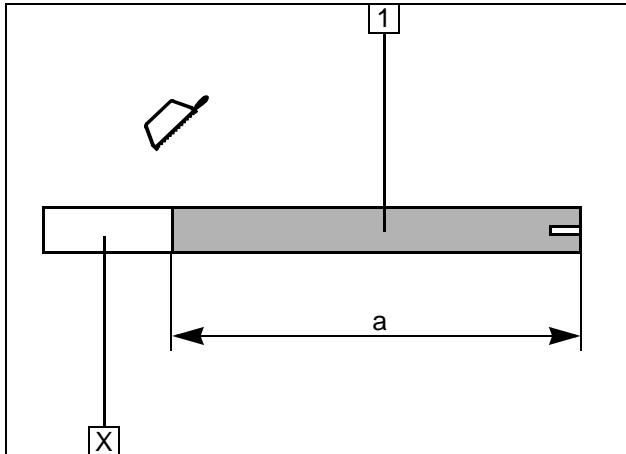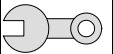


Premounting heater

- 1 Combustion air pipe
a = 250

Discard section X

Cutting combustion air pipe to length

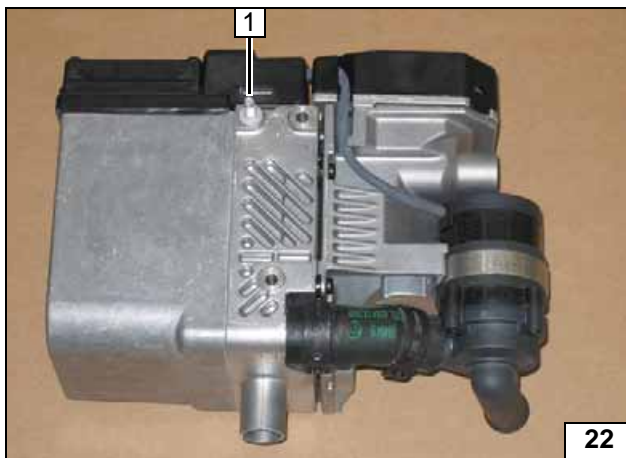


Ejot stud, tightening torque 10 Nm.

- 1 Ejot stud



Premounting heater

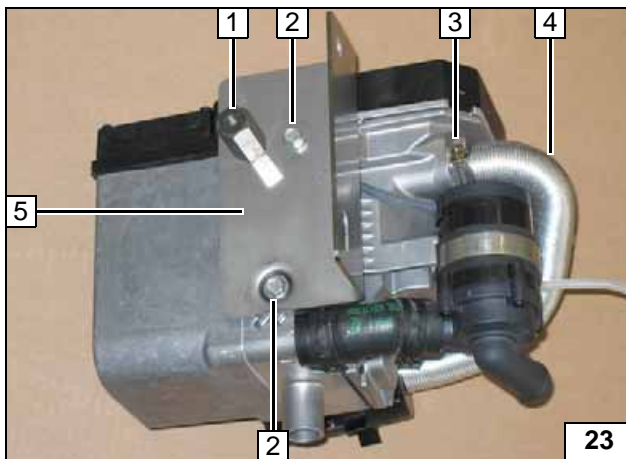


Insert one plain washer each between heater and bracket at positions 2

- 1 M6x30 spacer nut
- 2 Washer, E-jot screw [2x]
- 3 27 mm dia. clamp
- 4 Prepared combustion air pipe (slotted side on heater)
- 5 Bracket





Premounting heater

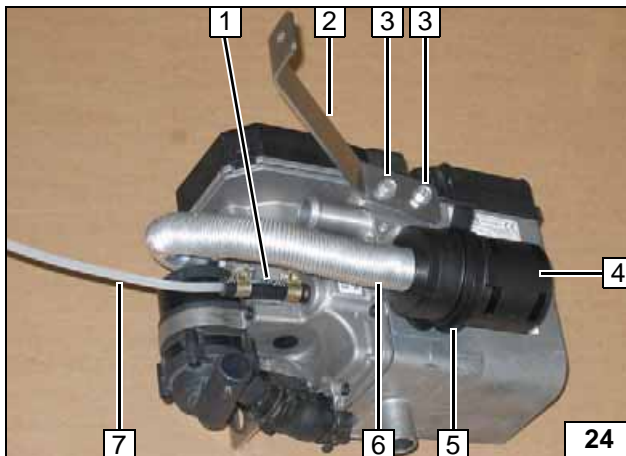

- 1 Hose section, 10 mm dia. clamp [2x]
- 2 Strut
- 3 E-jot screw [2x]
- 4 Combustion-air intake silencer
- 5 Retaining clip in hole of heater
- 6 Combustion air pipe
- 7 Fuel line

Premounting heater

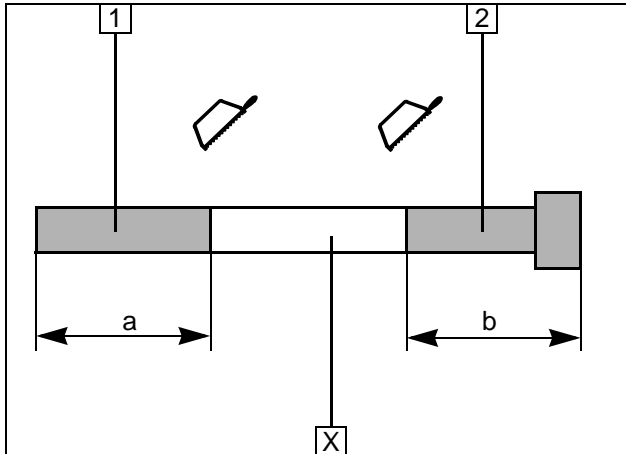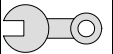


- 1 Exhaust pipe
a = 190
- 2 Exhaust end section
b = 240

Discard section X




**Cutting ex-
haust pipe
to length**

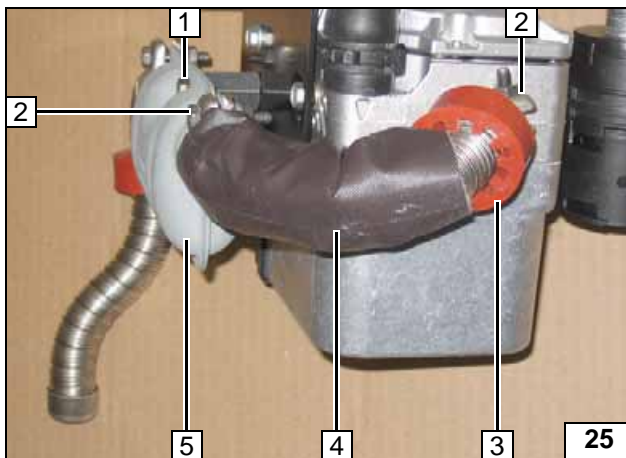


- 1 M6x16 bolt, spring lockwasher
- 2 Hose clamp [2x]
- 3 Red (rt) rubber isolator, without groove
- 4 Exhaust pipe with insulation
- 5 Silencer

**Premount-
ing ex-
haust
system**

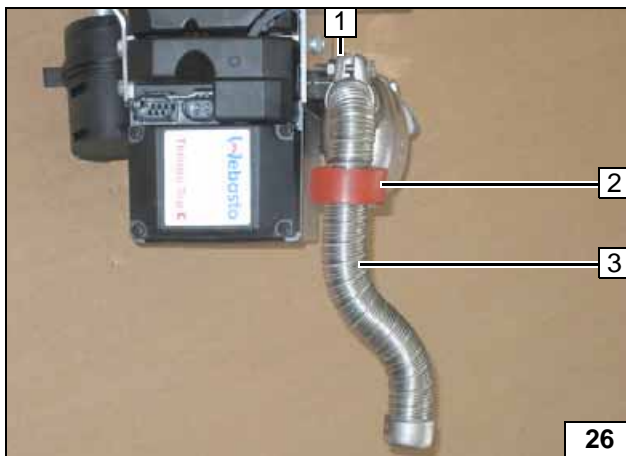

- 1 Hose clamp
- 2 Red (rt) rubber isolator, without groove
- 3 Exhaust end section

**Premount-
ing ex-
haust
system**

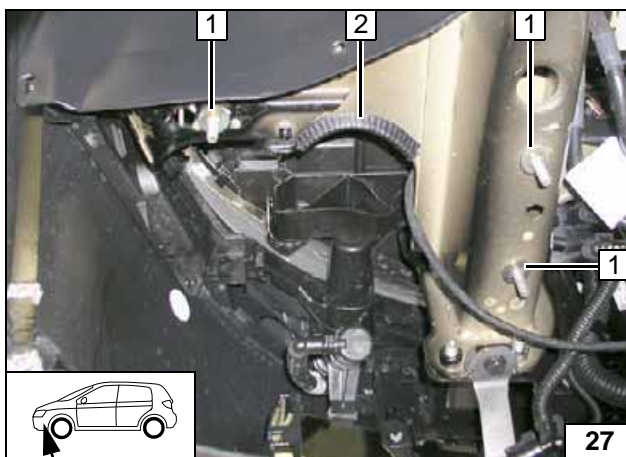



Preparing installation location

Secure large diameter washer against falling with putty etc.

- 1 Large diameter washer on original vehicle stud bolt [3x]
- 2 Edge protection section



**Preparing installa-
tion loca-
tion**

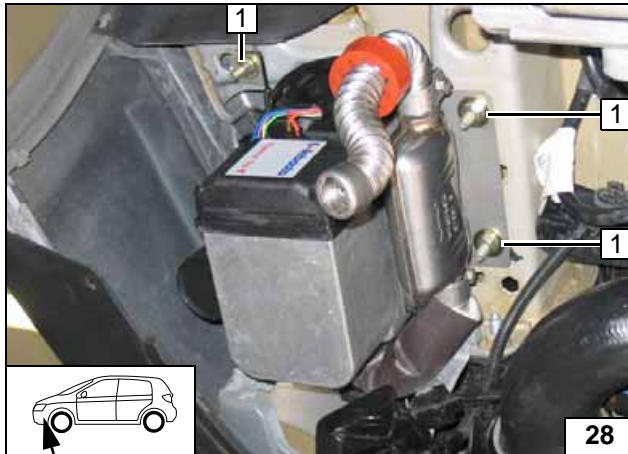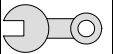


Installing heater

- 1 Large diameter washer, flanged nut M8 [3x]



Installing heater

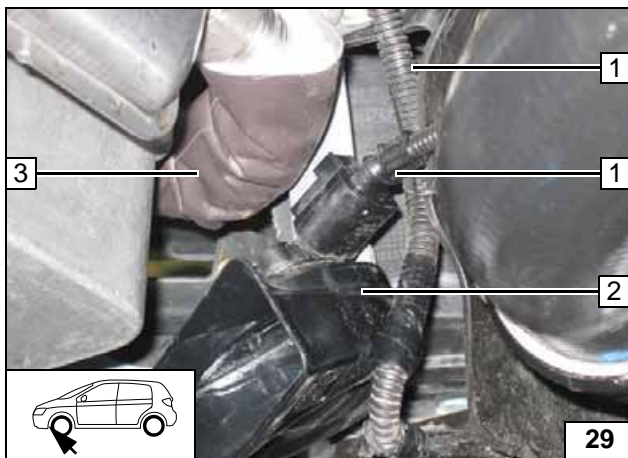


Ensure freedom of movement of exhaust system relative to original vehicle component and lines.

- 1 Original vehicle wiring harnesses (secured with cable ties)
- 2 Horn
- 3 Exhaust pipe



Aligning exhaust system

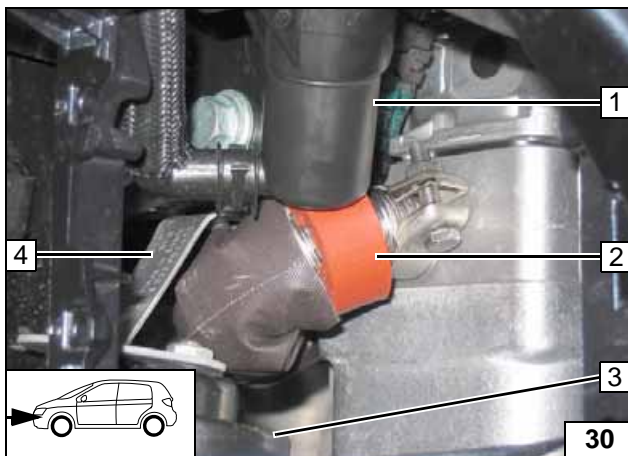


Ensure freedom of movement of exhaust system relative to original vehicle component and lines.
Position rubber isolator 2.

- 1 Headlight washer system
- 3 Horn
- 4 Horn bracket



Aligning exhaust system

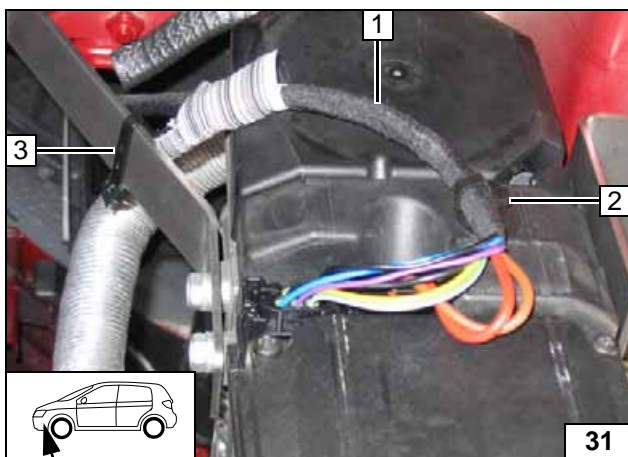

Watch routing of wiring harness. Danger of rubbing!

- 1 Wiring harness of heater
- 2 Clip cable tie in pre-perforated hole of heater cover
- 3 Cable tie



Mounting and routing wiring harness



Fuel Connection

CAUTION!


Open the vehicle's fuel tank cap, ventilate the tank and then re-close the tank lock.

Catch any fuel running off with an appropriate container.

Install fuel line and metering-pump wiring harness so that they are protected against stone impact. Unless specified otherwise, always fasten using cable ties. Mount the fuel line and wiring harness with rub protection on sharp edges.


WARNING!

The fuel line and wiring harness are routed to the metering pump in as shown in the wiring harness routing diagram.

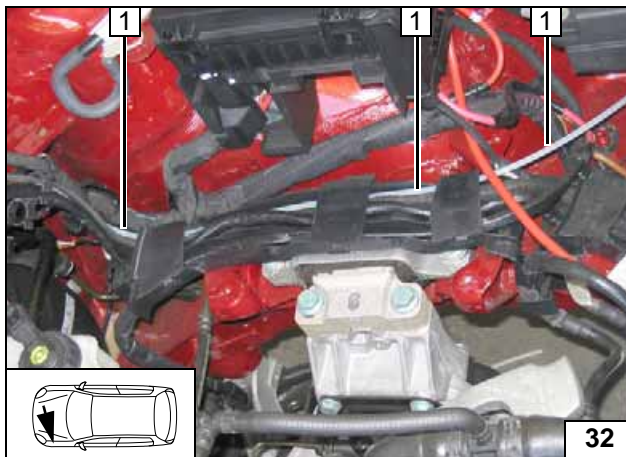

1 Fuel line


Routing to firewall

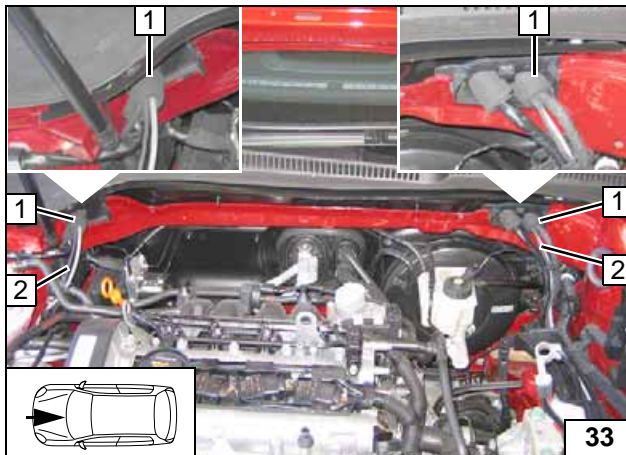

Route fuel line and wiring harness of metering pump **2** in coolant reservoir to right and fasten on original vehicle lines with cable ties. Pay particular attention to freedom of movement of wiper linkage. Route fuel line and wiring harness of metering pump to underbody in wiring duct.

Routing in coolant reservoir


2 Existing pass through [2x]

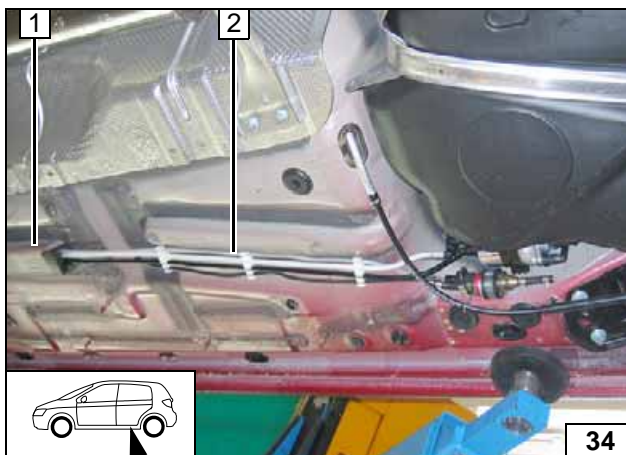

Route fuel line and wiring harness of metering pump along original vehicle fuel lines **2** to fuel tank.


1 Line duct

Routing fuel line and wiring harness of metering pump

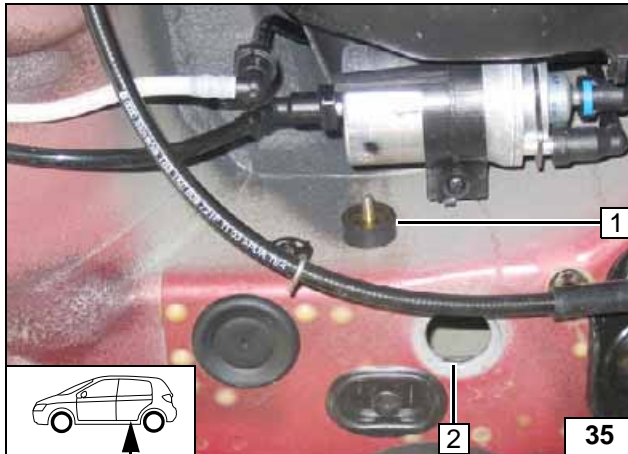

- 1 Silent block, large diameter washer, M6 flanged nut
- 2 Remove sealing plug


Installing silent block

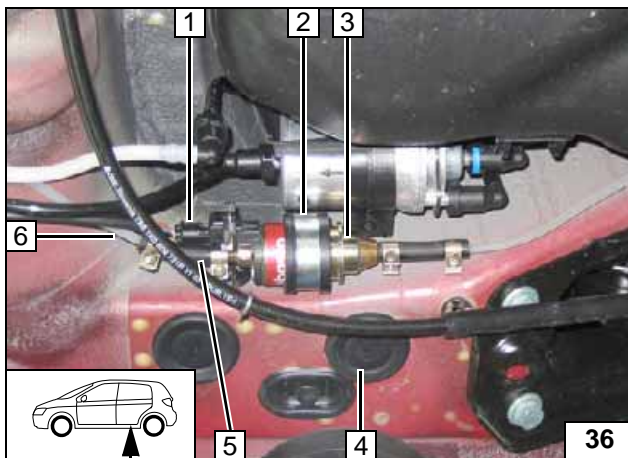

- 1 Wiring harness of metering pump, connector mounted
- 2 Secure rubber-coated p-clamp on silent block with flanged nut
- 3 Metering pump
- 4 Plug remounted
- 5 Hose section, 10 mm dia. clamp [2x]
- 6 Fuel line




Installing metering pump

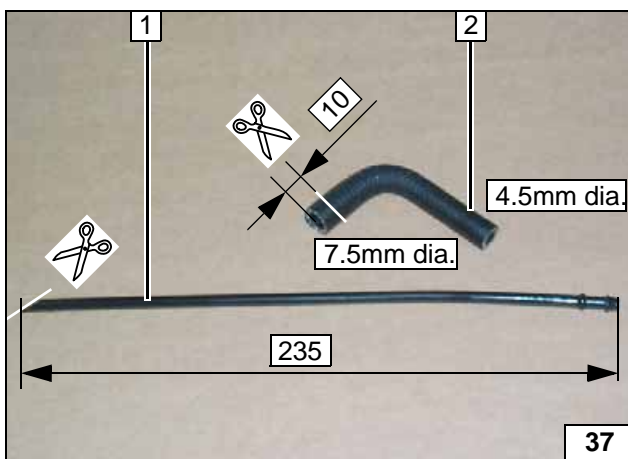

- 1 Standpipe
- 2 Moulded hose

Cutting standpipe and moulded hose to length


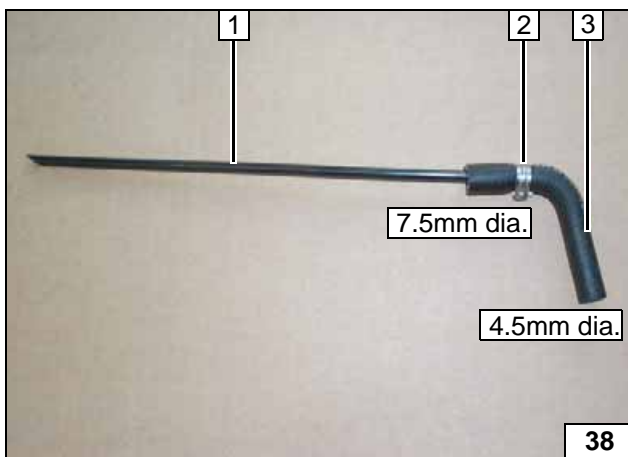


10 mm dia. Caillau clamp 2 in centre between beads on end of standpipe.

- 1 Standpipe
- 3 Moulded hose




Pre-mounting standpipe and moulded hose

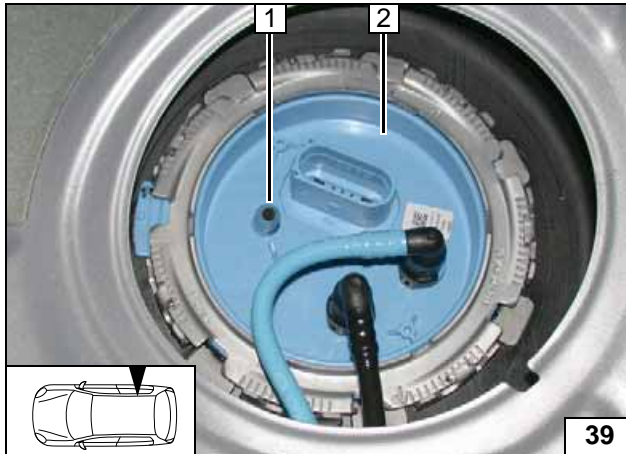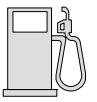

- 1 Tip of blind plug shortened by 3 mm
- 2 Fuel-tank sending unit



Cutting off blind plug

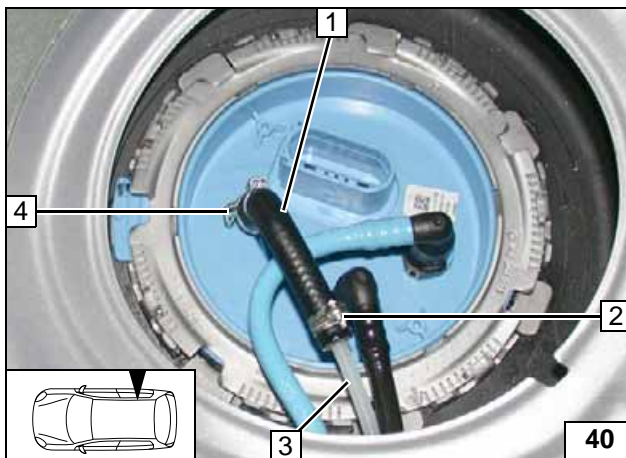


Should the standpipe be slightly curved on delivery, then it must be aligned so that the end points toward the rear right. Otherwise there is a danger of the fuel gauge being impaired.

- 1 Preassembled moulded hose with standpipe
- 2 10 mm dia. clamp
- 3 Fuel line
- 4 13.5 mm dia. clamp




**Connec-
tion to fuel-
tank send-
ing unit**

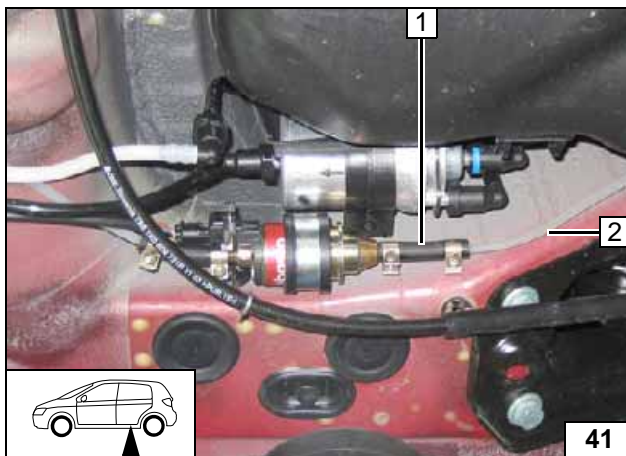

- 1 Hose section, 10 mm dia. clamp [2x]
- 2 Fuel line from fuel-tank sending unit




**Connect-
ing intake
side of me-
tering
pump**

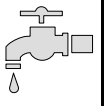

Coolant circuit

WARNING!



Any coolant running off should be collected using an appropriate container. Install hoses so that they are kink-free. Unless specified otherwise, always fasten using cable ties. Position clamps so that no other hose can be damaged! When installing the hoses, the heater must be filled with coolant. The connection should be "inline" based on the following diagram:

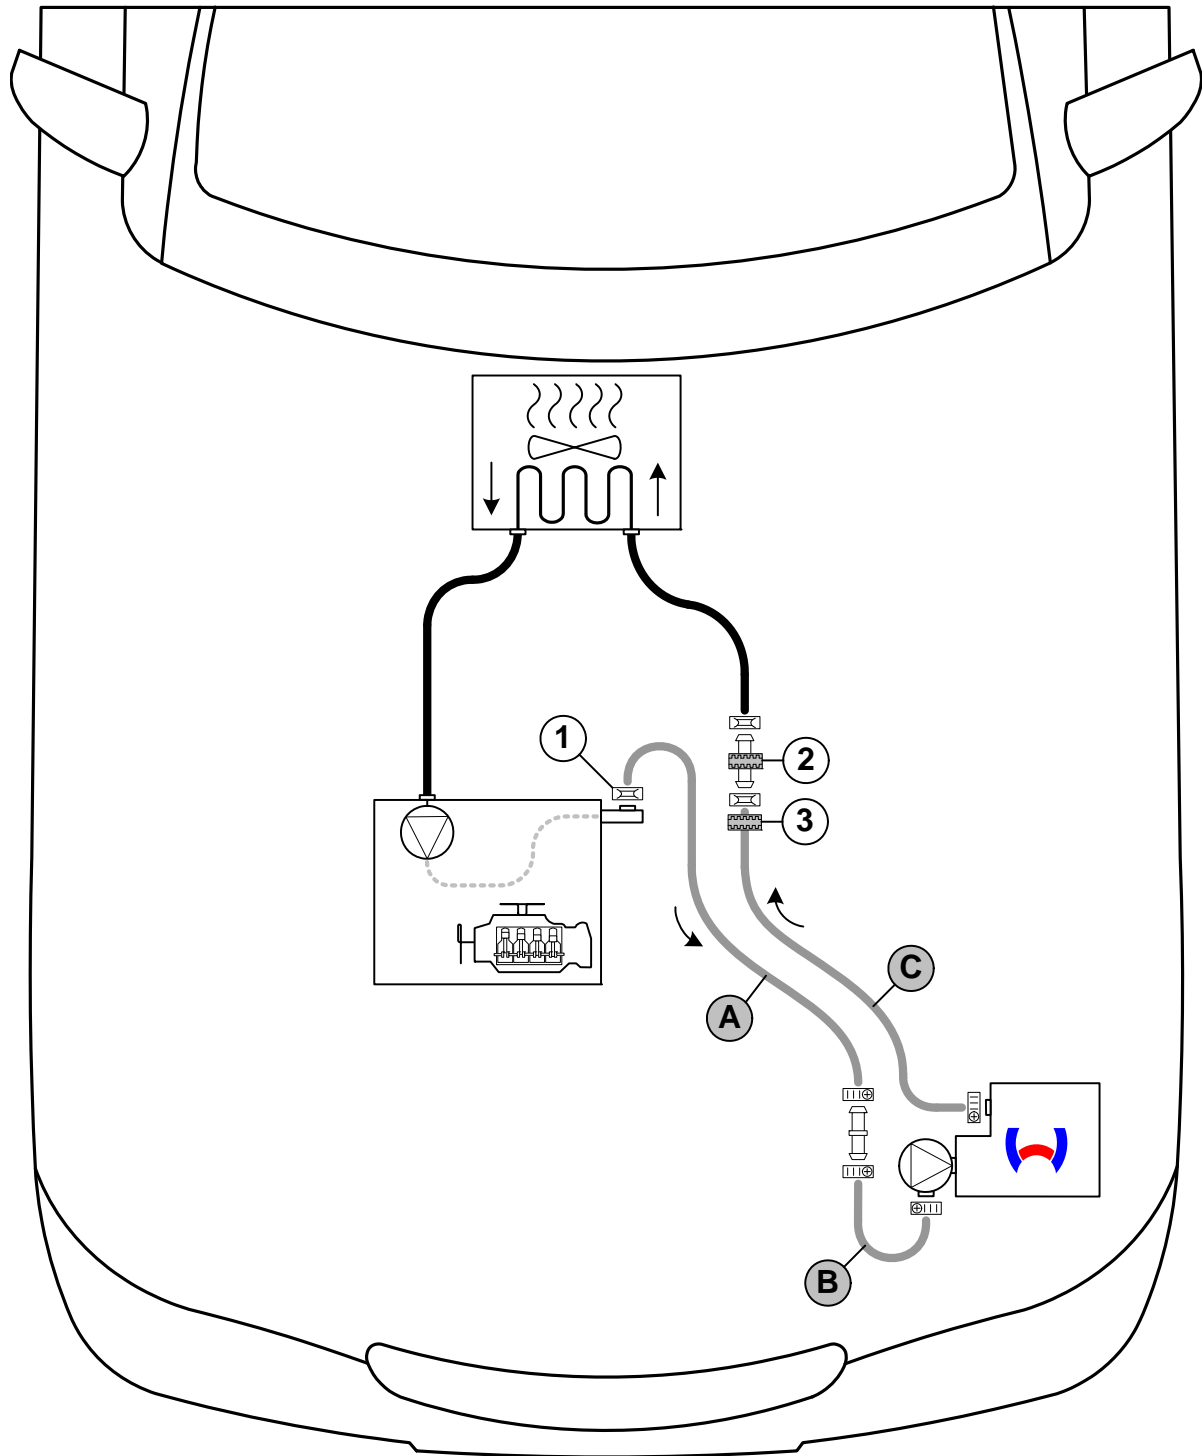

Hose routing diagram

All spring clips without a specific designation = 27 mm dia. **1** = Original vehicle spring clip .
 All hose clamps = 20-27 mm dia.! All connecting pipes = 20x20 mm dia.
2 = Black (sw) rubber isolator (only for 1.2 TSI) .
3 = Black (sw) rubber isolator (only for 1.4 TSI) .



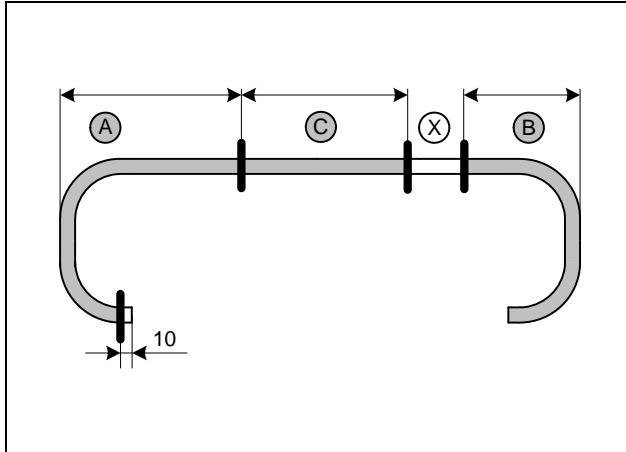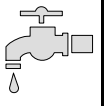


1.2 TSI

Discard section X.

- A = 750
- B = 120
- C = 900



Cutting hoses to length

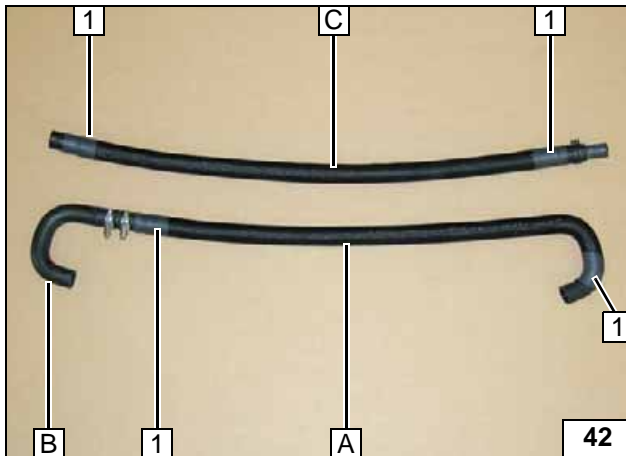


Push braided protection hoses onto hose A and C, cut to length and shrink.

- 1 Heat shrink plastic tubing [4x]




Premounting hoses

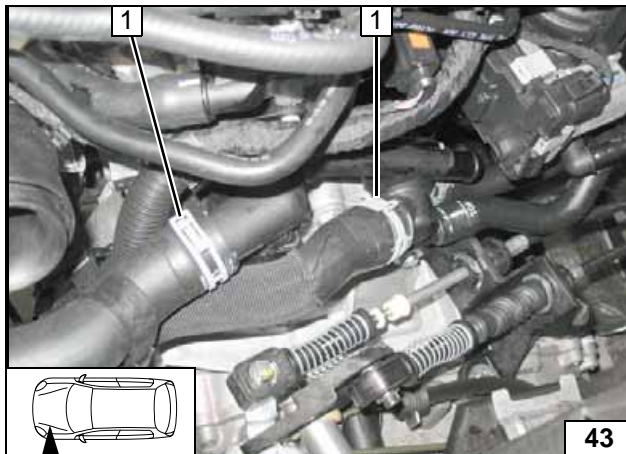

Rotate clamp lock 1 [2x] of engine!





Turning clamps

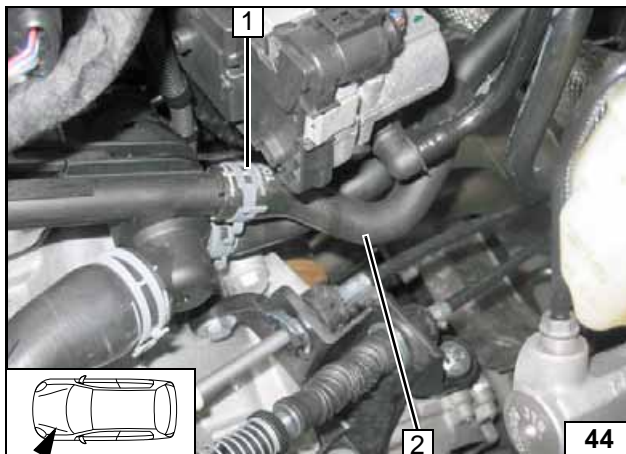

Pull off hose on engine outlet / heat exchanger inlet 2 on connection piece of engine outlet. Spring clip 1 will be reused.



Cutting point

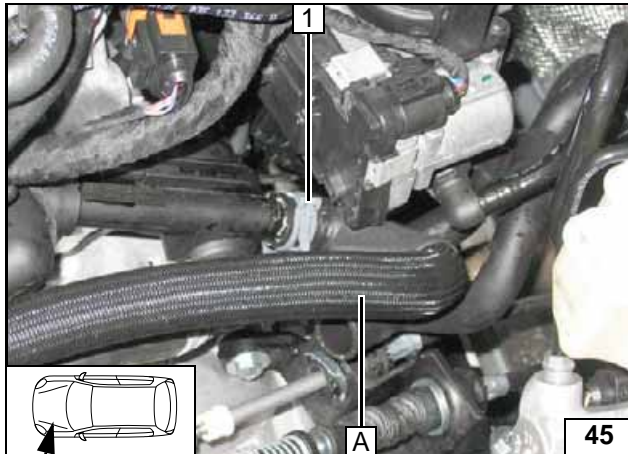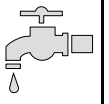


Install hose **A** to 180° elbow on connection piece of engine outlet.


1 Original vehicle spring clip



**Connect-
ing engine
outlet**

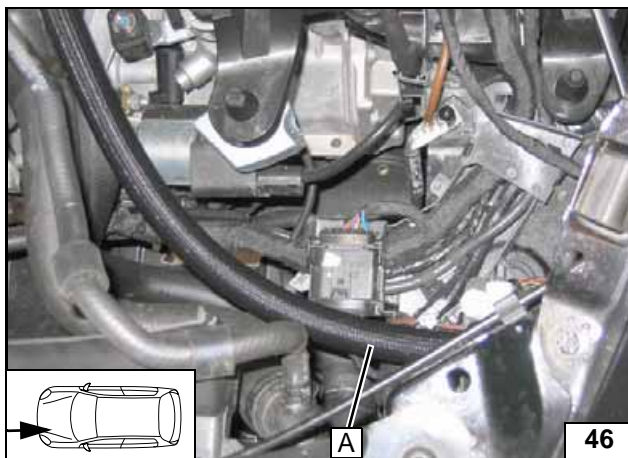


**Routing in
engine
compart-
ment**

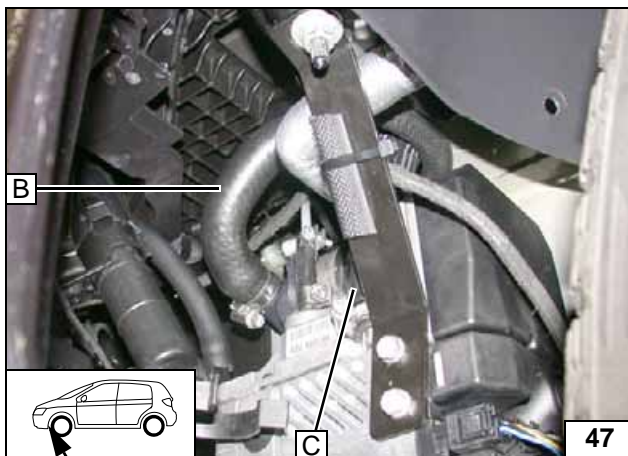



Combustion air silencer tied away for demon-
stration purposes.



**Connect-
ing heater**

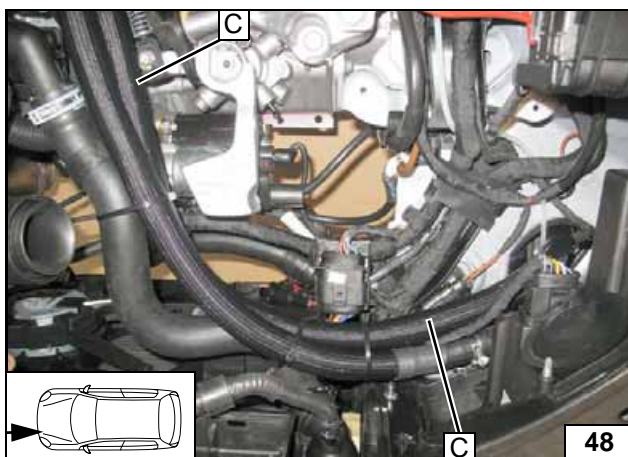

**Routing in
engine
compart-
ment**

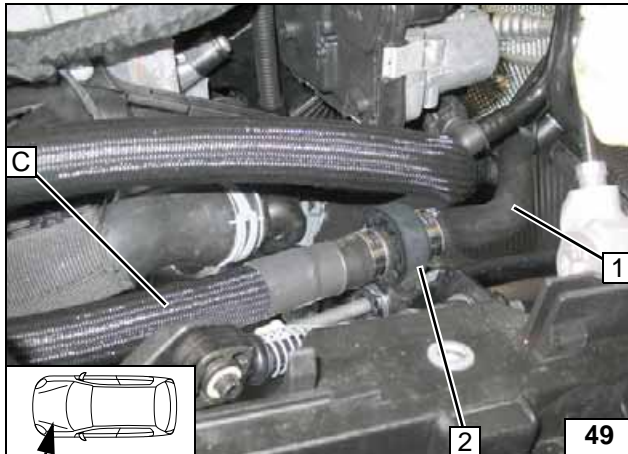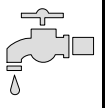


Insert black (sw) rubber isolator **2** in connecting position.

1 Hose on heat exchanger inlet



Connecting heat exchanger inlet

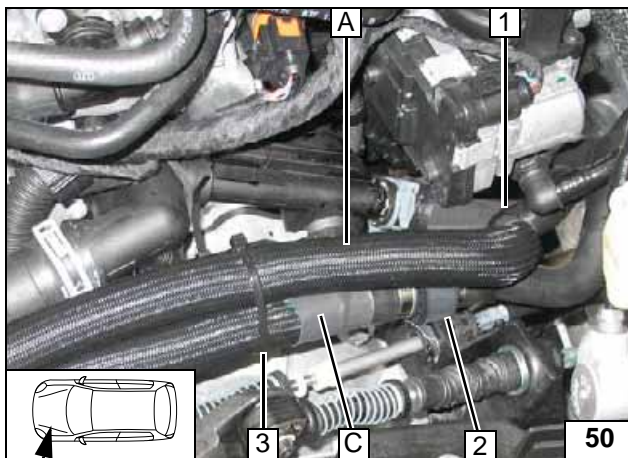


Align black (sw) rubber isolator **2** to bracket of gear change. Align hoses and fasten with cable tie **3** to original vehicle hose. Ensure sufficient spacing to neighbouring components, especially to gear change; correct if necessary.

1 Cable tie




Fastening hoses

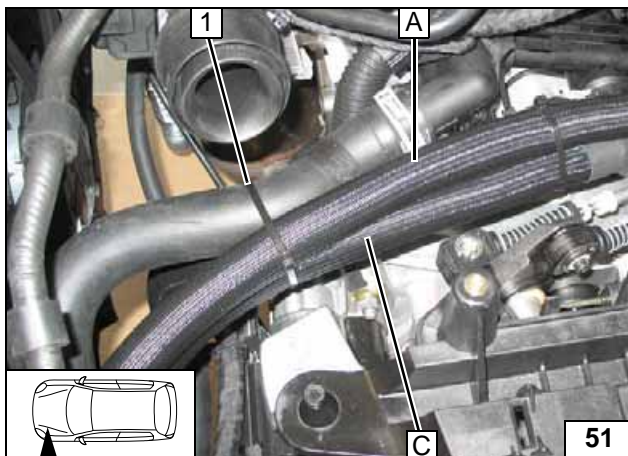

Align hoses and fasten with cable tie **1** to original vehicle hose.



Fastening hoses

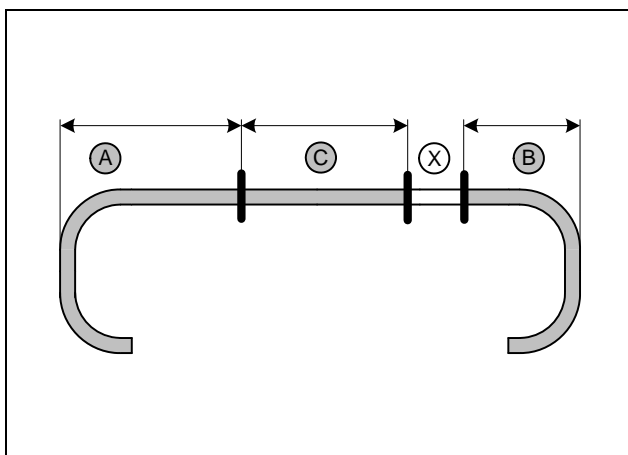



1.4 TSI

Discard section **X**.

- A** = 780
- B** = 120
- C** = 1000



Cutting hoses to length

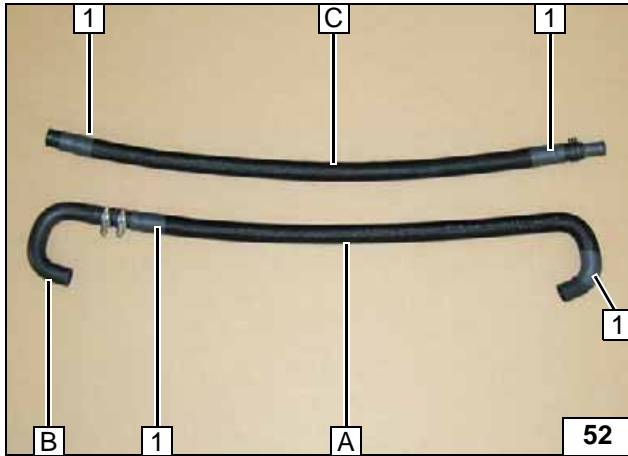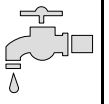


Push braided protection hoses onto hose **A** and **C**, cut to length and shrink.

1 Heat shrink plastic tubing [4x]




Premounting hoses

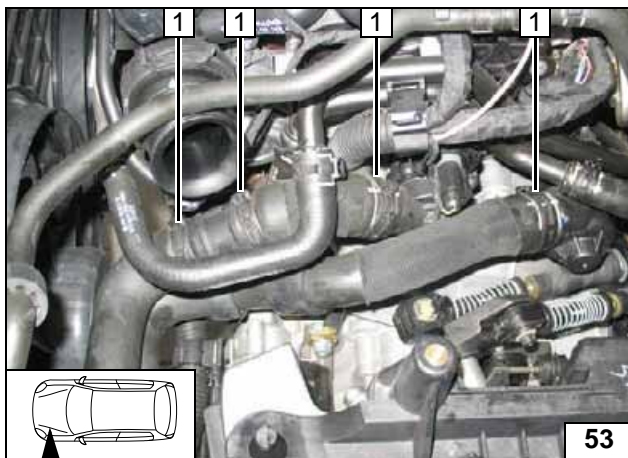

Rotate clamp lock **1** [4x] of engine!




Turning clamps

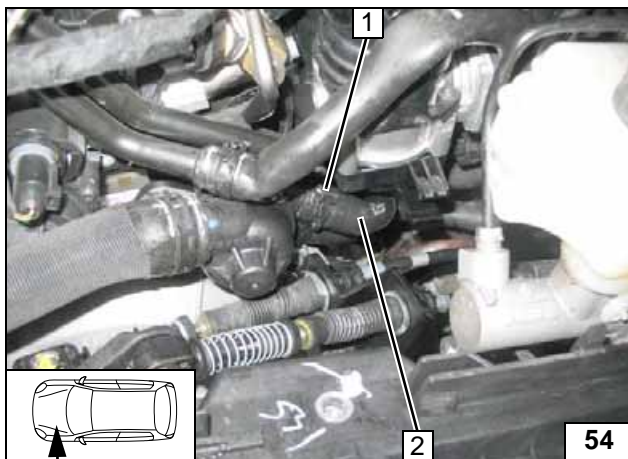

Pull off hose on engine outlet / heat exchanger inlet **2** on connection piece of engine outlet. Spring clip **1** will be reused.



Cutting point


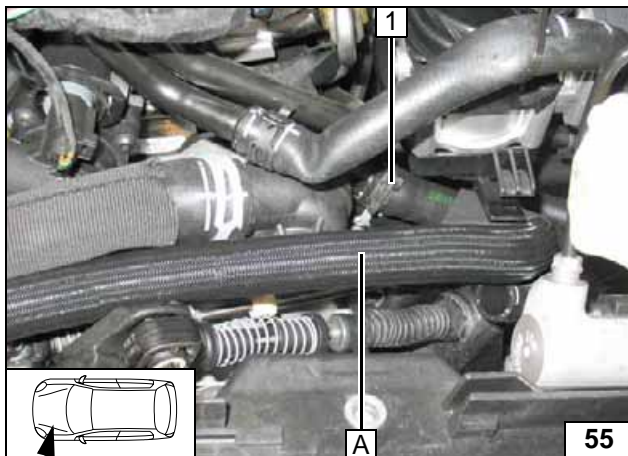


Install hose **A** to 180° elbow on connection piece of engine outlet.


1 Original vehicle spring clip



Connecting engine outlet

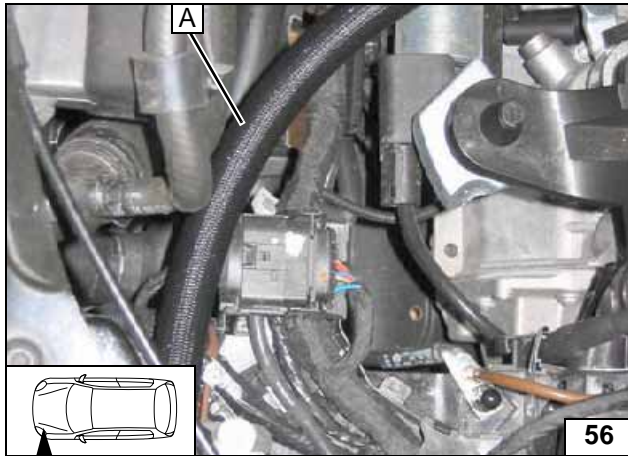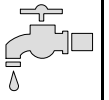


Routing in engine compartment

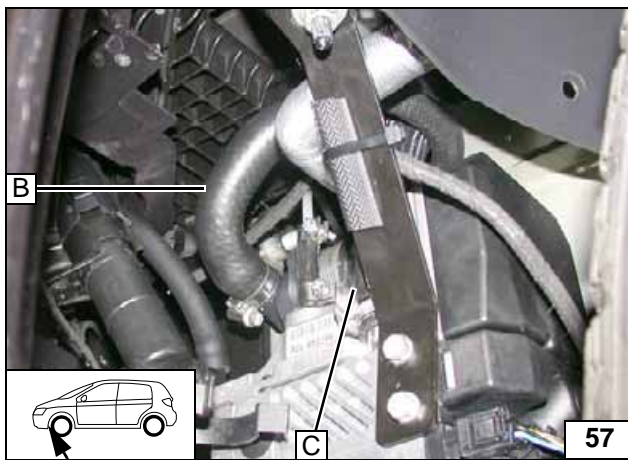

Combustion air silencer tied away for demonstration purposes.



Connecting heater

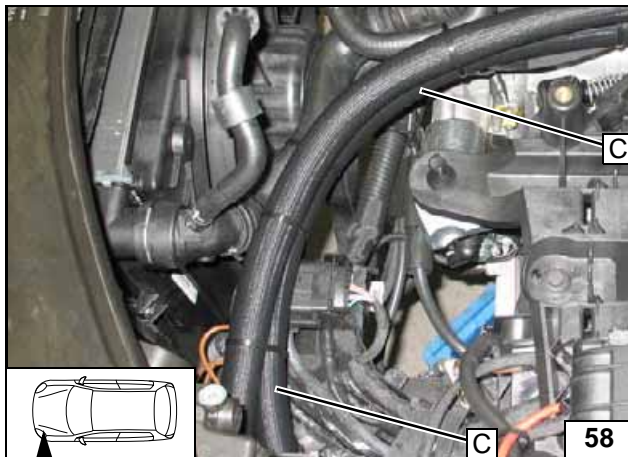


Routing in engine compartment



1 Hose on heat exchanger inlet


Connecting heat exchanger inlet

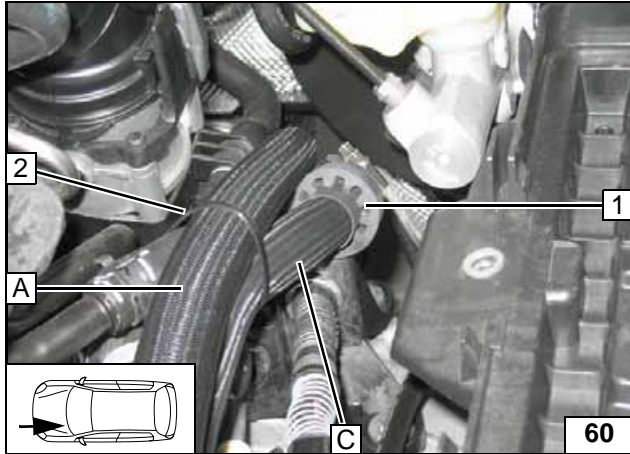

Align black (sw) rubber isolator **1** to bracket of gear change. Fasten hose **A** and **C** with cable tie **2** to original vehicle hose!




Routing in engine compartment

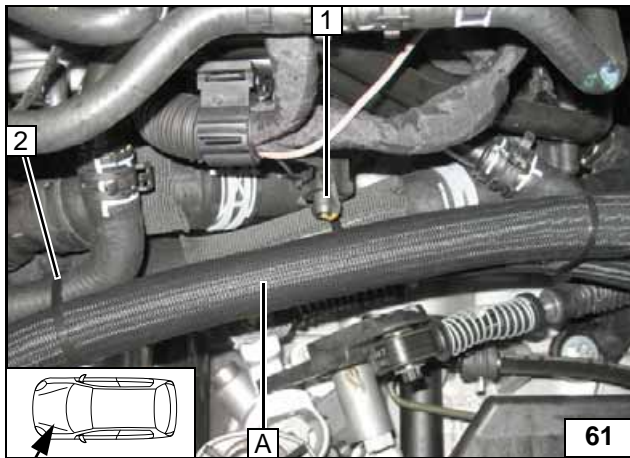

Align hoses and fasten with cable tie **2** to original vehicle hose. Ensure sufficient distance to connector **1**, correct if necessary.





Fastening hoses

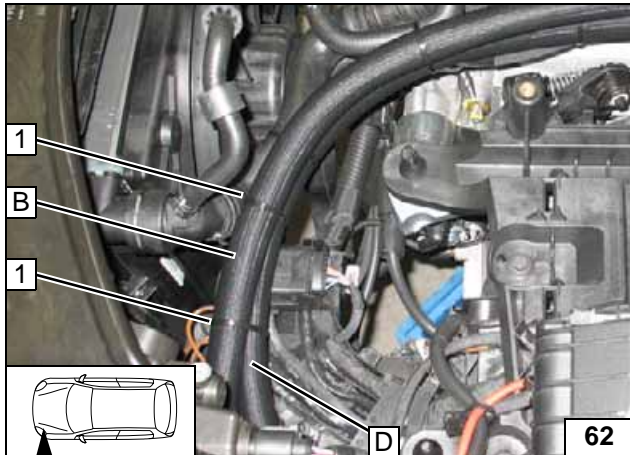

1 Cable tie [2x]

Fastening hoses

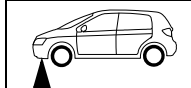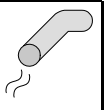


63

Exhaust gas

Align exhaust end section 1 and rubber isolator.



Installing wheel well trim

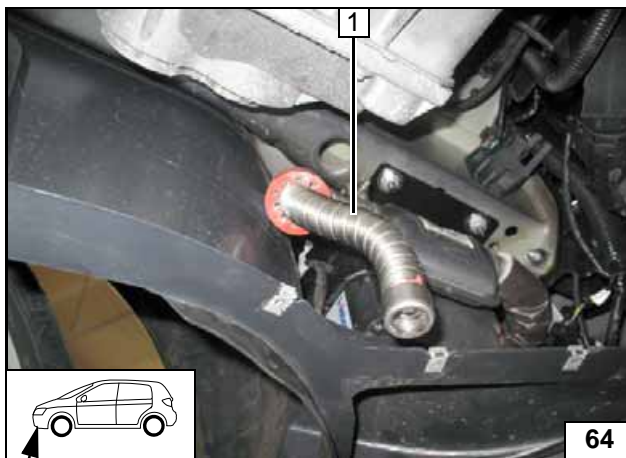


64

Install wheel well trim. Align rubber isolator 1 on wheel well trim. Ensure sufficient distance of exhaust end section from wheel well trim.




Aligning rubber isolator

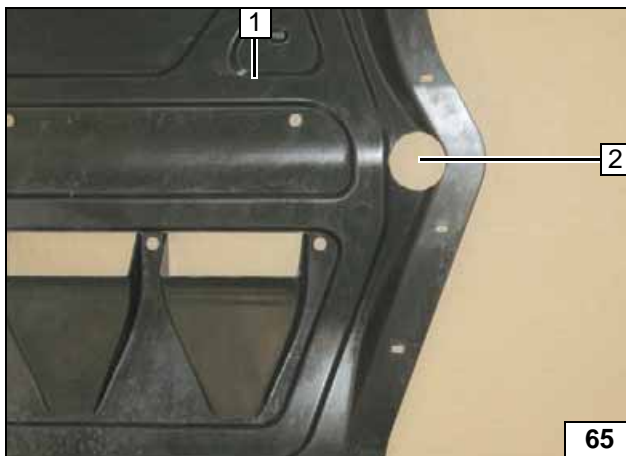

65

- 1 Underride protection
- 2 42 mm dia. hole

Hole in underride protection

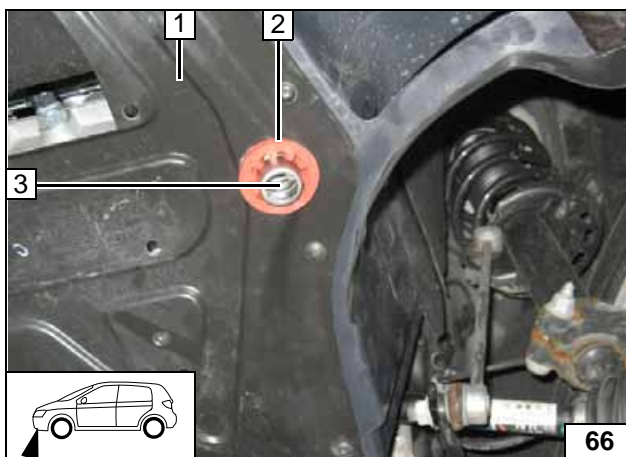


66

Align exhaust end section 3 flush on red (rt) rubber isolator 2.

- 1 Underride protection



Mounting rubber isolator

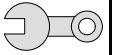

Final Work

WARNING!

Reassemble the disassembled components in reverse order. Check all hoses, clamps and all electrical connections for firm seating. Insulate all loose wires and tie back.

Only use manufacturer-approved coolant. Spray the heater components with anti-corrosion wax (Tectyl 100K, Order No. 111329).

- **Connect the battery**
- **Fill and bleed the coolant circuit according to the vehicle manufacturer's specifications.**
- **Adjust digital timer, teach Telestart**
- **Make settings on A/C control panel according to the "Operating Instructions for End Customer".**
- **Place instruction signboard "Switch off parking heater before refuelling" in the area of the filler neck**
- **For initial start-up and function test, refer to installation instructions**



Webasto AG
Postfach 80
D-82132 Stockdorf / Germany
National Hotline: 01805 93 22 78
(14 Cent aus dem deutschen Festnetz)
Hotfax: 0395 5592 353
Hotmail: hotline@webasto.de
<http://www.webasto.de>

Operating Instructions for End Customer



Please remove page and add to the vehicle operating instructions.



Note:

We recommend matching the heating time to the driving time.

Heating time = driving time

Example:


For a driving time of approx. 20 min. (in one direction), we recommend not exceeding a switch-on time of 20 min.

If the summer/winter switch option has been installed, this must be switched in accordance with the time of year. The heater will then heat in the position Winter  and in the position Summer  it will only switch on the vehicle fan to ventilate the vehicle interior.




Before parking the vehicle, make the following settings:

On vehicles with anti-theft alarm, the passenger compartment monitoring system must be deactivated. For information on deactivation, please see the vehicle owner's manual.

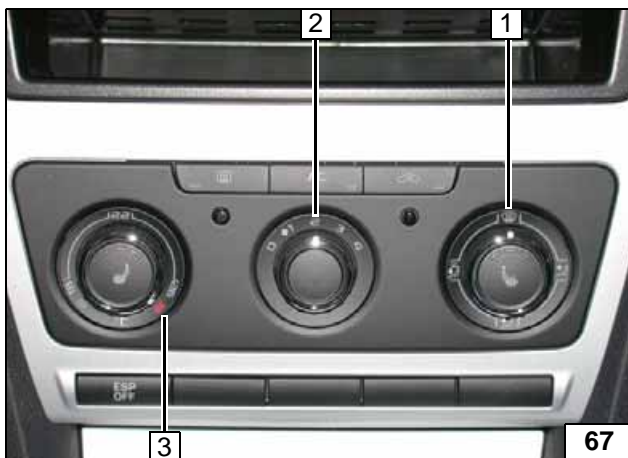

- 1 Direct air outlet toward windscreen
- 2 Set fan to level "1", or possibly "2"
- 3 Set temperature to "max."

Climatic

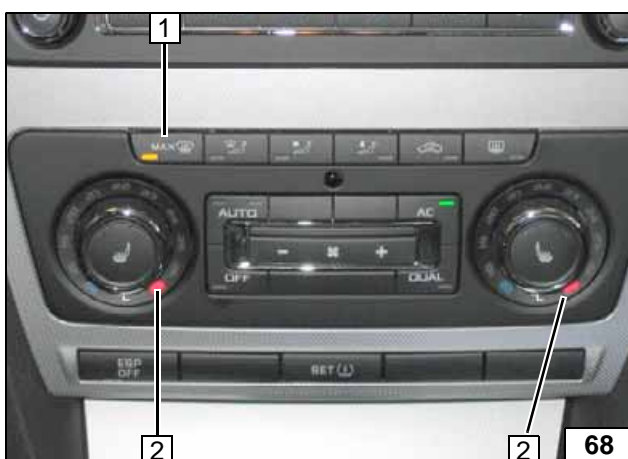

- 1 Direct air outlet toward windscreen
- 2 Set temperature on both sides to "HI".

Climatronic