

Water Heater

Thermo Top Evo Parking Heater



Installation Documentation

Mercedes Benz A-Class (W176), B-Class (W246) and CLA (C117)

Validity

Manufacturer	Model	Type	EG-BE No. / ABE
Mercedes Benz	A-Class	W176	e1 * 2001 / 116 * 0470 * ...
Mercedes Benz	A-Class	W176	e1 * 2007 / 46 * 0928 * ...

Motorisation	Fuel	Transmission type	Output in kW	Displacement in cm ³	Engine code
A 160 CDI	Diesel	SG / 7-speed DCT	66	1461	OM 607
A 180 CDI	Diesel	SG / 7-speed DCT	80	1461	OM 607
A 180 CDI	Diesel	SG / 7-speed DCT	80	1796	OM 651
A 200 CDI	Diesel	SG / 7-speed DCT	100	1796	OM 651
A 220 CDI	Diesel	7-gear DCT	125	2143	OM 651

Manufacturer	Model	Type	EG-BE No. / ABE
Mercedes Benz	B-Class	W246	e1 * 2007 / 46 * 0751 * ...

Motorisation	Fuel	Transmission type	Output in kW	Displacement in cm ³	Engine code
B 160 CDI	Diesel	SG / 7-speed DCT	66	1461	OM 607
B 180 CDI	Diesel	SG / 7-speed DCT	80	1461	OM 607
B 180 CDI	Diesel	SG / 7-speed DCT	80	1796	OM 651
B 200 CDI	Diesel	SG / 7-speed DCT	100	1796	OM 651
B 220 CDI	Diesel	7-gear DCT	125	2143	OM 651

Manufacturer	Model	Type	EG-BE No. / ABE
Mercedes Benz	CLA	C117	e1 * 2007 / 46 * 1007 * ...

Motorisation	Fuel	Transmission type	Output in kW	Displacement in cm ³	Engine code
CLS 200 CDI	Diesel	SG / 7-speed DCT	100	1796	OM 651
CLS 220 CDI	Diesel	7-gear DCT	125	2143	OM 651

SG = Manual transmission
DCT = Automatic transmission

from Model Year 2012
Left-hand drive vehicle

Mercedes Benz A-Class (W176), B-Class (W246) and CLA (C117)

Verified equipment variants:	Thermatic / Thermotronic Headlight washer system Daytime running lights Blue Efficiency ECO Start-Stop Euro 5 and 6 Front fog light
Not verified:	Passenger compartment monitoring
Exclusion:	Petrol-engined cars
Total installation time:	about 9.5 hours

Mercedes Benz A-Class (W176), B-Class (W246) and CLA (C117)

Table of Contents

Validity	1	Preparing Installation Location	14
Necessary Components	3	Preparing Heater	14
Installation Overview	3	Installing Heater	18
Notes on Total Installation Time	3	Coolant Circuit for Engine Code OM 651	20
Information on Operating and Installation Instructions	4	Coolant Circuit for Engine Code OM 607	21
Information on Validity	5	Fuel	27
Technical Information	5	Final Work	32
Explanatory Notes on Document	5	Template for Fuel Standpipe	33
Preliminary Work	6	Operating Instructions for ThermoMatik	34
Heater Installation Location	6	Operating Instructions for ThermoTronik	35
Preparing Electrical System	7		
Electrical System	8		
Fan Controller	9		
Digital Timer	12		
Remote Option (Telestart)	12		
Remote Option (Thermo Call)	13		

Necessary Components

- Basic delivery scope of *Thermo Top Evobased* on price list
- Installation kit for A-/B-class / CLA 2012 Diesel: **1318957C**
- Heater control in accordance with price list and upon consultation with end customer
- In case of Telestart, indicator lamp in accordance with price list and in consultation with end customer


Installation instructions:

- Arrange for the vehicle to be delivered with the tank only about ¼ full!
- The installation location of the push button in the case of Telestart or Thermo Call should be confirmed with the end customer.
- Depending on the available space and manufacturer's instructions, we recommend the use of a vehicle battery with more electrical capacity.

Installation Overview

Legend:

1. Heater
2. Fuse holder of engine compartment
3. Micro SPS Can-Module
4. CAN-node
5. Circulating pump
6. Digital timer
7. Metering pump

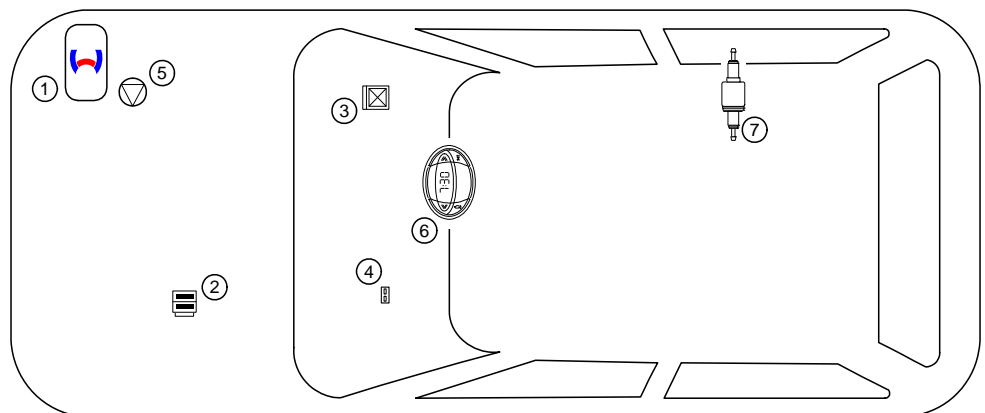

Notes on Total Installation Time

The total installation time includes the time needed for mounting and demounting of the vehicle-specific components, the heater specific installation time and all other times required for the system integration and initial start-up of the heater.

The total installation time may vary for vehicle equipment other than provided.

Mercedes Benz A-Class (W176), B-Class (W246) and CLA (C117)

Information on Operating and Installation Instructions

1 Important Information (not complete)

1.1 Installation and Repair



The improper installation or repair of Webasto heating and cooling systems can cause fire or the leakage of deadly carbon monoxide, leading to serious injury or death.



To install and repair Webasto heating and cooling systems you need to have completed a special company training course and have the appropriate technical documentation, special tools and special equipment.



Installation and repair may ONLY be carried out by persons trained and certified in a Webasto training course. NEVER try to install or repair Webasto heating or cooling systems if you have not completed a Webasto training course, you do not have the necessary technical skills and you do not have the technical documentation, tools and equipment available to ensure that you can complete the installation and repair work properly.

Only use genuine Webasto parts. See the Webasto air and water heaters accessories catalogue for this purpose.

1.2 Operation

To ensure safe operation, we recommend having the heater checked every two years by an authorised Webasto dealer, especially when used over a long period and/or under extreme environmental conditions.

Do not operate the heater in closed rooms due to the danger of poisoning and suffocation.

Always switch off the heater before refuelling.

The heater may only be used with the prescribed fuel Diesel (DIN EN 590) or petrol (DIN EN 227).

The heater may not be cleaned with a high-pressure cleaner.

1.3 Please note

ALWAYS follow all Webasto installation and operating instructions and observe all warnings.

To become familiar with and understand all functions and properties of the heater, the operating instructions must be read carefully and observed at all times.

For proper, safe installation and repair work, the installation instructions with all warnings and safety information must be carefully read and observed at all times. Please always contact a workshop authorised by Webasto for all installation and repair work.

Important

Webasto shall assume no liability for defects, damage and injuries resulting from a failure to observe the installation, repair and operating instructions of the information contained in them.

This liability exclusion particularly applies to improper installations and repairs, installations and repairs by untrained persons or in the case of a failure to use genuine spare parts.

The liability due to culpable disregard to life, limb or health and due to damage or injuries caused by a wilful or reckless breach of duty remain unaffected, as does the obligatory product liability.

Installation should be carried out according to the general, standard rules of technology. Unless specified otherwise, fasten hoses, lines and wiring harnesses to original vehicle lines and wiring harnesses using cable ties. Insulate loose wire ends and tie back. Connectors on electronic components must audibly snap into place during assembly.

Sharp edges should be fitted with rub protection. Spray unfinished body areas, e.g. drilled holes, with anti-corrosion wax (Tectyl 100K, Order No. 111329).

Observe the instructions and guidelines of the respective vehicle manufacturer for demounting and mounting vehicle specific components!

The initial startup is to be executed with the Webasto Thermo Test Diagnosis.

When installing an PWM-Gateway, the corresponding settings must be checked or adjusted before the installation.

2 Statutory regulations governing installation

Guidelines	Thermo Top Evo
Heating Directive ECE R122	E1 00 0258
EMC Directive ECE R10	E1 04 5627

Note

The regulations of these guidelines are binding in the scope of the Directive 70/156/EEC and/or 2007/46/EC (for new vehicle models from 29/04/2009) and should also be observed in countries in which there are no special regulations.

Important

Failure to follow the installation instructions will result in the invalidation of the type approval for the heater and therefore invalidation of the general **homologation of the vehicle**.

Note

For vehicles with an EU permit, no entry in accordance with § 19 Sub-Section 4 of Annex VIII b to the Road Traffic Act is required.

2.1 Excerpt from the directive 2001/56/EC Appendix VII for the installation of the heater

Beginning of excerpt.

ANNEX VII

REQUIREMENTS FOR COMBUSTION HEATERS AND THEIR INSTALLATION

1. GENERAL REQUIREMENTS

1.7.1. A clearly visible tell-tale in the operator's field of view shall inform when the combustion heater is switched on or off.

2. VEHICLE INSTALLATION REQUIREMENTS

2.1. Scope

2.1.1. Subject to paragraph 2.1.2. combustion heaters shall be installed according to the requirements of this Annex.

2.1.2. Vehicles of category O having liquid fuel heaters are deemed to comply with the requirements of this Annex.

2.2. Positioning of heater

2.2.1. Body sections and any other components in the vicinity of the heater must be protected from excessive heat and the possibility of fuel or oil contamination.

2.2.2. The combustion heater shall not constitute a risk of fire, even in the case of overheating. This requirement shall be deemed to be fulfilled if the installation ensures an adequate distance to all parts and suitable ventilation, by the use of fire resistant materials or by the use of heat shields.

2.2.3. In the case of M2 and M3 vehicles, the heater must not be positioned in the passenger compartment. However, an installation in an effectively sealed envelope which also complies with the conditions in paragraph 2.2.2 may be used.

2.2.4. The label referred to in paragraph 1.4 or a duplicate, must be positioned so that it can be easily read when the heater is installed in the vehicle.

2.2.5. Every reasonable precaution should be taken in positioning the heater to minimise the risk of injury and damage to personal property.

2.3. Fuel supply

2.3.1. The fuel filler must not be situated in the passenger compartment and must be provided with an effective cap to prevent fuel spillage.

2.3.2. In the case of liquid fuel heaters, where a supply separate to that of the vehicle is provided, the type of fuel and its filler point must be clearly labelled.

2.3.3. A notice, indicating that the heater must be shut down before refuelling, must be affixed to the fuelling point. In addition a suitable instruction must be included in the manufacturer's operating manual.

2.4. Exhaust system

2.4.1. The exhaust outlet must be located so as to prevent emissions from entering the vehicle through ventilators, heated air inlets or opening windows.

2.5. Combustion air inlet

2.5.1. The air for the combustion chamber of the heater must not be drawn from the passenger compartment of the vehicle.

2.5.2. The air inlet must be so positioned or guarded that blocking by rubbish or luggage is unlikely.

2.6. Heating air inlet

2.6.1. The heating air supply may be fresh or recirculated air and must be drawn from a clean area not likely to be contaminated by exhaust fumes emitted either by the propulsion engine, the combustion heater or any other vehicle source.

2.6.2. The inlet duct must be protected by mesh or other suitable means.

2.7. Heating air outlet

2.7.1. Any ducting used to route the hot air through the vehicle must be so positioned or protected that no injury or damage could be caused if it were to be touched.

2.7.2. The air outlet must be so positioned or guarded that blocking by rubbish or luggage is unlikely.

End of excerpt.

In multilingual versions the German language is binding.

Mercedes Benz A-Class (W176), B-Class (W246) and CLA (C117)

Information on Validity

This installation documentation applies to Mercedes Benz A-Class (W176), B-Class (W246) and CLA (C117) Diesel vehicles - for validity, see page 1 - from model year 2012 and later, assuming technical modifications to the vehicle do not affect installation, any liability claims excluded. Depending on the vehicle version and equipment, modifications may be necessary during installation with respect to this installation documentation.

Vehicle and engine types, equipment variants and other specifications not listed in this installation documentation have not been tested. However, installation according to this installation documentation may be possible.

Technical Information

Special Tools

- Hose clamp pliers for self-clamping hose clamps
- Hose clamp pliers for Clic hose clamps of type W
- Automatic wire stripper 0.2 - 6mm²
- Crimping pliers for cable lug / tab connector 0.5 - 6mm²
- Torque wrench for 2.0 - 10 Nm
- Hose clamping pliers
- Metric thread-setter kit
- Webasto Thermo Test diagnosis with current software

Dimensions

- All dimensions are in mm.

Tightening torque values

- Tightening torque values of 5x13 heater bolts = 8Nm.
- Tightening torque values of 5x15 retaining plate of water connection piece bolt = 7Nm.
- Tighten other bolt connections in accordance with manufacturer's instructions or in accordance with state-of-the-art-technology.

Explanatory Notes on Document

You will find an identification mark on the outside top right corner of the page in question to provide you with a quick overview of the individual working steps.

Special features are highlighted using the following symbols:

Mechanical system



Electrical system



Coolant circuit



Combustion air



Fuel



Exhaust gas



Software



Specific risk of injury or fatal accidents



Specific risk of damage to components



Specific risk of fire or explosion.




Reference to general installation instructions of the Webasto components or to the manufacturer's vehicle-specific documents.



Reference to a special technical feature



The arrow in the vehicle icon indicates the position on the vehicle and the viewing angle.



Mercedes Benz A-Class (W176), B-Class (W246) and CLA (C117)

Preliminary Work

Vehicle


- Open the fuel tank cap.
- Ventilate the tank.
- Close the fuel tank cap again.
- Remove the engine cover.
- Depressurise the cooling system.
- Disconnect the battery.
- Remove the right front wheel.
- Remove the wheel well trim on the right side.
- Remove the coolant expansion tank.
- Detach the heat shield plate in the upper section (only for 1.5 CDI).
- Remove the right and left underride protection.
- Remove the lower engine trim.
- Lower the exhaust system.
- Remove the heat shield plate of the fuel tank.
- Remove the instrument panel in accordance with the manufacturer's instructions (CAN-node).
- Remove the lower A-pillar trim on the front passenger's side (only in case of Telestart and / or Thermo Call).

Only carry out the following steps during the corresponding installation sequence:

- Remove the fuel tank according to the manufacturer's instructions.
- Remove the fuel-tank sending unit in accordance with the manufacturer's instructions.

Heater


- Remove years that do not apply from the type and duplicate label.
- Attach the duplicate label (type label) in the appropriate place inside the engine compartment.

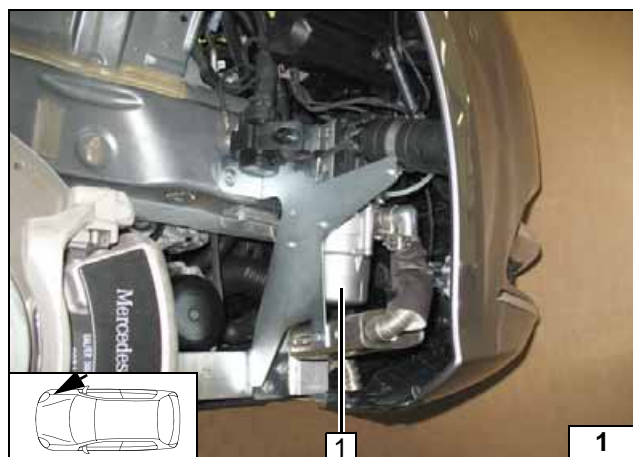

Heater Installation Location

- 1 Heater

Installation location

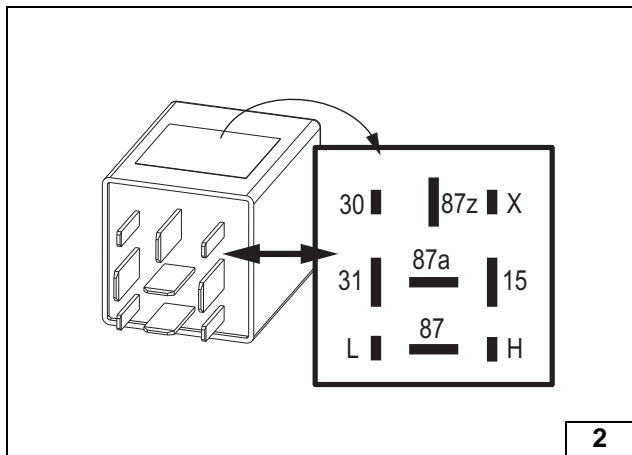


Preparing Electrical System

Wire sections retain their numbering in the entire document.



Preparing Micro SPS CAN-Module

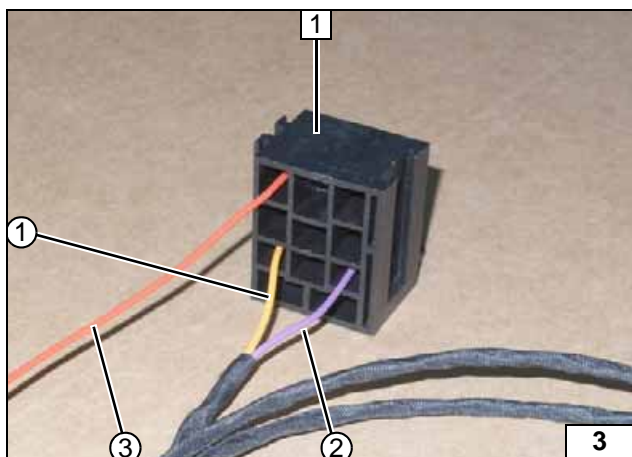


Connect wires according to the wiring diagram (see following image). Micro SPS CAN-Module is only inserted after installation.



Premounting wiring harness of CAN wires


- 1 Socket of Micro SPS Can-Module
- ① Orange (or) wire of SPS CAN-Module/L
- ② Violet (vi) wire of SPS CAN-Module/H
- ③ Red (rt) wire of SPS CAN-Module/30

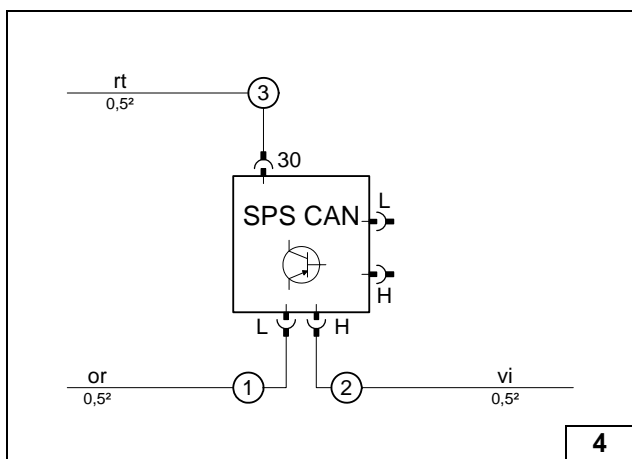

Connect wires to socket of SPS CAN-Module. View of SPS CAN-Module on contact side.



Preparing Micro SPS CAN-Module

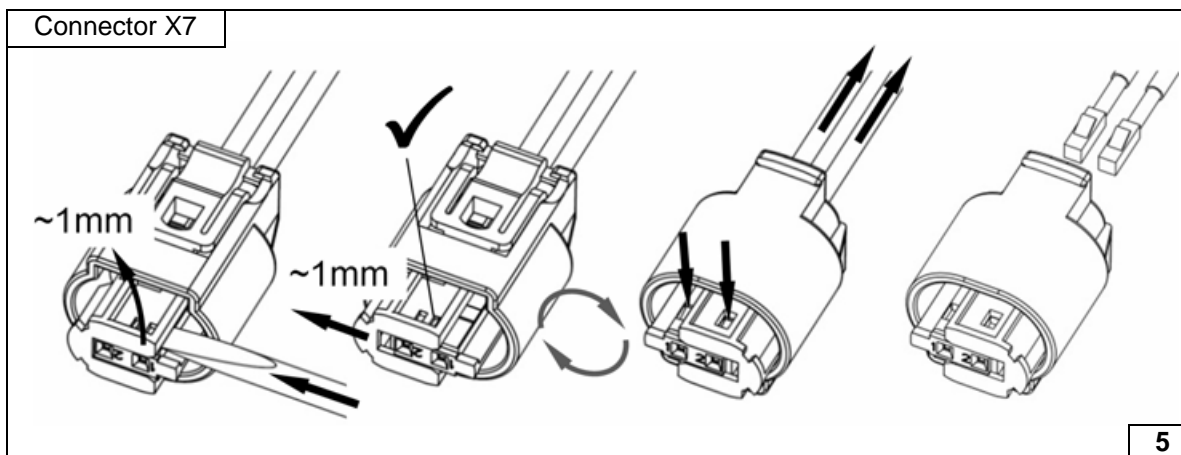

Removing metering pump connector




Electrical System

Fuse holder of engine compartment



Ensure sufficient distance to intake manifold at position 1.

- 2 M5x16 bolt, washer, retaining plate of fuse holder, 6mm dia. hole, washer, nut
- 3 Battery box
- 4 F1-2 fuses

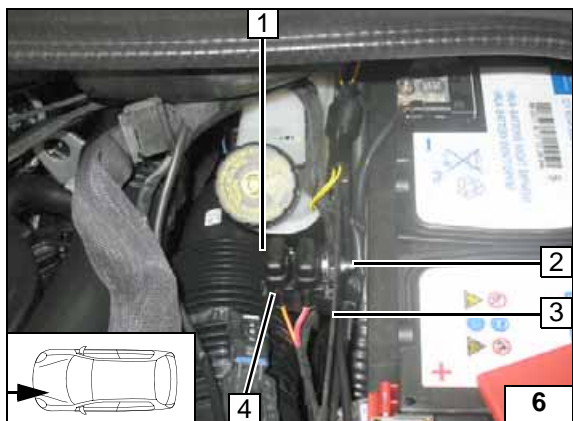

Wiring harness pass through

- 1 Protective rubber plug
- 2 Wiring harness of heater / heater control

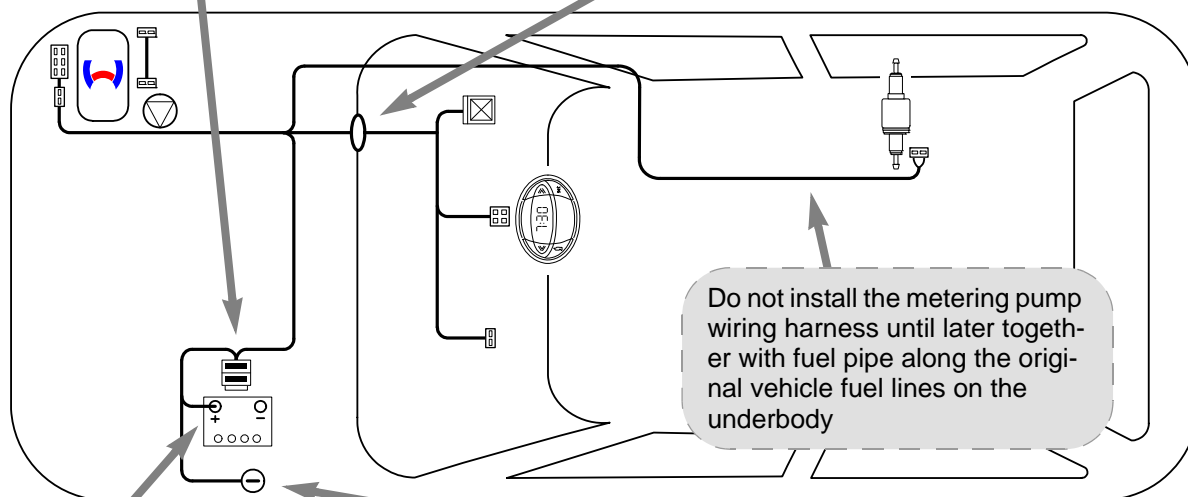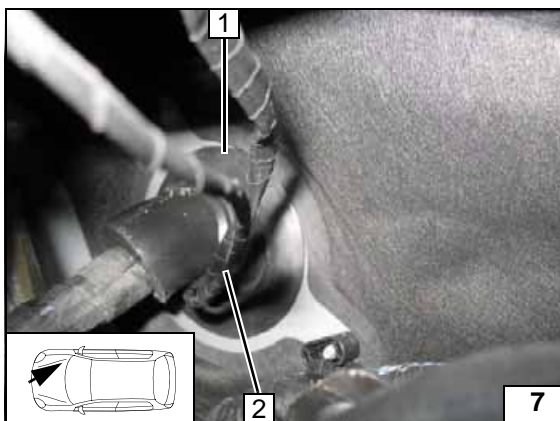


Wiring harness routing diagram



Positive wire

- 1 Positive wire on positive battery terminal

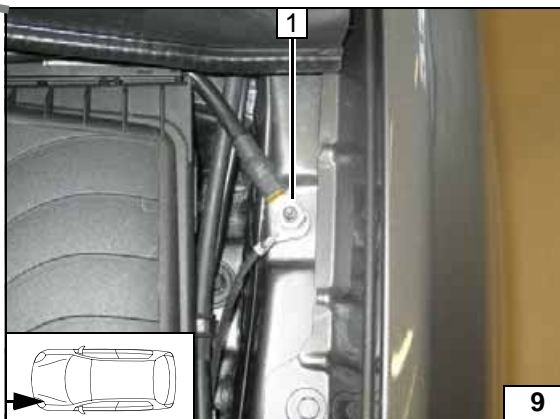


Earth wire

- 1 Earth wire on original vehicle earth support point




Fan Controller

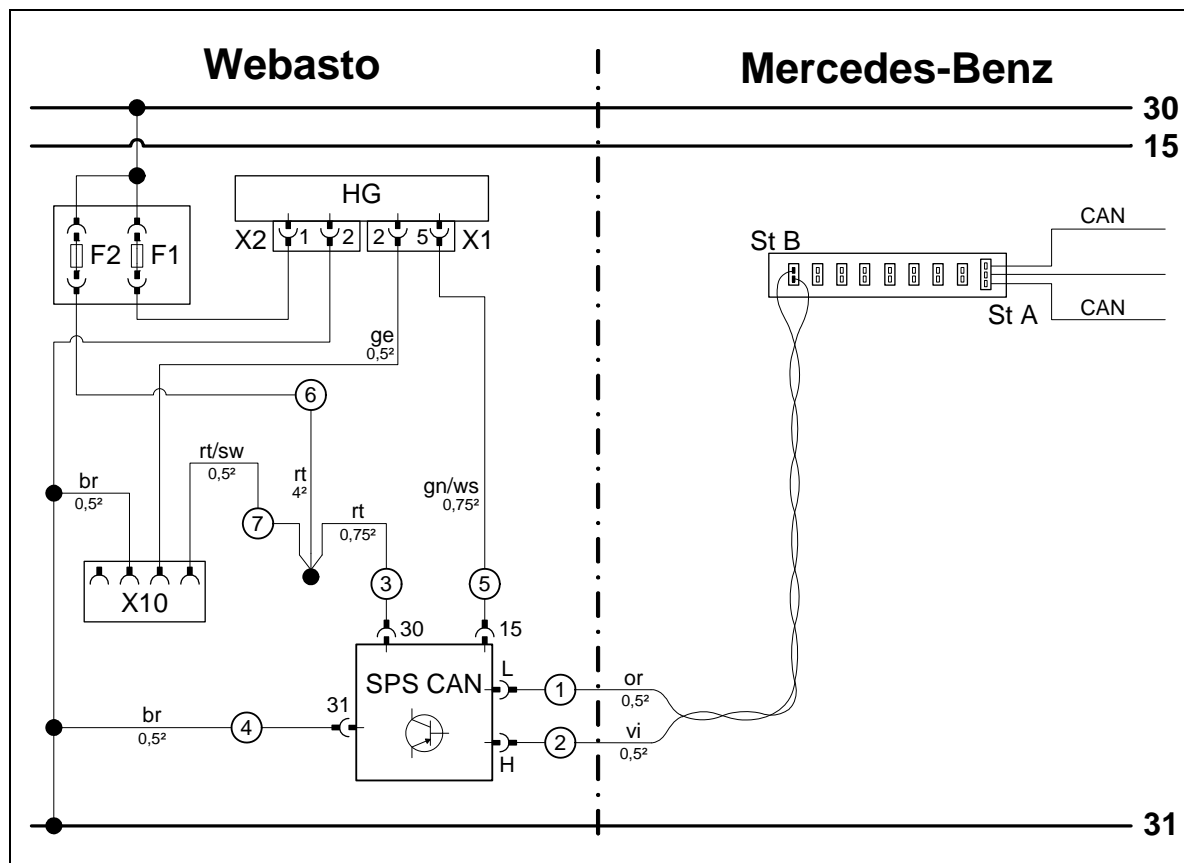

Wiring diagram

Webasto components		Vehicle components		Colours and symbols	
HG	TT-Evo heater	St A	CAN-node	rt	red
X1	6-pin heater connector			sw	black
X2	2-pin heater connector			ge	yellow
X10	4-pin connector of heater control			gn	green
F1	20A fuse			or	orange
F2	Replace 30A fuse with 1A fuse.			vi	violet
SPS	Micro SPS CAN-Module			br	brown
ST B	Connector of CAN wires wiring harness			ws	white
					Wiring colours may vary.


Legend

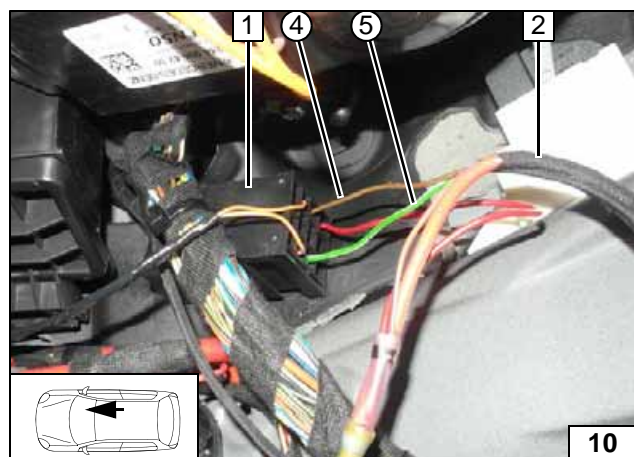

Fold back floor mat. Connect wires of the heater wiring harness 2 to socket of Micro SPS CAN-Module 1 .

- ④ Brown (br) wire of SPS CAN-Module/31
- ⑤ Green/white (gn/ws) wire of SPS CAN-Module/15

Installing CAN-module

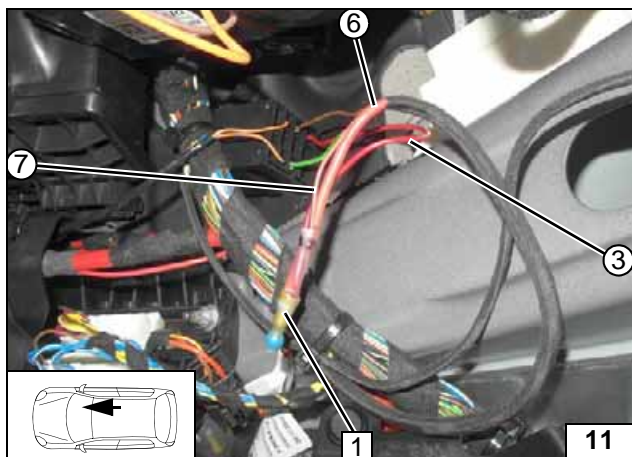


Connect wires with solder wire terminator 1 according to wiring diagram.

- ③ Red (rt) wire of SPS CAN-Module/30
- ⑥ Red (rt) wire of fuse F2
- ⑦ Red/black (rt/sw) wire of connector X10




**Connect-
ing wires**

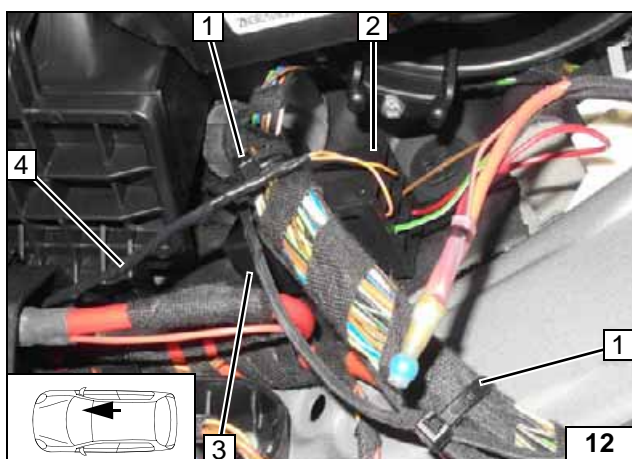

Attach Micro SPS CAN-Module 3 to socket 2. Fasten socket of SPS CAN-Module to original vehicle wiring harness with cable tie 1. Route wiring harness of CAN wires 4 to the left side of the vehicle.



**Installing
CAN-mod-
ule**

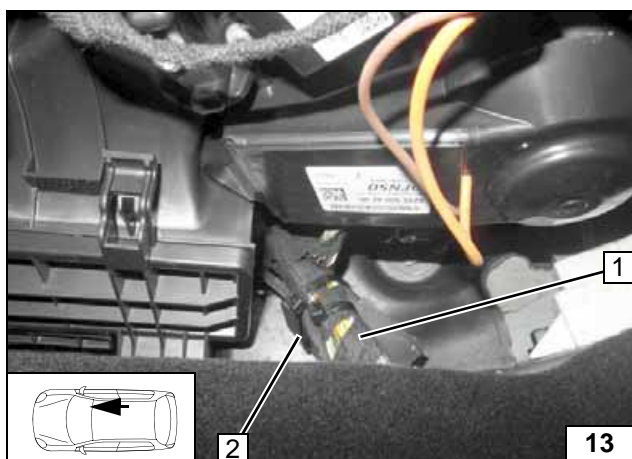


Align the floor mat.

- 1 Original vehicle wiring harness
- 2 Cable tie



**Installing
CAN-mod-
ule**

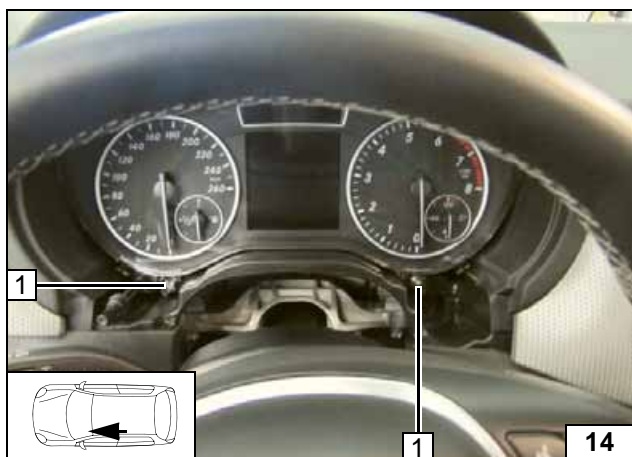

Remove instrument panel in accordance with manufacturer's instructions to facilitate installation of the CAN-connector. Remove window frame, loosen bolts [2x] at position 1 and remove instrument panel.



**Removing
instrument
panel**

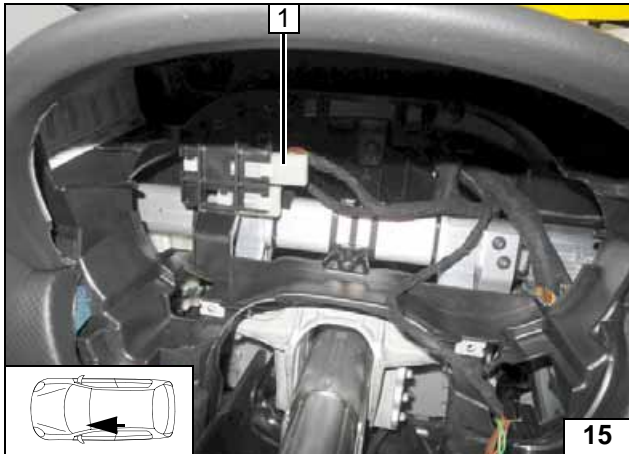


Image shows A-class.

- 1 Unclip plug connector of CAN-node



**Unclipping
plug con-
nector of
CAN-node**

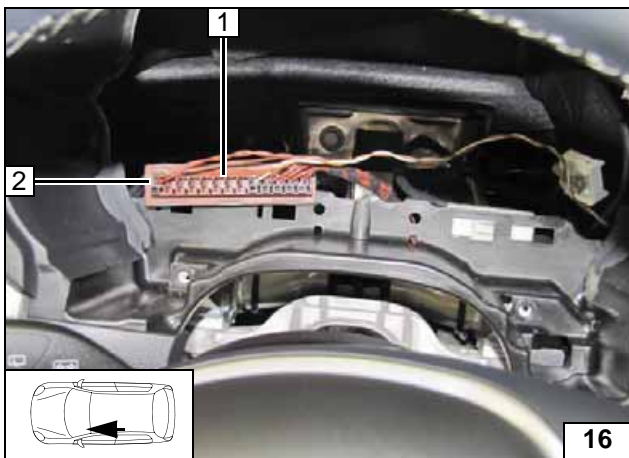



Image shows B-class.

Insert connector of CAN-module into free socket.

- 1 CAN-node
- 2 Connector of CAN-module (St B)



**Connec-
tion of
CAN-bus**

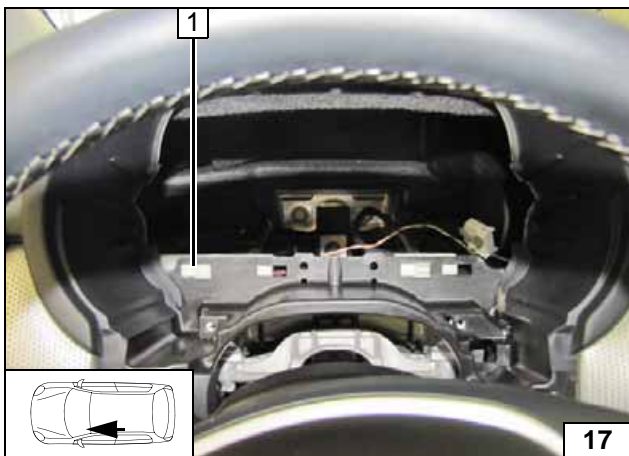


All vehicles. Image shows B-class.

Re-insert plug connector of CAN-node. Reinstall instrument panel.



**Completing instru-
ment panel**

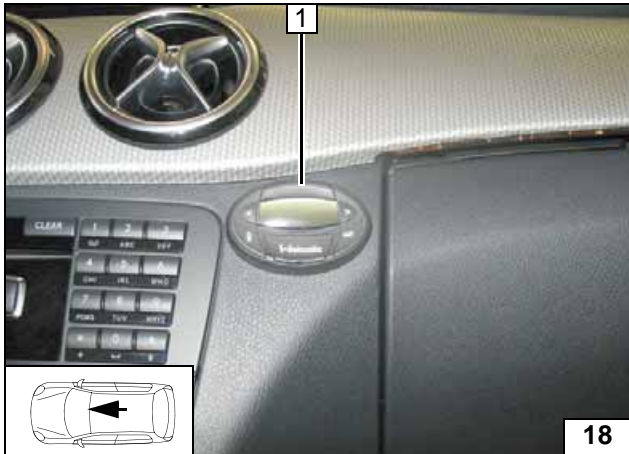


Digital Timer

1 Digital timer



Installing digital timer

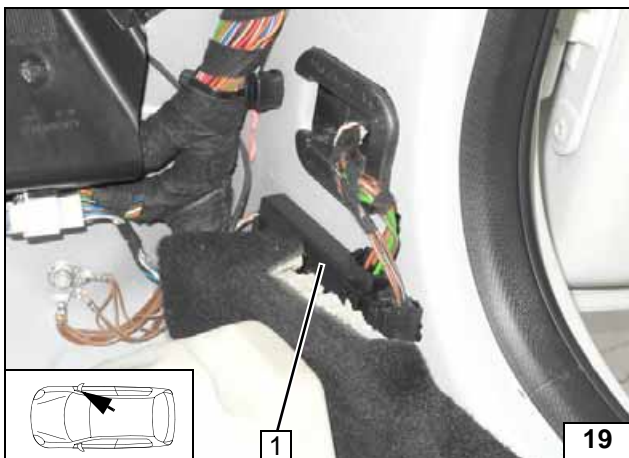


Remote Option (Telestart)

Fasten receiver 1 with adhesive tape.



Installing receiver

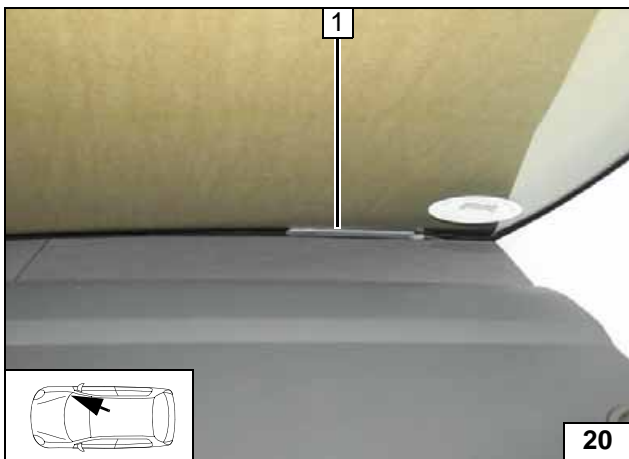

1 Antenna

Installing antenna




Temperature sensor T100 HTM

Fasten temperature sensor 1 with adhesive tape.




Mounting temperature sensor

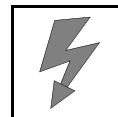

Remote Option (Thermo Call)



Fasten receiver 1 with adhesive tape.

Installing receiver

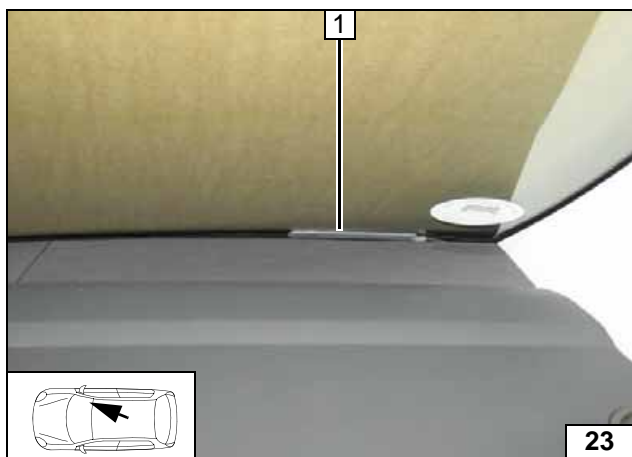

1 Antenna


Installing antenna

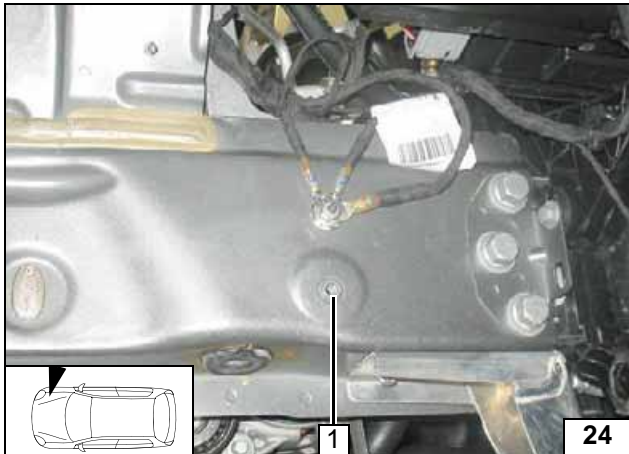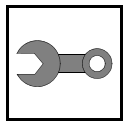

Preparing Installation Location


- 1 Rivet nut, existing hole

Installing rivet nut

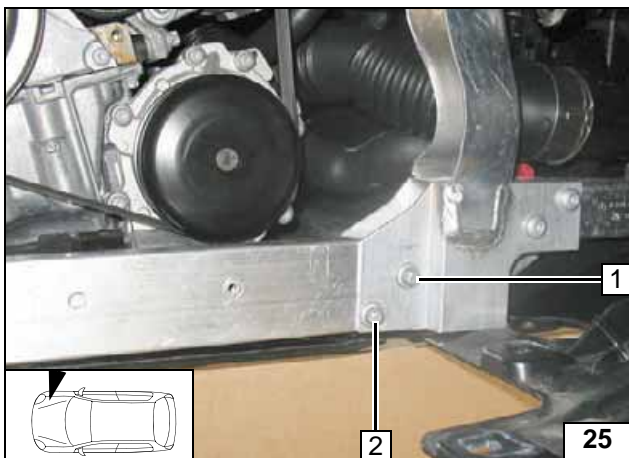

- 1 Unscrew original vehicle bolt by approx. 5mm
- 2 Remove original vehicle bolt, will be re-used

Preparing Installation Location

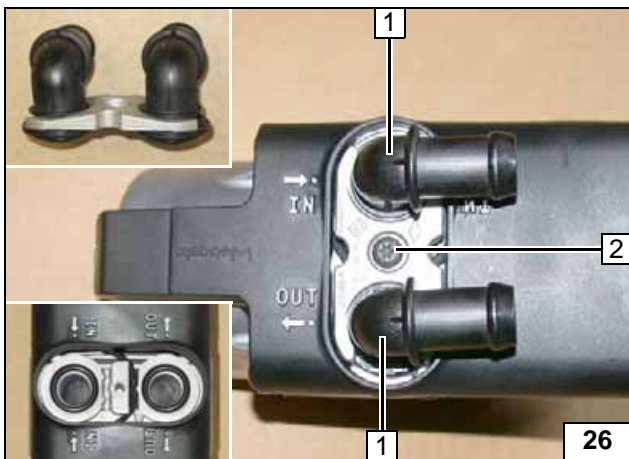


Preparing Heater

- 1 Water connection piece, sealing ring [2x each]
- 2 5x15 self-tapping bolt, retaining plate of water connection piece




Installing water connection piece

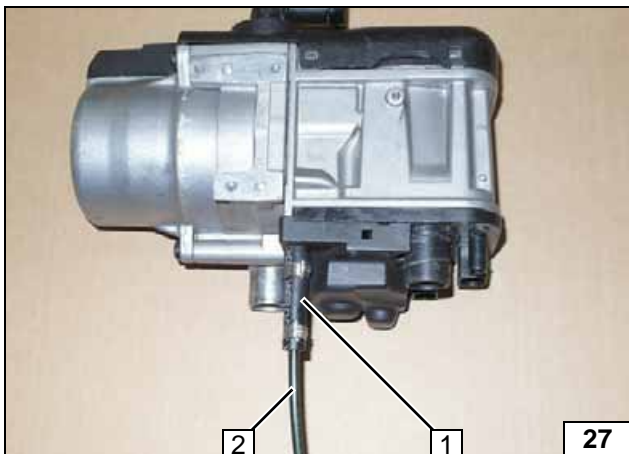

- 1 Hose section, 10 mm dia. clamp [2x]
- 2 Fuel line

Premounting fuel line

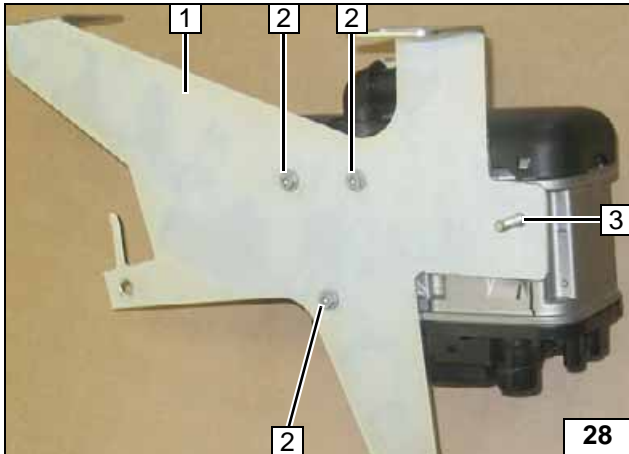


Insert M6x25 bolt **3** into hole prior to installation.

- 1 Part 1 of bracket
- 2 5x13 self-tapping bolt [3x]




Installing section 1 of bracket

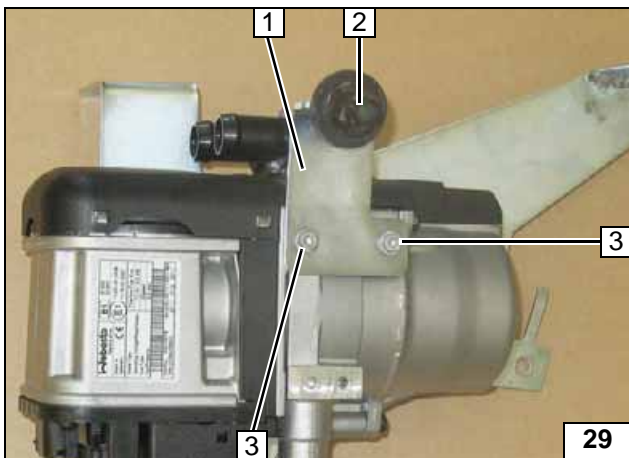

- 1 Part 2 of bracket
- 2 Attach rubber bearing
- 3 5x13 self-tapping bolt [2x]


Installing section 2 of bracket

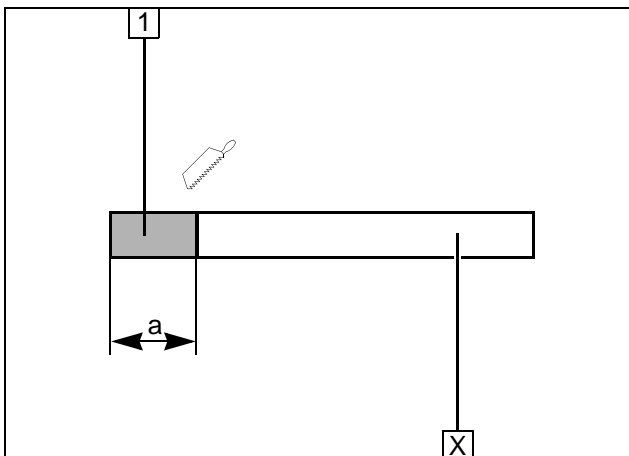

Discard section X.

- 1 Combustion air pipe
a = 40


Cutting combustion air pipe to length

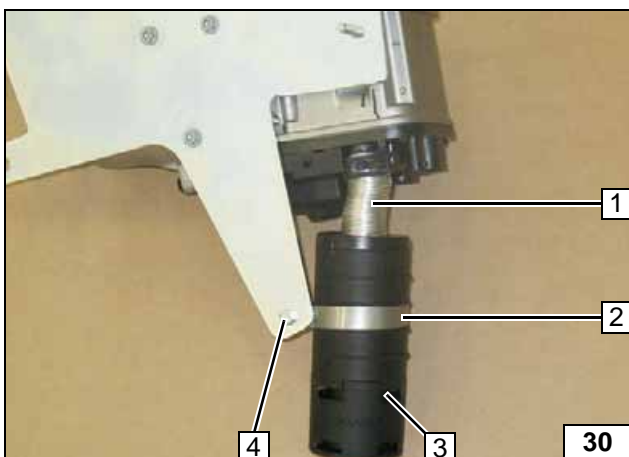

- 1 Combustion air pipe
- 2 51mm dia. clamp
- 3 Combustion air silencer
- 4 M5x16 bolt, flanged nut




Mounting combustion air silencer

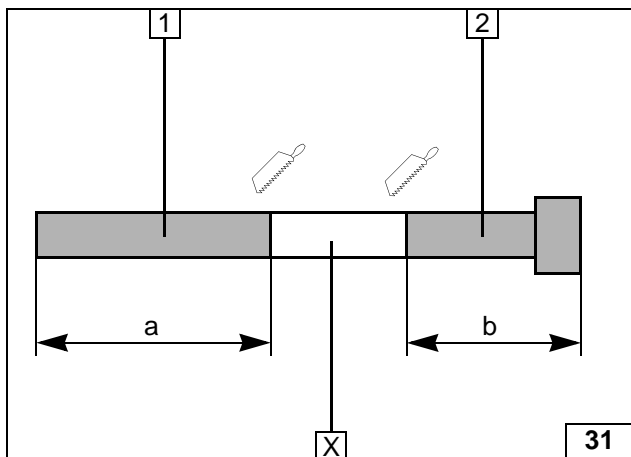

Discard section X.


- 1 Exhaust pipe
a = 150
- 2 Exhaust end section
b = 140

Preparing exhaust pipe

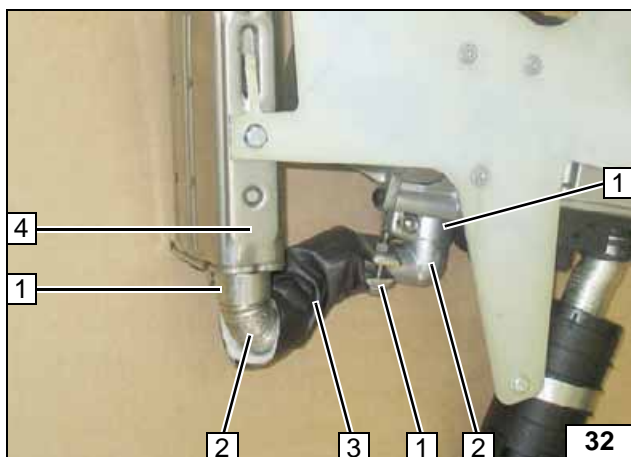


- 1 Hose clamp [3x]
- 2 Exhaust manifold
- 3 Exhaust insulation
- 4 Silencer

Mounting exhaust system

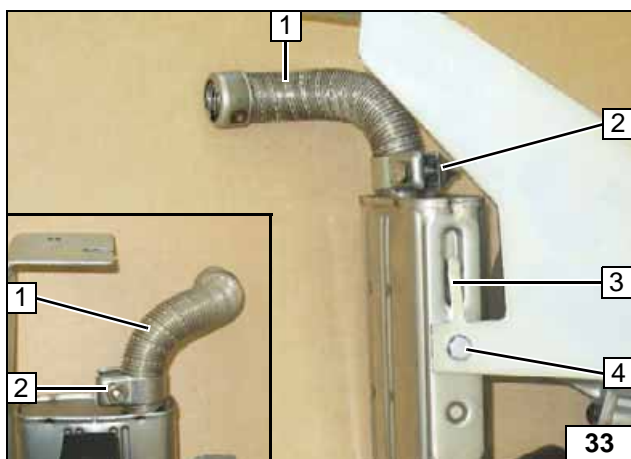

- 1 Exhaust end section
- 2 Hose clamp
- 3 Twist protection
- 4 M6x16 bolt, spring lockwasher



Mounting exhaust system

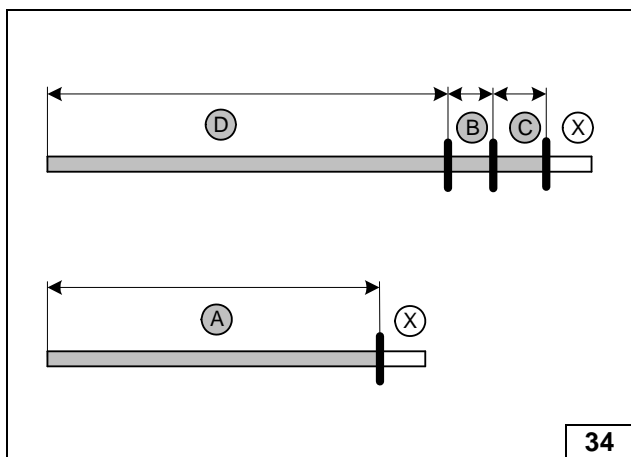

Discard section X.

	Engine code OM 651	Engine code OM 607
A =	950	1180
B =	70	70
C =	90	90
D =	1090	1300


Preparing hoses

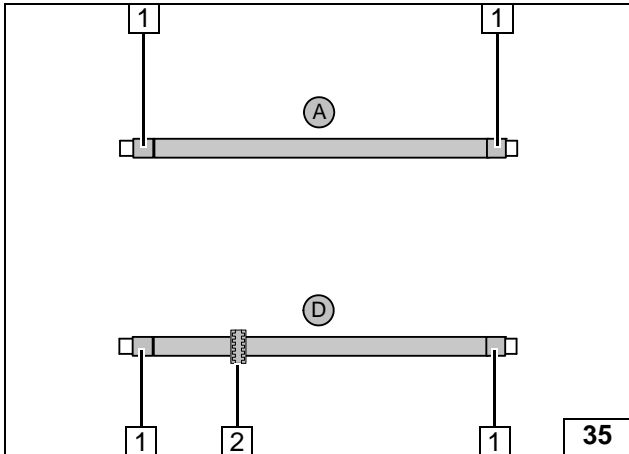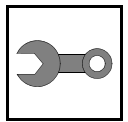

Push braided protection hoses onto hose **A** and **D** and cut to length.
Cut heat shrink plastic tubing to size.

- 1 25 mm long heat shrink plastic tubing [4x]
- 2 Push on black (sw) rubber isolator


Preparing hoses

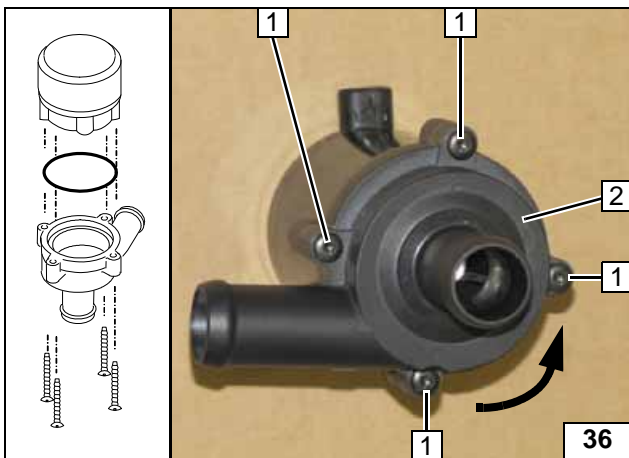

Ensure proper seating of rubber gasket.


- 1 Torx screw [4x]
- 2 Cover of circulating pump, twisted by 90°

Twisting cover of circulating pump

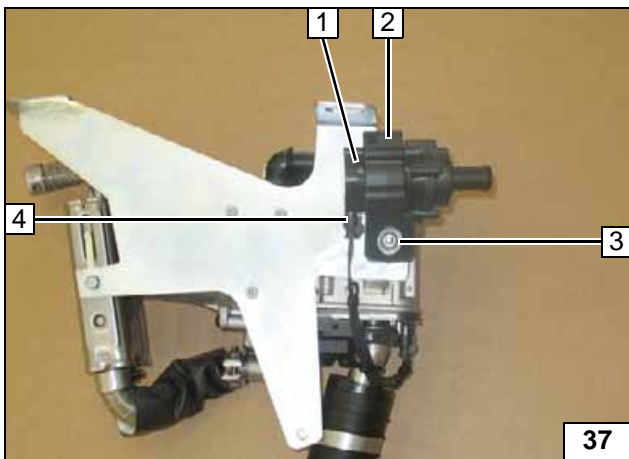

- 1 Circulating pump
- 2 Circulating pump support
- 3 Large diameter washer, flanged nut
- 4 Wiring harness of circulating pump


Installing circulating pump

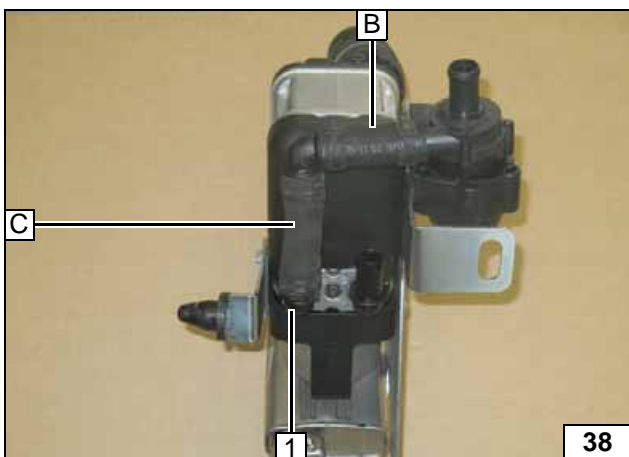

All spring clips = 25 mm dia.

- 1 Connection piece on heater inlet


Installing hoses B and C

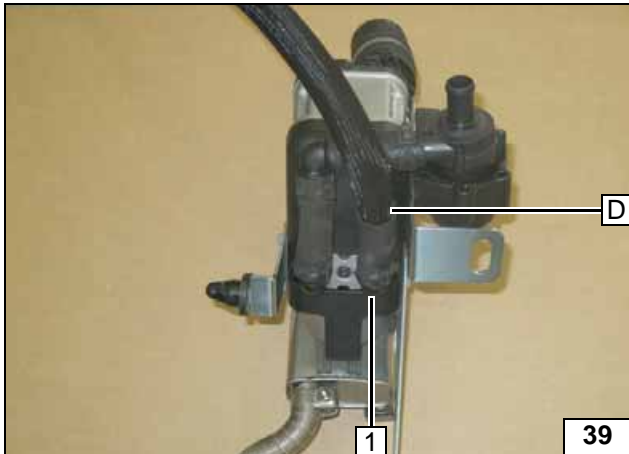

Spring clip = 25 mm dia.!

- 1 Connection piece on heater outlet

Premounting hose D

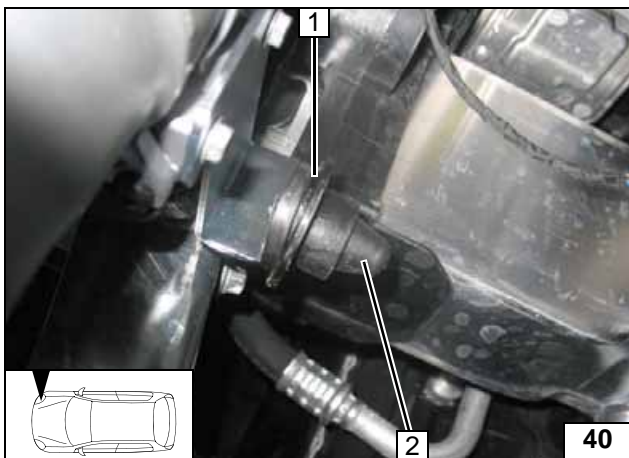


Installing Heater

Insert bracket section 2 with rubber bearing 2 into original vehicle mounting 1.




Installing heater

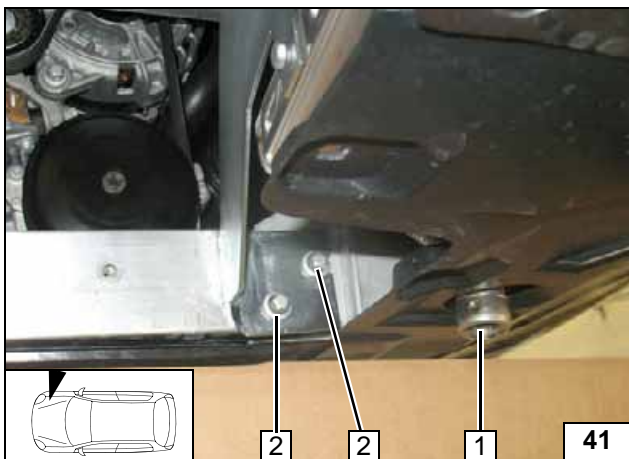



- 1 Exhaust end section
- 2 Original vehicle bolt [2x]

Installing heater

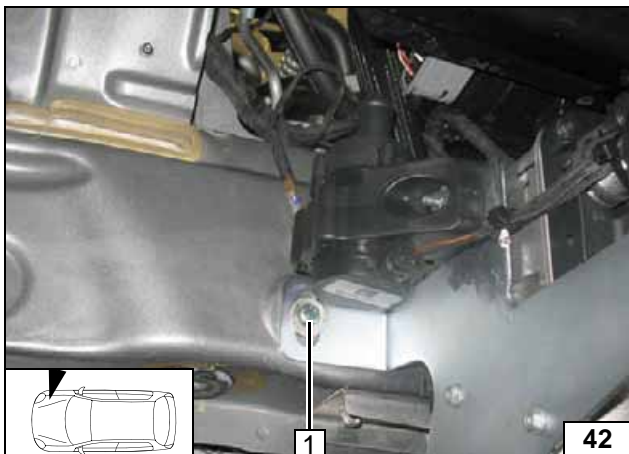


- 1 M6x20 bolt, spring lock washer, large diameter washer

Installing heater

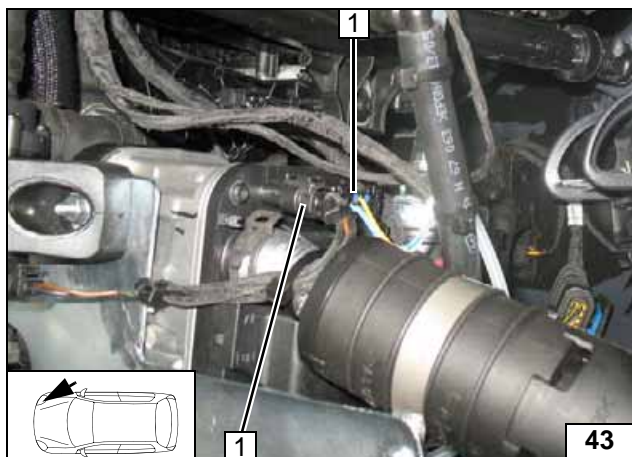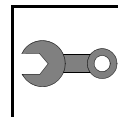

1 Wiring harness of heater [2x]

Mounting wiring harness on heater

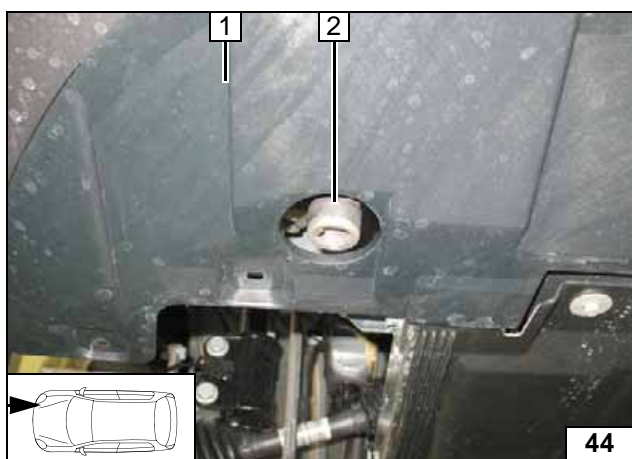

Align exhaust end section 2 in the middle of the hole and flush with underdrive protection 1.




Aligning exhaust end section




Coolant Circuit for Engine Code OM 651


WARNING!



Any coolant running off should be collected using an appropriate container. Install hoses so that they are kink-free. Unless specified otherwise, always fasten using cable ties. Position clamps so that no other hose can be damaged. When installing the hoses, the heater must be filled with coolant. The connection should be "inline" based on the following diagram:

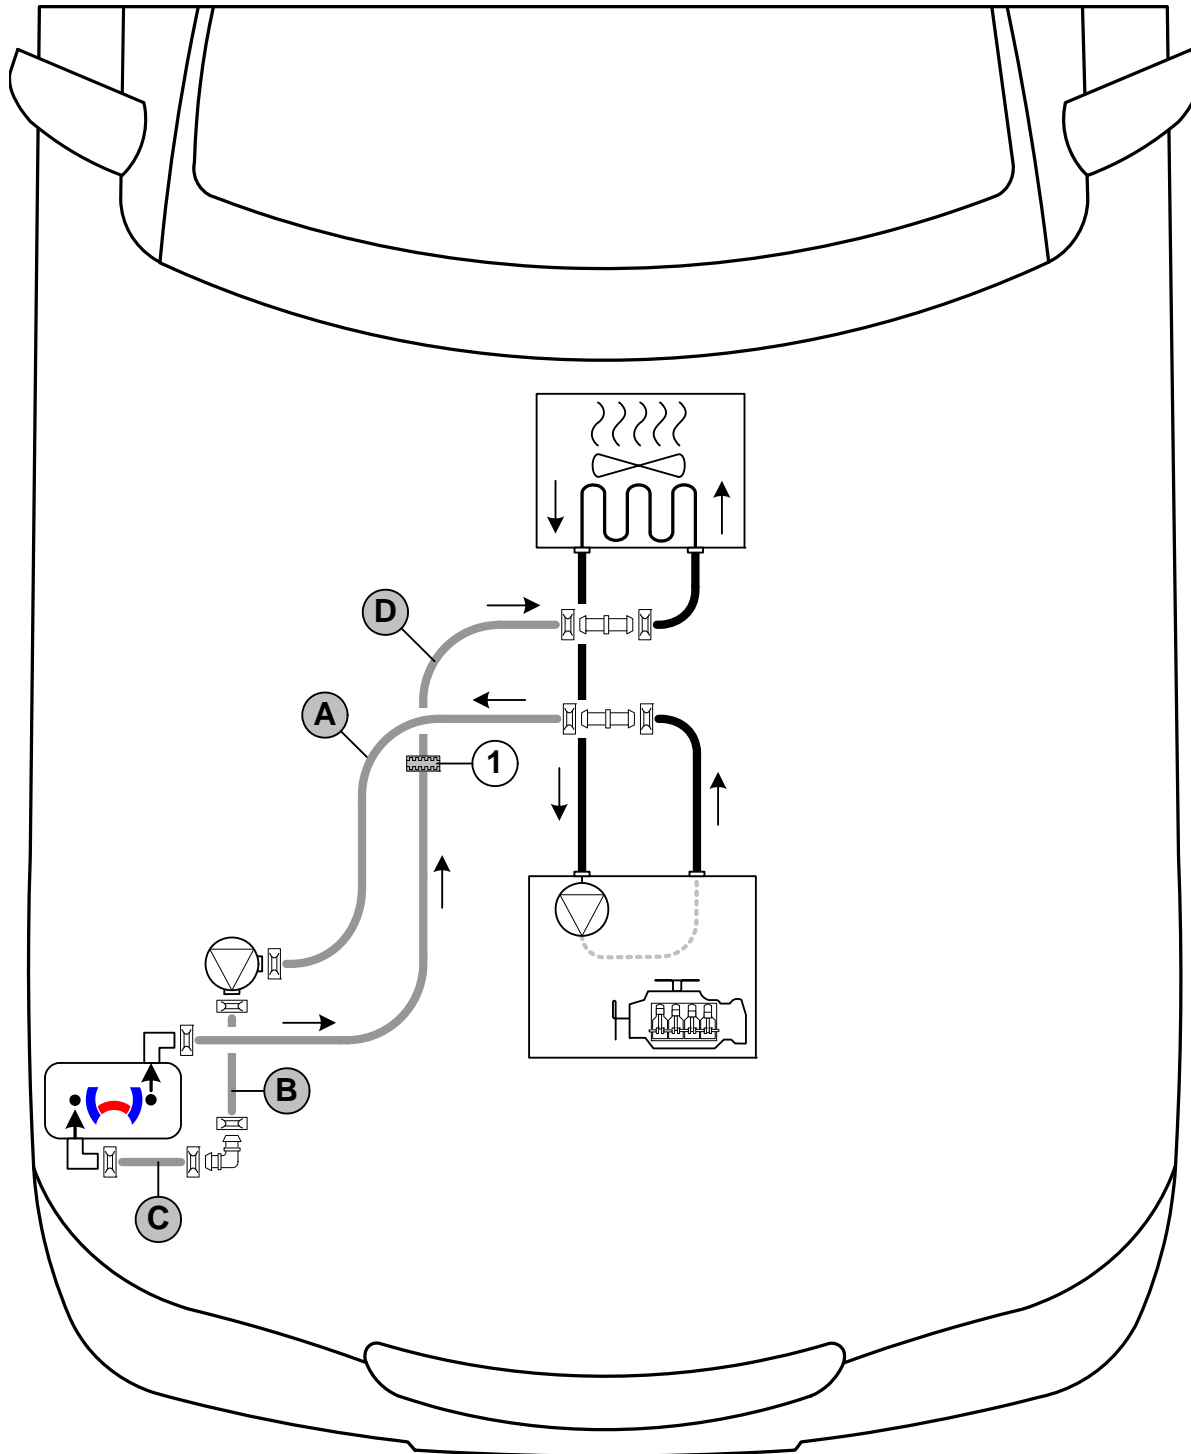

Hose routing diagram

All spring clips without a specific designation  = 25 mm dia.

1 = Black (sw) rubber isolator  !

All connecting pipes  and  = 18x18mm dia.







Coolant Circuit for Engine Code OM 607


WARNING!

Any coolant running off should be collected using an appropriate container. Install hoses so that they are kink-free. Unless specified otherwise, always fasten using cable ties. Position clamps so that no other hose can be damaged. When installing the hoses, the heater must be filled with coolant. The connection should be "inline" based on the following diagram:

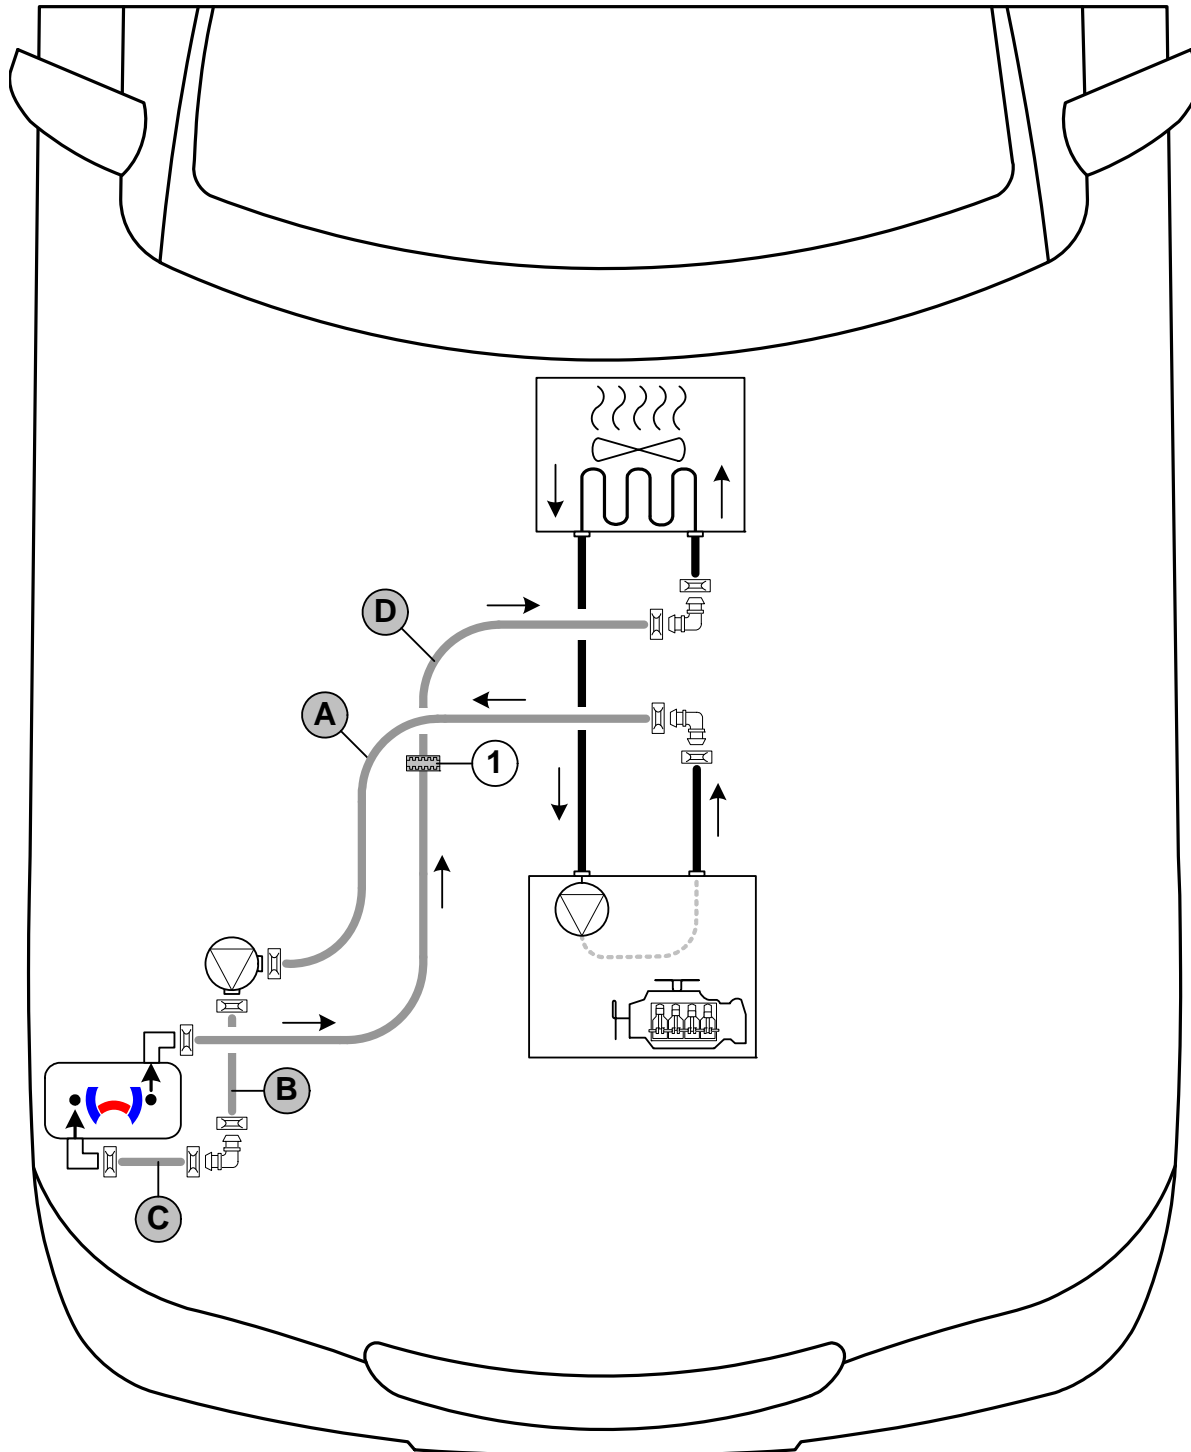


Hose routing diagram

All spring clips without a specific designation  = 25 mm dia.

1 = Black (sw) rubber isolator  !

All connecting pipes  = 18x18mm dia.



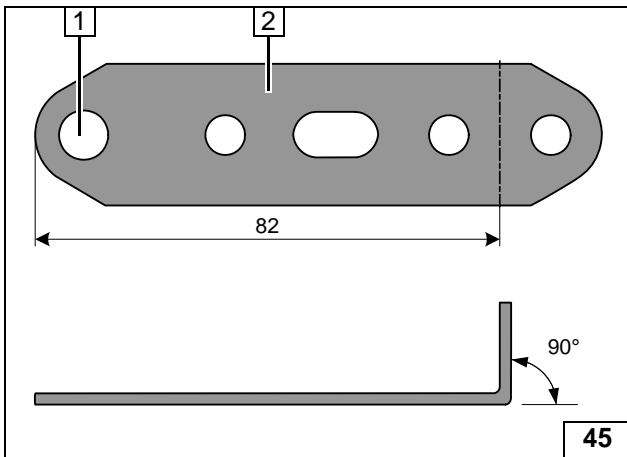

All vehicles


- 1 Drill out hole to 8 mm dia.
- 2 Perforated bracket

Preparing perforated bracket




- 1 Countersink hole with 10mm dia. drill

Preparing perforated bracket

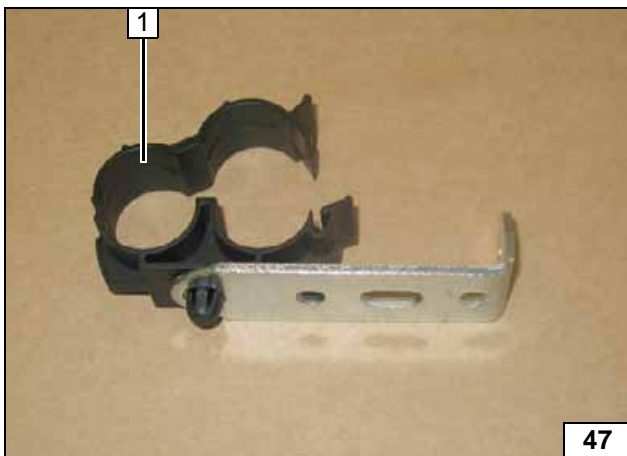


- 1 Install hose bracket

Preparing perforated bracket

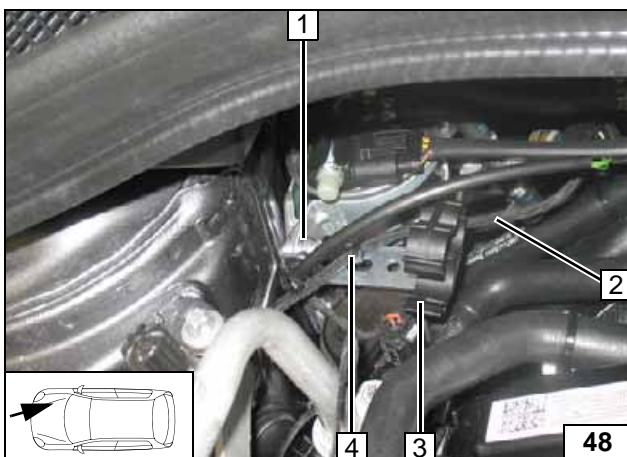

- 1 Original vehicle bolt
- 2 Wiring harness of heater
- 3 Perforated bracket with hose bracket
- 4 Cable tie

Preparing routing

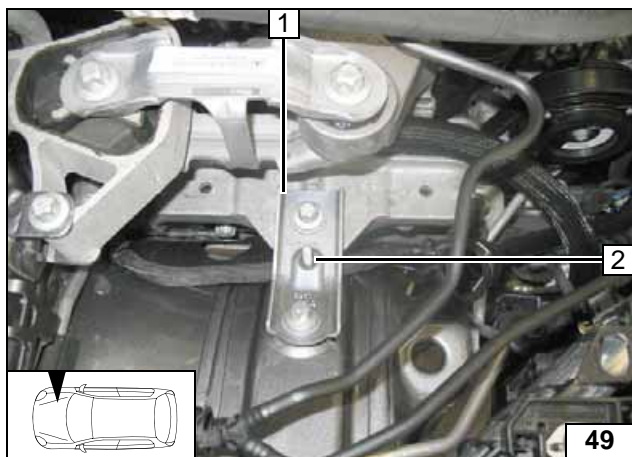


Loosen strut 1 to facilitate installation.

- 2 M6x25 bolt, original vehicle hole, pin lock




Preparing routing

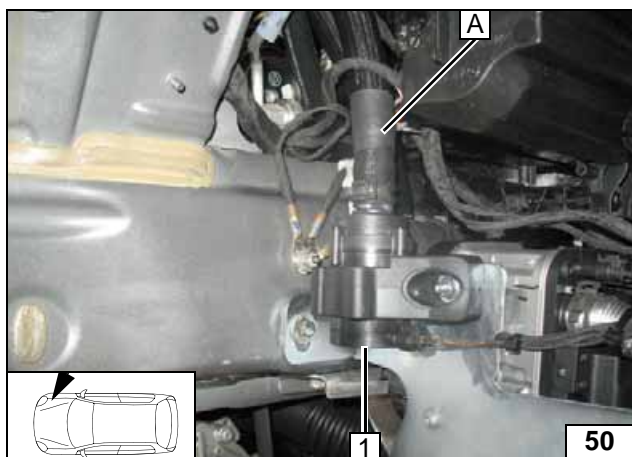


- 1 Circulating pump

Connec-
tion of hose
A

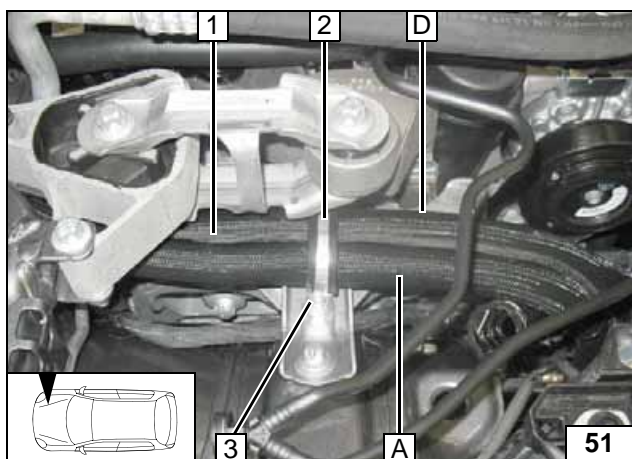



- 1 Wiring harness of heater
- 2 38mm dia. rubber-coated p-clamp
- 3 10mm shim, flanged nut

Routing in
engine
compart-
ment

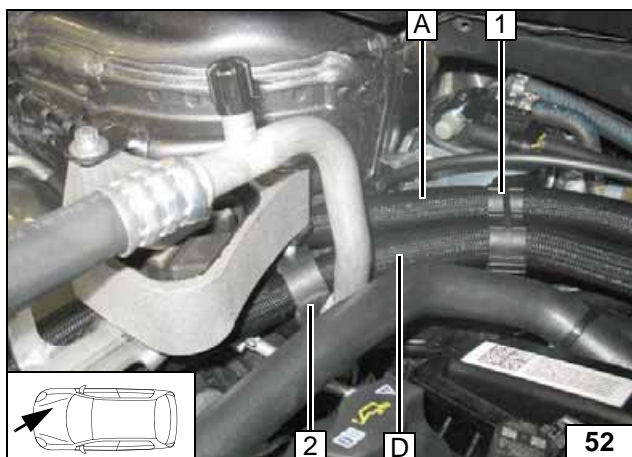

- 1 Hose bracket
- 2 Position black (sw) rubber isolator

Routing in
engine
compart-
ment

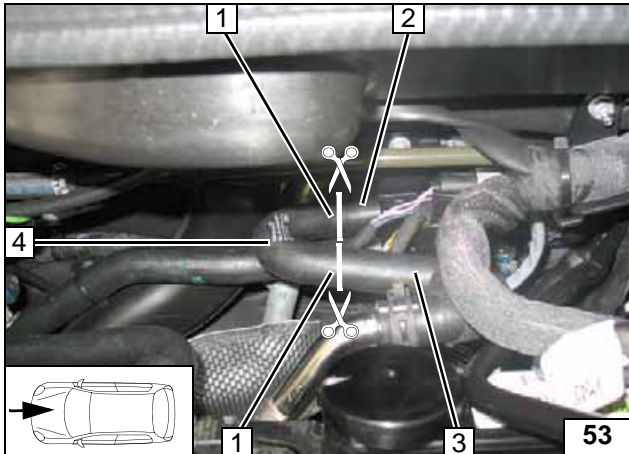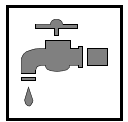


Engine code OM 651

Cut hose of engine outlet / heat exchanger inlet at marking 1 [2x].

- 2 Hose section of heat exchanger inlet
- 3 Engine outlet hose section
- 4 Discard hose section



Cutting point

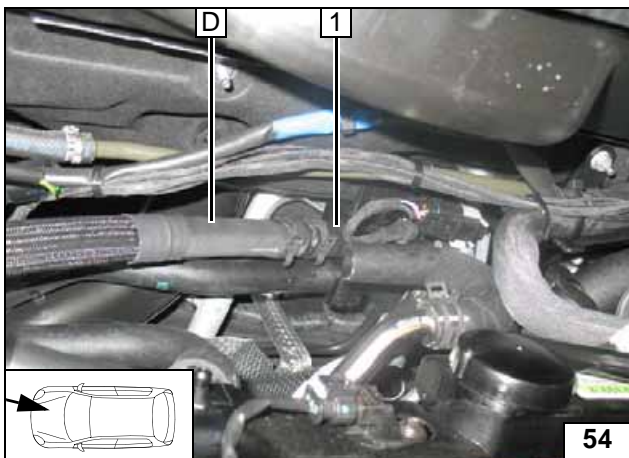


Ensure sufficient distance from neighbouring components, correct if necessary.

- 1 Hose on heat exchanger inlet




Connecting heat exchanger inlet

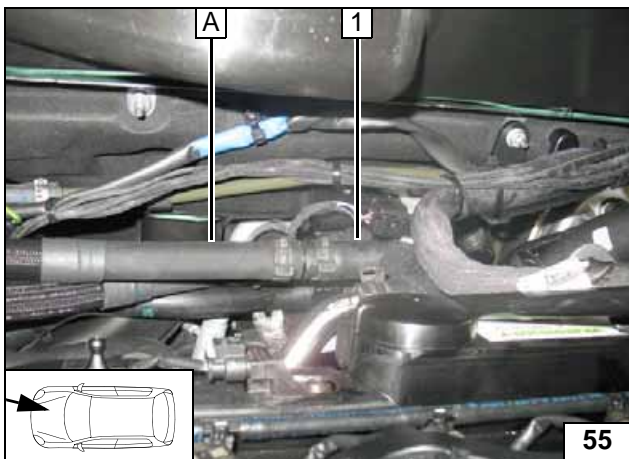

- 1 Hose of engine outlet

Connection of engine outlet

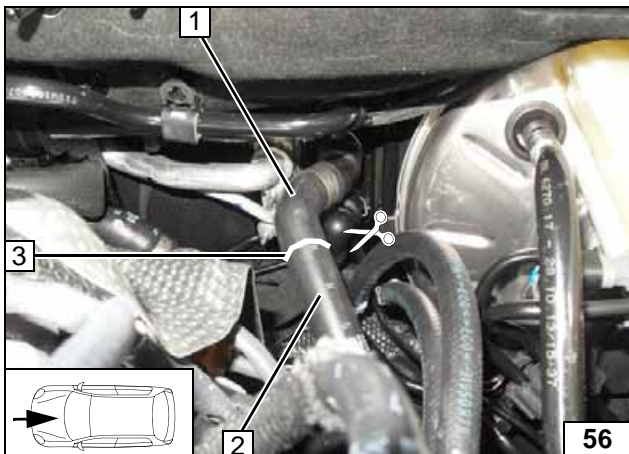



Engine code OM 607

Cut hose of engine outlet / heat exchanger inlet at marking 3.

- 1 Hose section of heat exchanger inlet
- 2 Engine outlet hose section




Cutting point

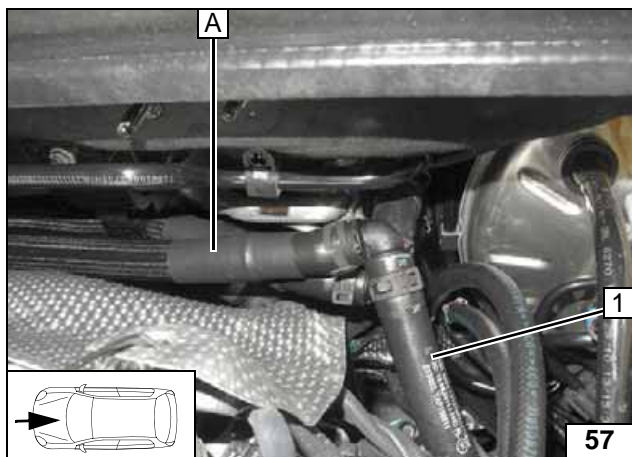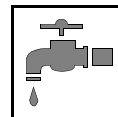


1 Hose of engine outlet

Conne-
ction of en-
gine outlet

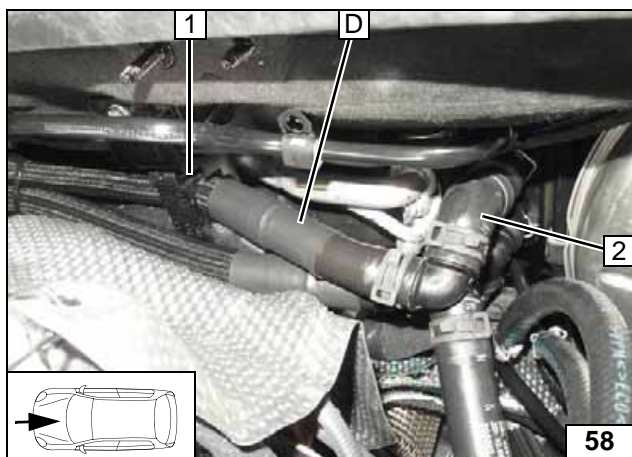


1 Original vehicle hose bracket
2 Hose on heat exchanger inlet

Connect-
ing heat ex-
changer
inlet

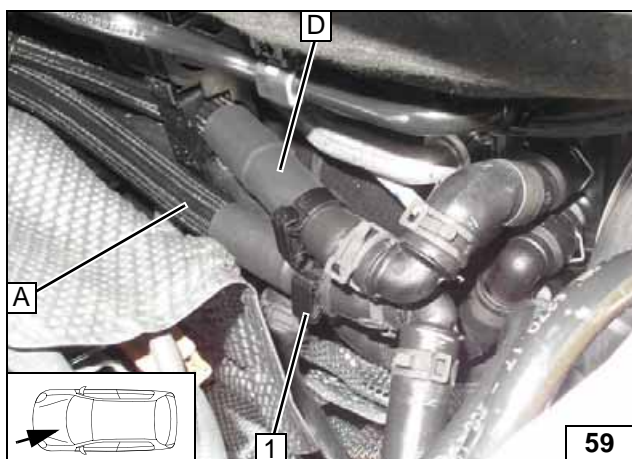

1 Lockable hose bracket


Install-
ing hose
bracket

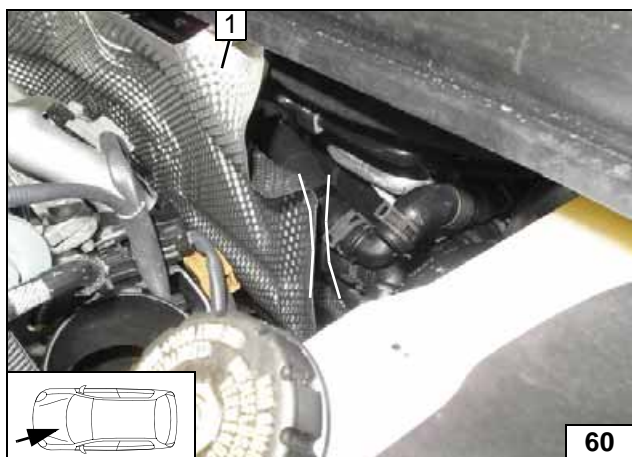

Align hoses. Mount heat guard plate 1. En-
sure sufficient distance between hose A as
well as hose D and heat guard plate 1 , cor-
rect if necessary!




Check-
ing
distance

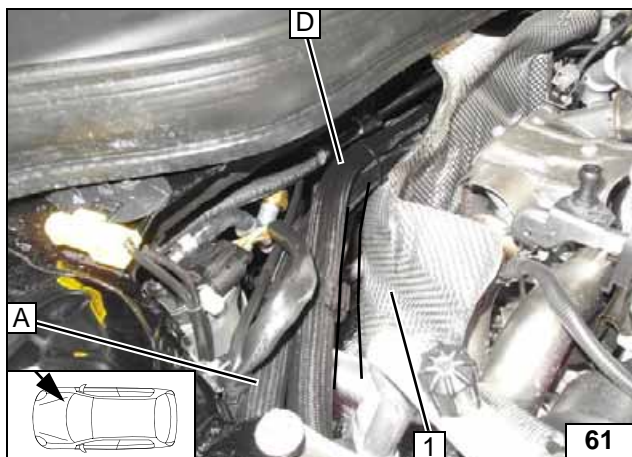

Align hoses. Ensure sufficient distance between hose **A** as well as hose **D** and heat guard plate **1**, correct if necessary!



Checking distance

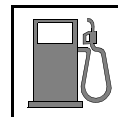

Fuel

CAUTION!

Open the vehicle's fuel tank cap, ventilate the tank and then re-close the tank lock.


Catch any fuel running off in an appropriate container.

Route fuel line and metering pump wiring harness so that they are protected against stone impact. Unless specified otherwise, always fasten using cable ties.

Provide rub protection for fuel line and wiring harness in areas where there are sharp edges.

WARNING!


The fuel line and wiring harness are routed to the metering pump as shown in the wiring harness routing diagram.

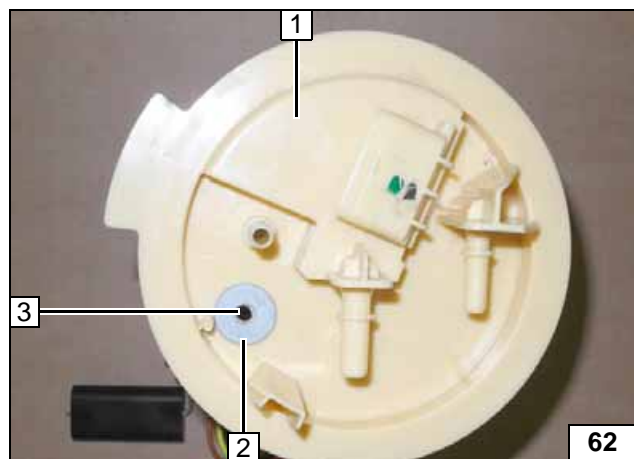

Remove fuel tank according to manufacturer's instructions. Remove fuel-tank sending unit **1** in accordance with manufacturer's instructions. Place large diameter washer with outer dia. $d_a = 21.6\text{mm}$ **2** as shown.

3 Copy hole pattern, 6 mm dia. hole


Fuel extraction

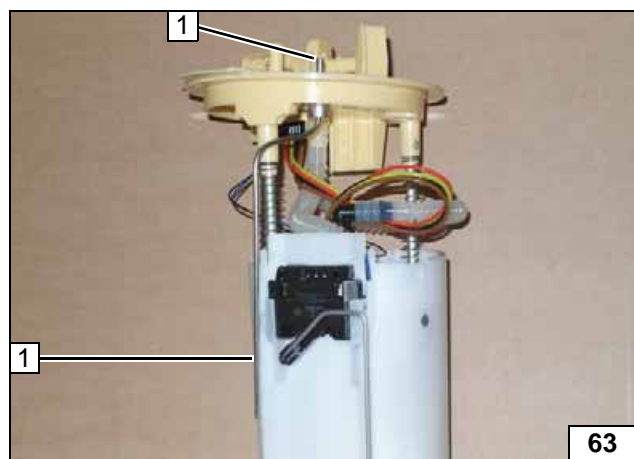

Shape fuel standpipe **1** according to template and cut to length.



Installing fuel standpipe

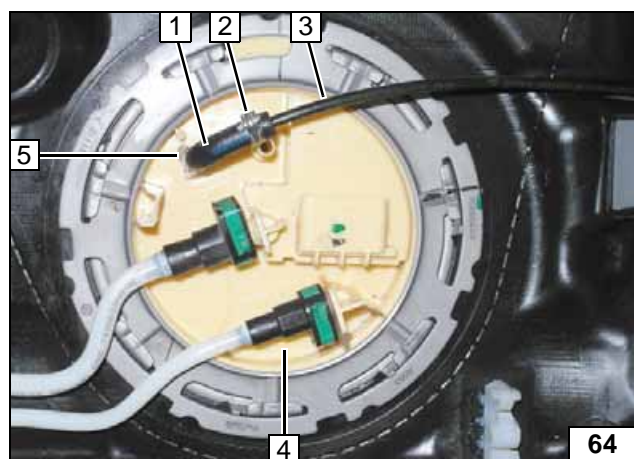


Install fuel-tank sending unit **4** in accordance with manufacturer's instructions.

- 1** 90° moulded hose, 3.5x4.5 mm dia.
- 2** 10mm dia. clamp
- 3** Fuel line
- 5** Fuel standpipe, 9 mm dia. clamp




Connecting fuel line

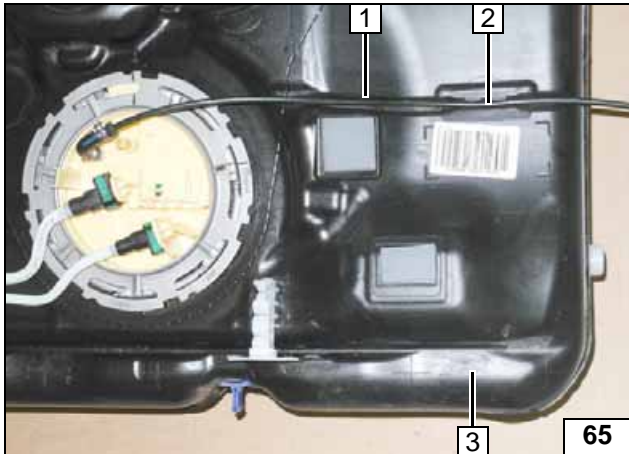

Fasten fuel line 1 to position 2. Install fuel-tank 3 according to manufacturer's instructions.



Routing fuel line

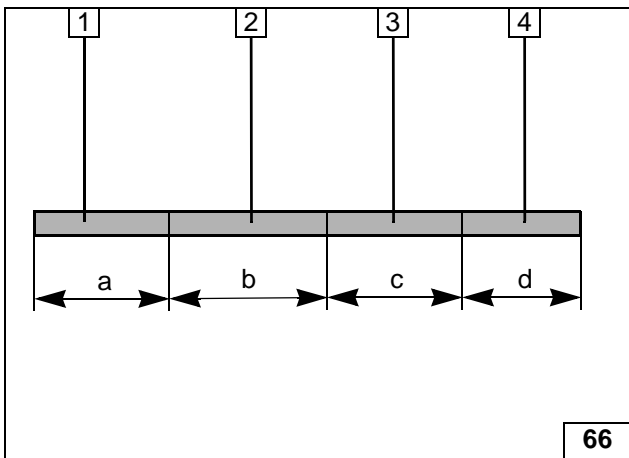


Cut 10mm dia. corrugated tube to length.

- 1 Corrugated tube 1
a = 300
- 2 Corrugated tube 2
b = 330
- 3 Corrugated tube 3
c = 200
- 4 Corrugated tube 4
d = 300




Preparing corrugated tube

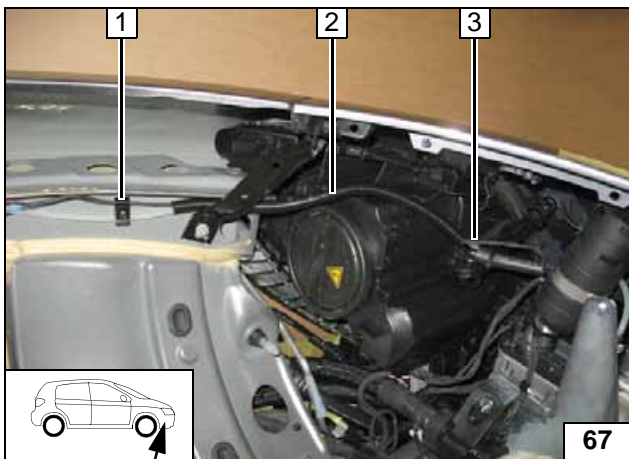

- 1 Line holder
- 2 Corrugated tube 1
- 3 Fuel line and wiring harness of metering pump

Routing lines


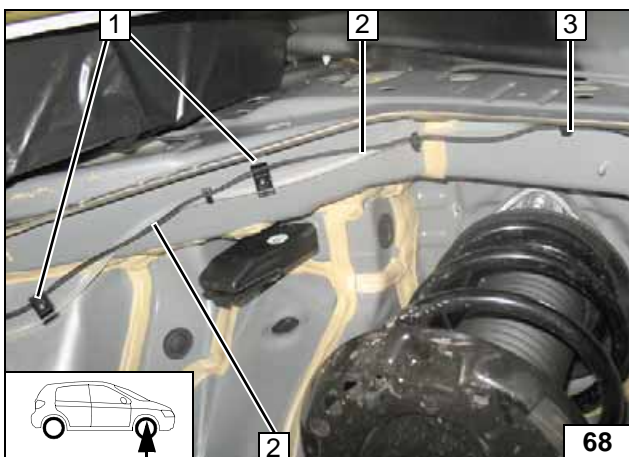


Route fuel line and wiring harness of metering pump at position 3 in elbow for later installation of wheel-well inner panel.



Routing lines

- 1 Line holder
- 2 Fuel line and wiring harness of metering pump

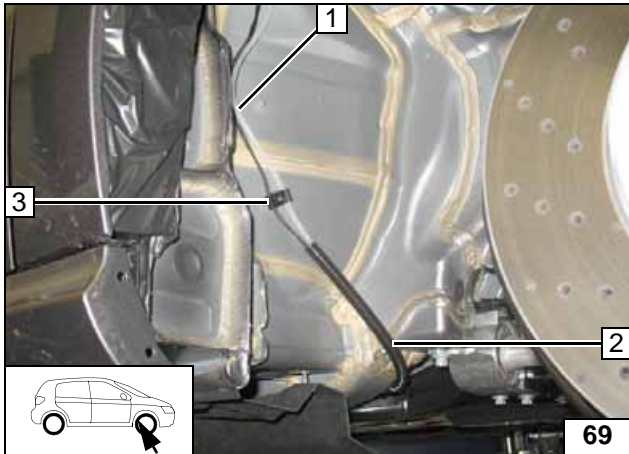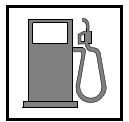

Route fuel line and wiring harness of metering pump at position 1 in elbow to keep it from coming into contact with wheel-well inner panel.


- 2 Corrugated tube 2
- 3 Line holder

Routing lines




- 1 Line holder

Routing lines

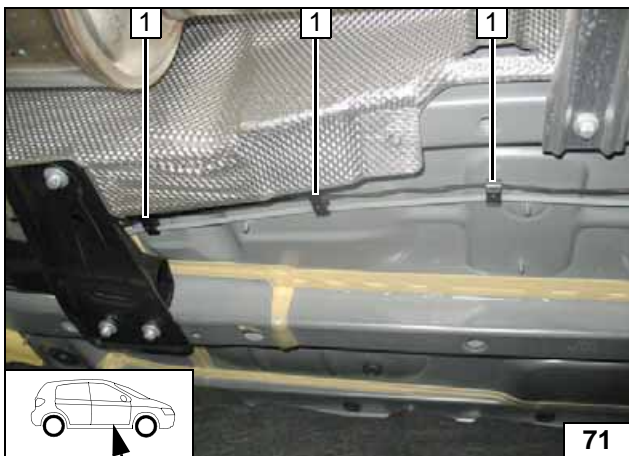



- 1 Line holder [3x]

Routing lines

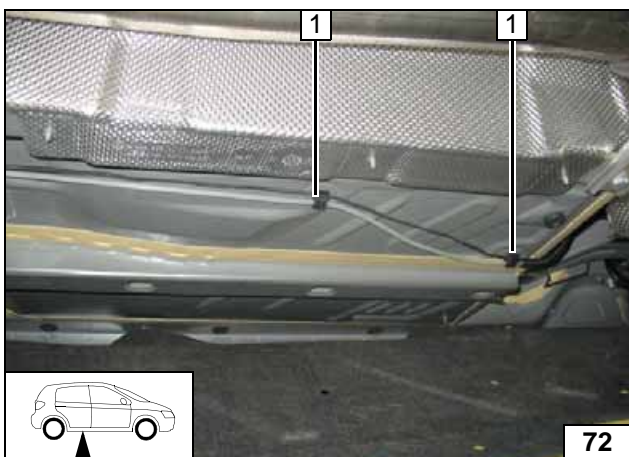

- 1 Line holder [2x]


Routing lines

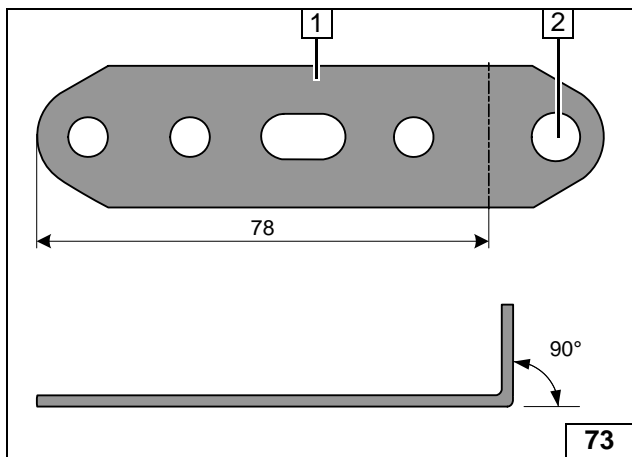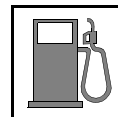

- 1 Perforated bracket
- 2 Drill out hole to 9 mm dia.



Preparing perforated bracket

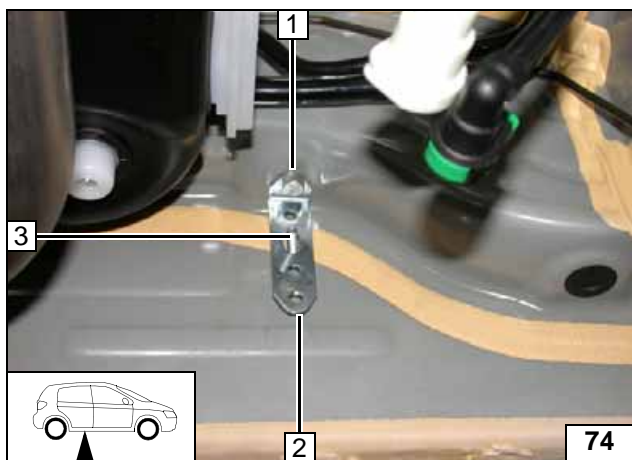


Discard rubber plug at position 1 prior to installation.

- 1 M8x20 bolt, spring lockwasher, original vehicle threaded hole
- 2 Perforated bracket
- 3 Plug through M6x25 bolt




Installing perforated bracket

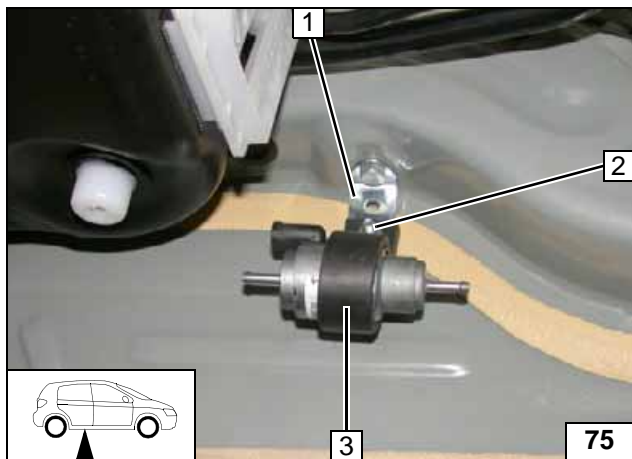


- 1 Perforated bracket
- 2 Support angle bracket, flanged nut
- 3 Metering pump support



Installing metering pump

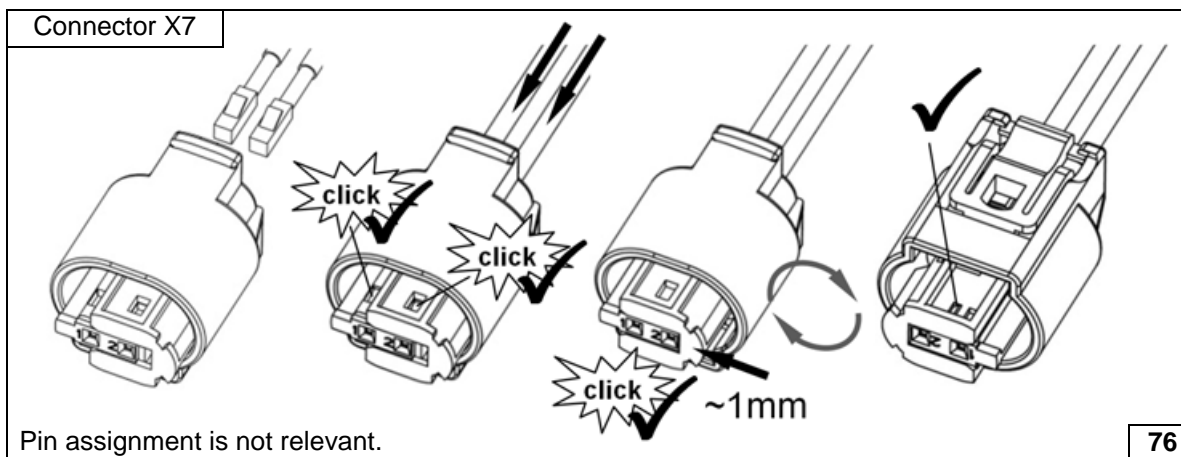

Completing connector of metering pump

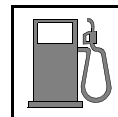

Check the position of the components; correct if necessary. Check that they have freedom of movement.

- 1 90° moulded hose, 10 mm dia. clamp [2x]
- 2 Wiring harness of metering pump, connector X7 mounted
- 3 Hose, 10 mm dia. clamp [2x]
- 4 Corrugated tube 4
- 5 Fuel line of fuel standpipe
- 6 Corrugated tube 3
- 7 Fuel line of Heater

**Connec-
tion of me-
tering
pump**



Final Work

WARNING!

Reassemble the disassembled components in reverse order. Check all hoses, clamps and all electrical connections for firm seating. Insulate and tie back all loose wires.
Only use manufacturer-approved coolant. Spray the heater components with anti-corrosion wax (Tectyl 100K, Order No. 111329).





- **Connect the battery.**
- **Fill and bleed the coolant circuit according to the vehicle manufacturer's instructions.**
- **Adjust digital timer, teach Telestart transmitter**
- **Place caution label "Switch off parking heater before refuelling" in the area of the filler neck.**
- **For initial start-up and function check, see installation instructions**





Template for Fuel Standpipe

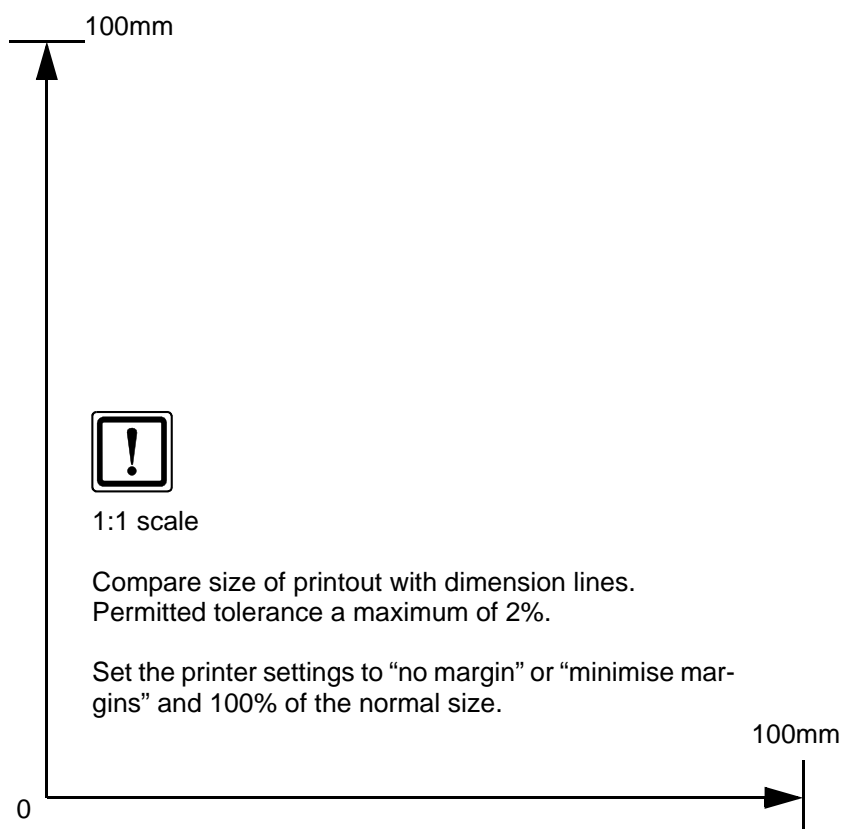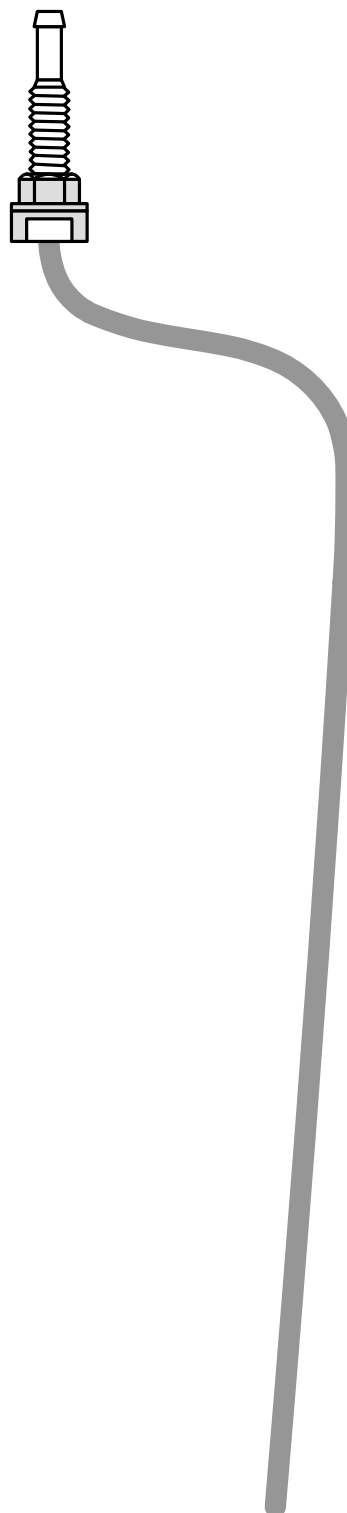

Operating Instructions for Thermanik

Please remove page and add to the vehicle operating instructions.

Note:

We recommend matching the heating time to the driving time.
Heating time = driving time

Example:

For a driving time of approx. 20 min. (in one direction), we recommend not exceeding a switch-on time of 20 min.

If vehicles have passenger compartment monitoring, this must be deactivated in addition to vehicle settings for the heating operation.
Deactivation instructions can be found in the operating instructions of the vehicle.

The following settings are to be made prior to turning off the vehicle in order to improve heating.



- 1 Set temperature to "max."



- 1 20A heater fuse F1
- 2 1A fuse F2 of heater control



A/C control panel

Engine compartment fuses



Operating Instructions for Thermotronik

Please remove page and add to the vehicle operating instructions.

Note:


We recommend matching the heating time to the driving time.
Heating time = driving time

Example:

For a driving time of approx. 20 min. (in one direction), we recommend not exceeding a switch-on time of 20 min.

If vehicles have passenger compartment monitoring, this must be deactivated in addition to vehicle settings for the heating operation.
Deactivation instructions can be found in the operating instructions of the vehicle.

The following settings are to be made prior to turning off the vehicle to improve the heat input:

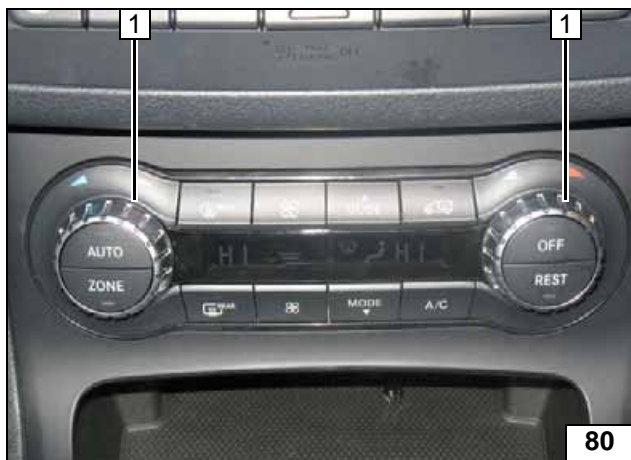

- 1 Set temperature on both sides to "HI"

A/C control panel



- 1 20A heater fuse F1
- 2 1A fuse F2 of heater control

Engine compartment fuses

