



Water Heater

Thermo Top Evo Parking Heater



With FuelFix

Installation Documentation VW Polo

Validity

Manufacturer	Model	Type	Model year	EG BE No. / ABE
VW	Polo	6R	From model year 2015	e1 * 2001 / 116 * 0510 * ...

Motorisation	Fuel	Emission standard	Transmission type	Output in kW	Displacement in cm ³	Engine code
1.2 TSI	Petrol	Euro 6	7-gear DSG	66	1197	CJZC

DSG = dual clutch transmission

Left-hand drive vehicle

Verified equipment variants: Automatic air-conditioning
Front fog lights
LED daytime running lights
Headlight washer system
Start / Stop
Blue Motion
Euro 6

Not verified: Manual air-conditioning
Passenger compartment monitoring

Total installation time: approx. 8 hours

VW Polo

Table of Contents

Validity	1	Preparing Installation Location	16
Necessary Components	2	Preparing Heater	18
Installation Instructions	2	Installing Heater	20
Information on Total Installation Time	2	Exhaust System Section 1	23
Information on Operating and Installation Instructions	3	Coolant Circuit	24
Information on Validity	4	Fuel	30
Technical Information	4	Installing FuelFix	33
Explanatory Notes on Document	4	Combustion Air	39
Preliminary Work	5	Exhaust System Section 2	40
Heater Installation Location	5	Exhaust End Fastener Installation	40
Preparing Electrical System	6	Final Work	42
Electrical System	10	FuelFix Template	43
Automatic Air-Conditioning Fan Controller	11	Operating Instructions for Automatic Air-Conditioning	44
Heater Control Installation	14		
MultiControl CAR Option	14		
Remote Option (Telestart)	14		
ThermoCall Option	15		

Necessary Components

Description	Order No.:
Basic delivery scope of Thermo Top Evo	In accordance with price list
Installation kit with FuelFix for VW Polo 2015 Petrol	1325311A
Additional kit automatic A/C for VW Polo 2015 Petrol	1323164_
In case of Telestart, heater control, as well as indicator lamp in consultation with end customer	In accordance with price list

Webasto Individual Option

Description	Order No.:
Webasto Individual Auxiliary Heating additional kit	1320077_
Webasto Individual Quick additional kit	9030826_
Webasto Individual Select additional kit	9030828_

Installation Instructions

Arrange for the vehicle to be delivered with the tank only about ¼ full.

The installation location of the push button in case of Telestart or ThermoCall should be confirmed with the end customer.

Depending on the space required and the vehicle manufacturer's instructions, we recommend the use of a vehicle battery with a higher electrical capacity.

Information on Total Installation Time

The total installation time includes the time needed for mounting and demounting the vehicle-specific components, the heater specific installation time and all other times required for the system integration and initial start-up of the heater.

The total installation time may vary for vehicle equipment other than provided.

Information on Operating and Installation Instructions

1 Important information (not complete)

1.1 Installation and repair



The improper installation or repair of Webasto heating and cooling systems can cause fire or the leakage of deadly carbon monoxide, leading to serious injury or death.



To install and repair Webasto heating and cooling systems you need to have completed a special company training course and have the appropriate technical documentation, special tools and special equipment.



Installation and repair may ONLY be carried out by persons trained and certified in a Webasto training course. NEVER try to install or repair Webasto heating or cooling systems if you have not completed a Webasto training course, you do not have the necessary technical skills and you do not have the technical documentation, tools and equipment available to ensure that you can complete the installation and repair work properly.

Only use genuine Webasto parts. See the Webasto air and water heaters accessories catalogue for this purpose.

1.2 Operation

To ensure safe operation, we recommend having the heater checked every two years by an authorised Webasto dealer, especially when used over a long period and/or under extreme environmental conditions.

Do not operate the heater in closed rooms due to the danger of poisoning and suffocation.

Always switch off the heater before refuelling.

The heater may only be used with the prescribed fuel diesel (DIN EN 590) or petrol (DIN EN 228).

The heater may not be cleaned with a high-pressure cleaner.

1.3 Please note

ALWAYS follow all Webasto installation and operating instructions and observe all warnings.

To become familiar with and understand all functions and properties of the heater, the operating instructions must be read carefully and observed at all times.

For proper, safe installation and repair work, the installation instructions with all warnings and safety information must be carefully read and observed at all times. Please always contact a workshop authorised by Webasto for all installation and repair work.

Important

Webasto shall assume no liability for defects, damage and injuries resulting from a failure to observe the installation, repair and operating instructions of the information contained in them.

This liability exclusion particularly applies to improper installations and repairs, installations and repairs by untrained persons or in the case of a failure to use genuine spare parts.

The liability due to culpable disregard to life, limb or health and due to damage or injuries caused by a wilful or reckless breach of duty remain unaffected, as does the obligatory product liability.

Installation should be carried out according to the general, standard rules of technology. Unless specified otherwise, fasten hoses, lines and wiring harnesses to original vehicle lines and wiring harnesses using cable ties. Insulate loose wire ends and tie back. Connectors on electronic components must audibly snap into place during assembly.

Sharp edges should be fitted with rub protection. Spray unfinished body areas, e.g. drilled holes, with anti-corrosion wax (Tectyl 100K).

Observe the instructions and guidelines of the respective vehicle manufacturer for demounting and mounting vehicle specific components!

The initial startup is to be executed with the Webasto Thermo Test Diagnosis.

When installing a programmable control module (e.g. a PWM Gateway), the corresponding settings must be checked or adjusted.

2 Statutory regulations governing installation

Guidelines	Thermo Top Evo
Heating Directive ECE R122	E1 00 0258
EMC Directive ECE R10	E1 04 5627

Note

The regulations of these guidelines are binding in the scope of the Directive 70/156/EEC and/or 2007/46/EC (for new vehicle models from 29/04/2009) and should also be observed in countries in which there are no special regulations.

Important

Failure to follow the installation instructions will result in the invalidation of the type approval for the heater and therefore invalidation of the general **homologation of the vehicle**.

Note

The heater is licensed in accordance with paragraph 19, section 3, No. 2b of the StVZO (German Road Traffic Licensing Authority).

2.1 Excerpt from ECE regulation 122 (heating system) paragraph 5 for the installation of the heater

Beginning of excerpt.

ANNEX VII

REQUIREMENTS FOR COMBUSTION HEATERS AND THEIR INSTALLATION

1. GENERAL REQUIREMENTS

1.7.1. A clearly visible tell-tale in the operator's field of view shall inform when the combustion heater is switched on or off.

2. VEHICLE INSTALLATION REQUIREMENTS

2.1. Scope

2.1.1. Subject to paragraph 2.1.2, combustion heaters shall be installed according to the requirements of this Annex.

2.1.2. Vehicles of category O having liquid fuel heaters are deemed to comply with the requirements of this Annex.

2.2. Positioning of heater

2.2.1. Body sections and any other components in the vicinity of the heater must be protected from excessive heat and the possibility of fuel or oil contamination.

2.2.2. The combustion heater shall not constitute a risk of fire, even in the case of overheating. This requirement shall be deemed to be fulfilled if the installation ensures an adequate distance to all parts and suitable ventilation, by the use of fire resistant materials or by the use of heat shields.

2.2.3. In the case of M2 and M3 vehicles, the heater must not be positioned in the passenger compartment. However, an installation in an effectively sealed envelope which also complies with the conditions in paragraph 2.2.2 may be used.

2.2.4. The label referred to in paragraph 1.4 or a duplicate, must be positioned so that it can be easily read when the heater is installed in the vehicle.

2.2.5. Every reasonable precaution should be taken in positioning the heater to minimise the risk of injury and damage to personal property.

2.3. Fuel supply

2.3.1. The fuel filler must not be situated in the passenger compartment and must be provided with an effective cap to prevent fuel spillage.

2.3.2. In the case of liquid fuel heaters, where a supply separate to that of the vehicle is provided, the type of fuel and its filler point must be clearly labelled.

2.3.3. A notice, indicating that the heater must be shut down before refuelling, must be affixed to the fuelling point. In addition a suitable instruction must be included in the manufacturer's operating manual.

2.4. Exhaust system

2.4.1. The exhaust outlet must be located so as to prevent emissions from entering the vehicle through ventilators, heated air inlets or opening windows.

2.5. Combustion air inlet

2.5.1. The air for the combustion chamber of the heater must not be drawn from the passenger compartment of the vehicle.

2.5.2. The air inlet must be so positioned or guarded that blocking by rubbish or luggage is unlikely.

2.6. Heating air inlet

2.6.1. The heating air supply may be fresh or recirculated air and must be drawn from a clean area not likely to be contaminated by exhaust fumes emitted either by the propulsion engine, the combustion heater or any other vehicle source.

2.6.2. The inlet duct must be protected by mesh or other suitable means.

2.7. Heating air outlet

2.7.1. Any ducting used to route the hot air through the vehicle must be so positioned or protected that no injury or damage could be caused if it were to be touched.

2.7.2. The air outlet must be so positioned or guarded that blocking by rubbish or luggage is unlikely.

End of excerpt.

In multilingual versions the German language is binding.

Information on Validity

This installation documentation applies to VW Polo Petrol vehicles - for validity, see page 1 - from model year 2015 and later, assuming technical modifications to the vehicle do not affect installation, any liability claims excluded. Depending on the vehicle version and equipment, modifications may be necessary during installation with respect to this 'installation documentation'.

Vehicle and engine types, equipment variants and other specifications not listed in this installation documentation have not been tested. However, installation according to this installation documentation may be possible.

Technical Information

Special Tools

- Hose clamp pliers for auto-tightening hose clamps
- Hose clamp pliers for Clic hose clamps of type W
- Automatic wire stripper, 0.2 - 6mm²
- Crimping pliers for cable lug / tab connector, 0.5 - 6mm²
- Torque wrench for 2.0 - 10 Nm
- Hose clamping pliers
- Metric thread-setter kit
- Deep-hole marker
- Webasto Thermo Test Diagnosis with current software

Dimensions

- All dimensions are in mm.


Tightening torque values

- Tightening torque values of 5x13 heater bolts and 5x11 heater stud bolts = 8Nm.
- Tightening torque value of 5x15 water connection piece retaining plate bolt = 7Nm.
- Tighten other bolt connections in accordance with manufacturer's instructions or in accordance with state-of-the-art technology.

Explanatory Notes on Document

You will find an identification mark on the outside top right corner of the page in question to provide you with a quick overview of the individual working steps.


Mechanics

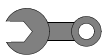


Electrics



Coolant Circuit

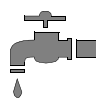


Combustion Air

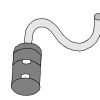

Fuel



Exhaust Gas

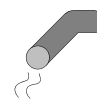

Software



Special features are highlighted using the following symbols:

Specific risk of damage to components.



Reference to the manufacturer's vehicle-specific documents.



Specific risk due to electrical voltage.



Reference to specific installation instructions of Webasto components (demonstrated with the example of the FuelFix).



Specific risk of fire or explosion.



Reference to general installation instructions of Webasto components.




Reference to a special technical feature.



Tightening torque according to the manufacturer's vehicle-specific documents.



The arrow in the vehicle icon indicates the position on the vehicle and the viewing angle.

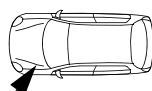

Preliminary Work

Vehicle




- Open the fuel tank cap.
- Ventilate the fuel tank.
- Close the fuel tank cap again.
- Depressurise the cooling system.
- Remove the battery.
- Remove the windscreen wipers.
- Remove the coolant reservoir cap.
- Remove the partition wall of the coolant reservoir.
- Remove the windscreen wiper motor.
- Remove the headlights on the left and right.
- Remove the bumper trim.
- Remove the horn (one or two can be present) with the bracket.
- Remove the side instrument panel trim on the left.
- Remove the trim of the radio and navigation system slot.
- Remove the trim of the A/C control panel.
- Remove the A/C control panel.
- Remove the underride protection.
- Remove the right vehicle underbody trim.
- Fold up the seat surface of the rear bench seat.
- Open the tank-fitting service lid.



Heater


- Remove years that do not apply from the type and duplicate label.
- Attach the duplicate label (type label) visibly in the engine compartment.

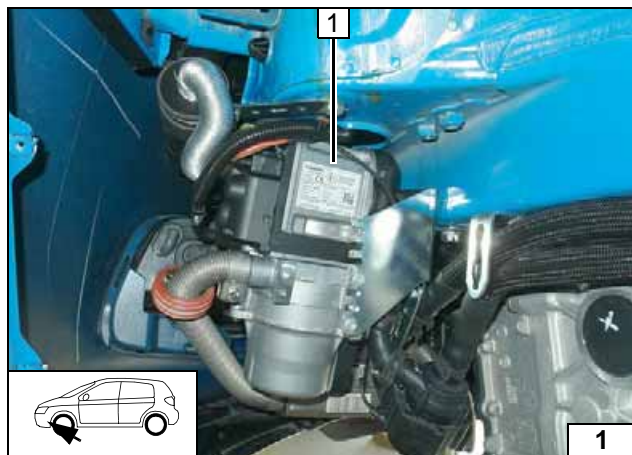

Heater Installation Location

- 1 Heater

Installation location

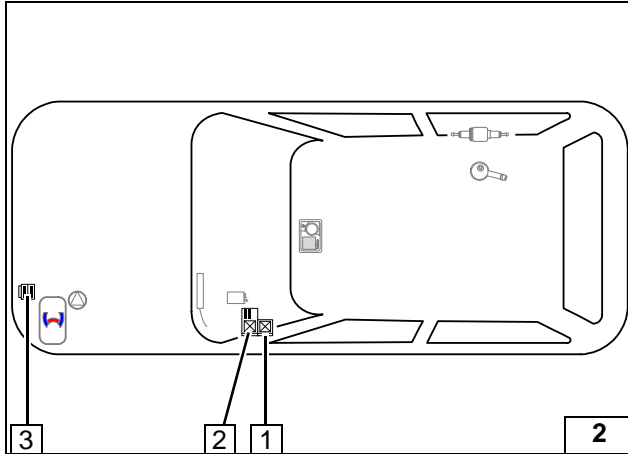


Preparing Electrical System

- 1 PWM GW
- 2 Passenger compartment relay and fuse holder
- 3 Engine compartment fuse holder




Installation Overview

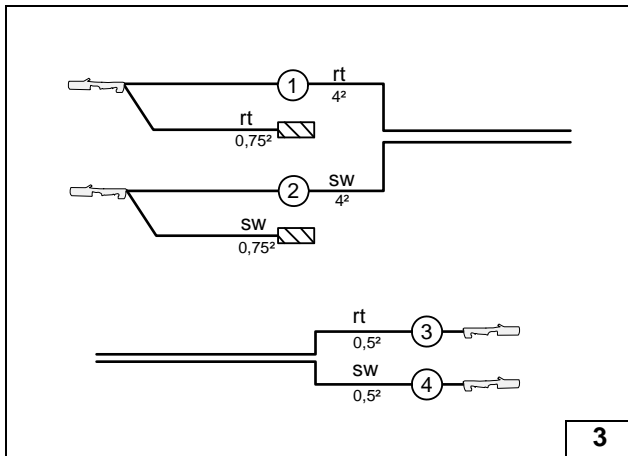

Wire sections retain their numbering in the entire document.

- ① Red (rt) wire of fan wiring harness
- ② Black (sw) wire of fan wiring harness
- ③ Red (rt) wire from wiring harness of PWM control
- ④ Black (sw) wire from wiring harness of PWM control

Cutting to length / assigning wires

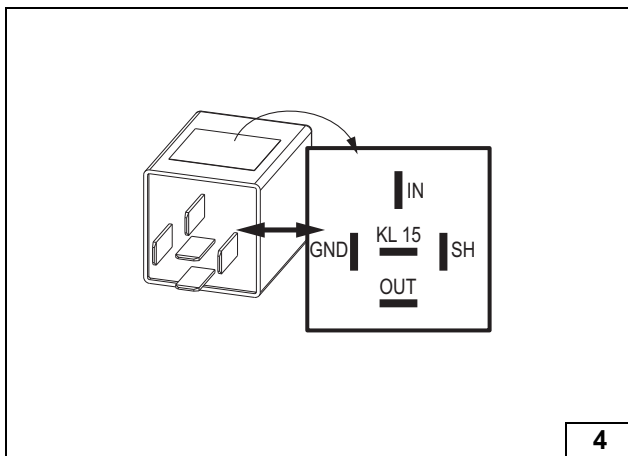


Check the PWM Gateway settings when starting up the heater and adjust if necessary.

Settings:

- Duty cycle: 100% (DC)
- Frequency: not relevant
- Voltage: 3.3V
- Function: High side

View of PWM GW

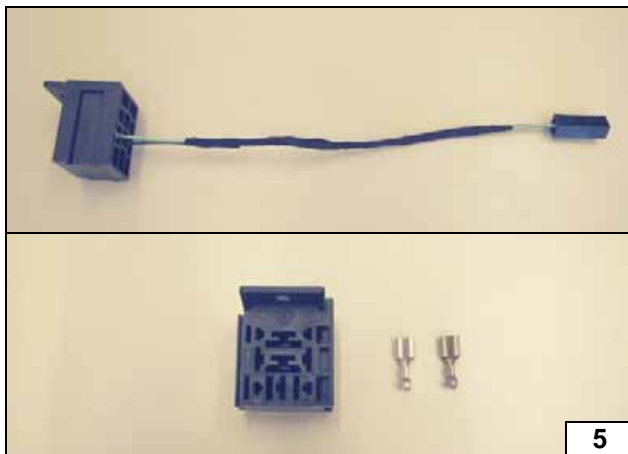

PWM GW Socket Selection


- ← **Version 1**
(wiring harness incl. PWM GW socket in kit)
- ← **Version 2**
(PWM GW socket loose in kit)

Image and selection of possible PWM GW socket versions




Version 2


Premounting PWM GW socket and passenger compartment relay and fuse holder

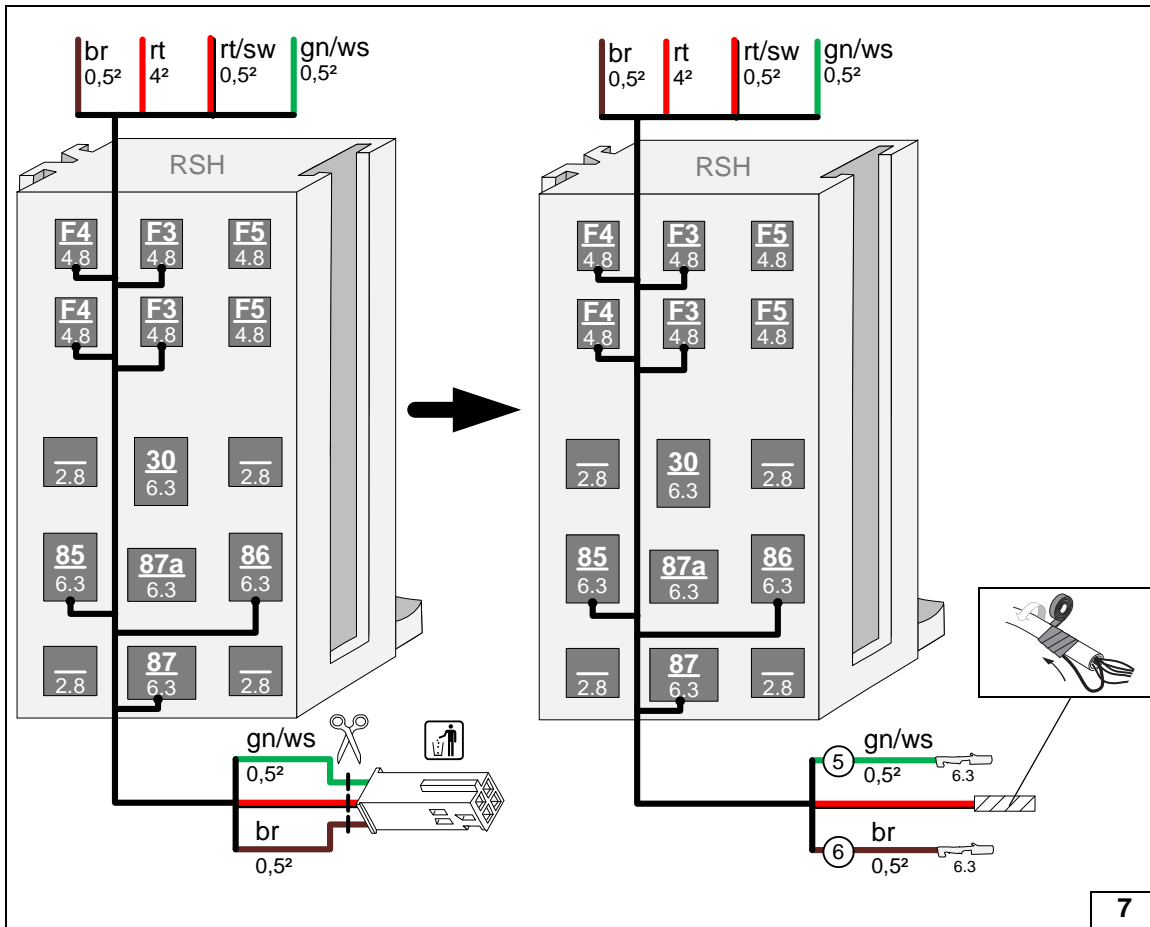

Preparing passenger compartment relay and fuse holder/ installing blade receptacle/ assigning/in-sulating wires

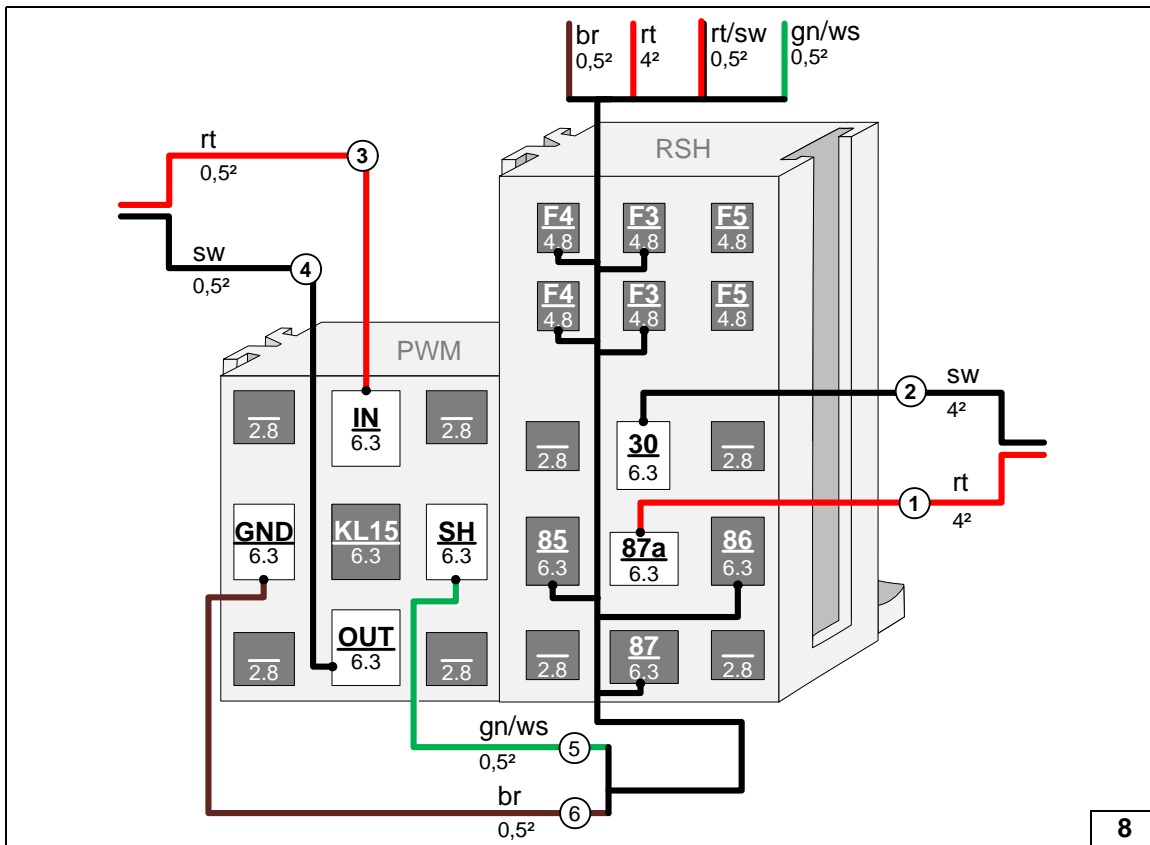


Interlocking PWM GW and passenger compartment relay and fuse holder sockets, connecting wires

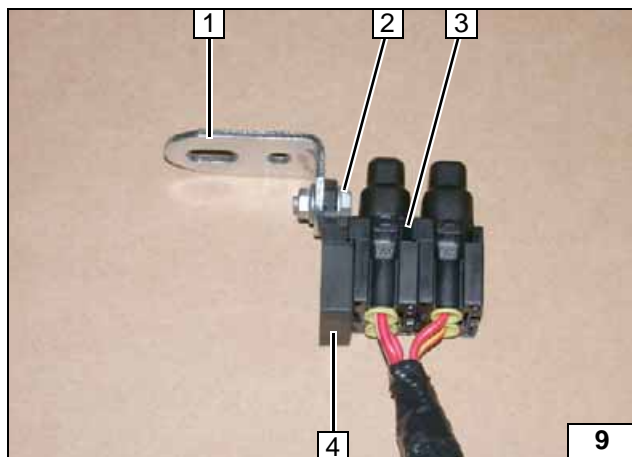

All versions

- 1 Angle bracket
- 2 M5x16 bolt, large diameter washer [2x], nut
- 3 Fuses F1-2
- 4 Fuse holder retaining plate

Preparing engine compartment fuse holder

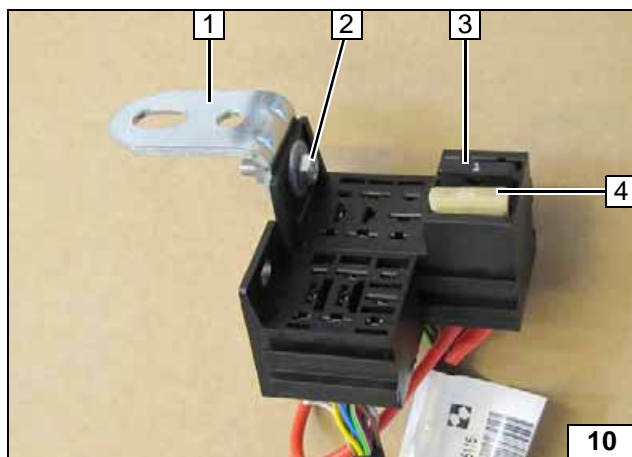

- 1 Angle bracket
- 2 M5x16 bolt, large diameter washer [2x], nut
- 3 1A fuse F3
- 4 25A fuse F4

Preparing passenger compartment relay and fuse holder




Electrical System





Engine compartment fuse holder

- 1 Angle bracket
- 2 Original vehicle bolt

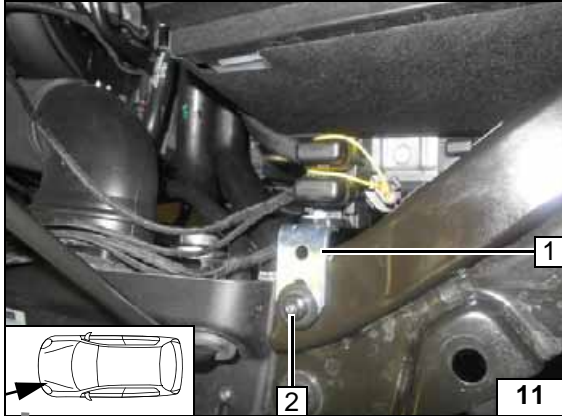

Passenger compartment wiring harness pass through

- 1 Rubber plug of coolant reservoir pass through
- 2 Heater wiring harnesses, heater control

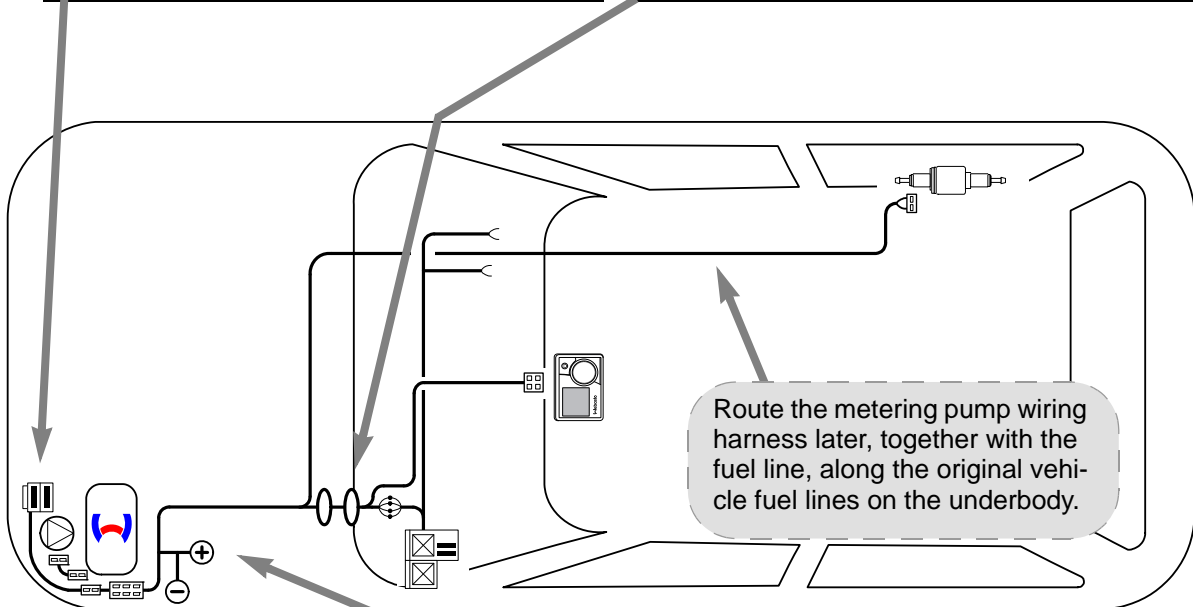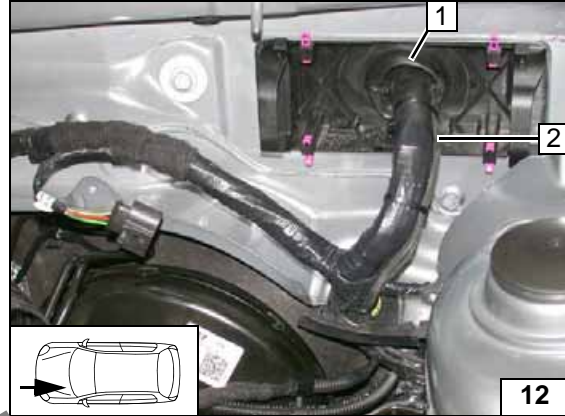


Wiring harness routing diagram



Earth wire

- 1 Earth wire on original vehicle earth support point

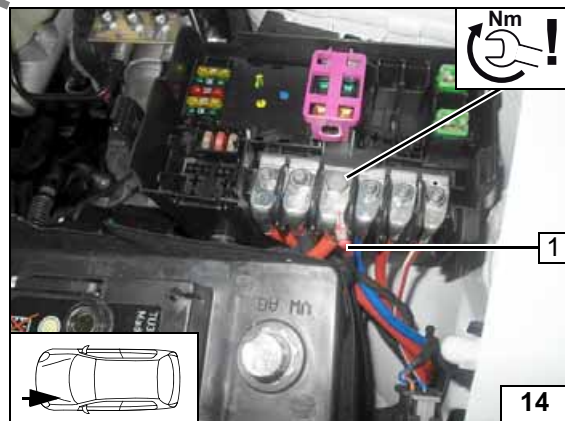

Positive wire

- 1 Positive wire on positive distributor






Automatic Air-Conditioning Fan Controller





System wiring diagram

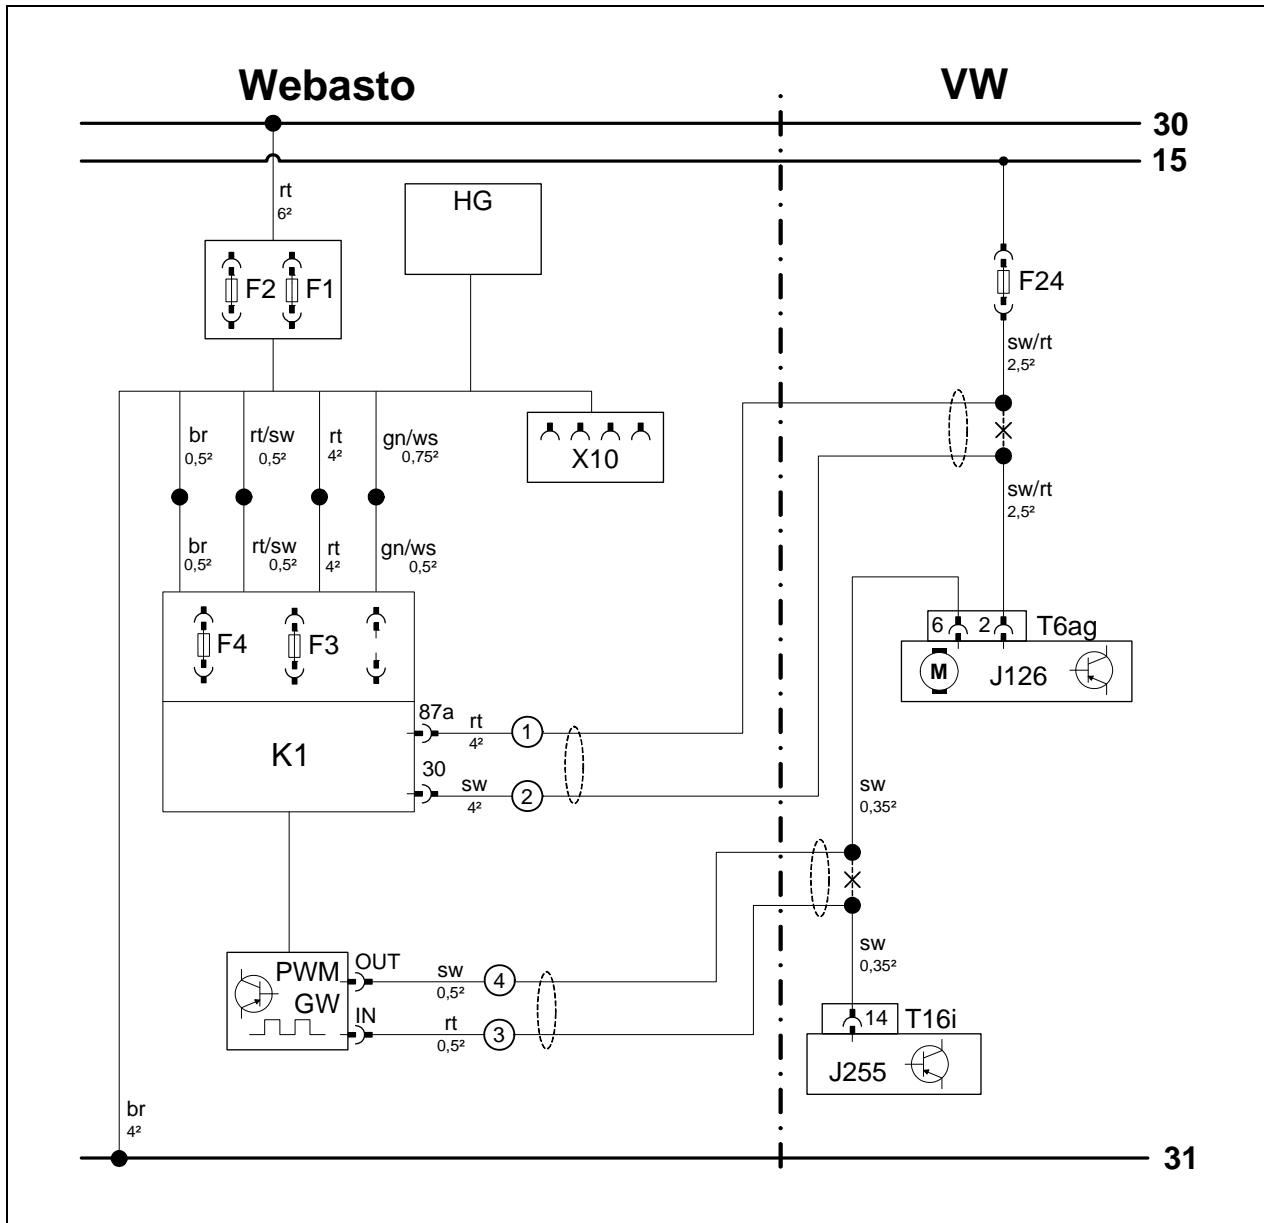


Webasto components		Vehicle components		Colours and symbols	
HG	TT-Evo heater	F24	30A fuse	rt	red
F1	20A fuse	J126	Fan unit	ws	white
F2	30A fuse	T6ag	6-pin connector J126	sw	black
X10	4-pin connector of heater control	J255	A/C control unit	br	brown
F3	1A fuse	T16i	16-pin connector J255	gn	green
F4	25A fuse				
K1	Fan relay				
PWM GW	Pulse width modulator				
PWM GW settings:					
Duty cycle: 100% (DC)					
Frequency: not relevant					
Voltage: 3.3V				X	Cutting point
Function: High side					Wiring colours may vary.

Legend

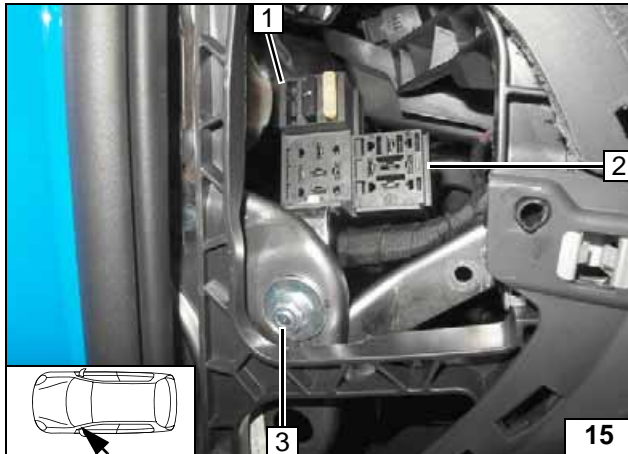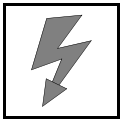


- 1 Passenger compartment relay and fuse holder
- 2 PWM GW socket
- 3 M6x25 bolt, 10mm shim, large diameter washer, flanged nut

Installing passenger compartment relay and fuse holder

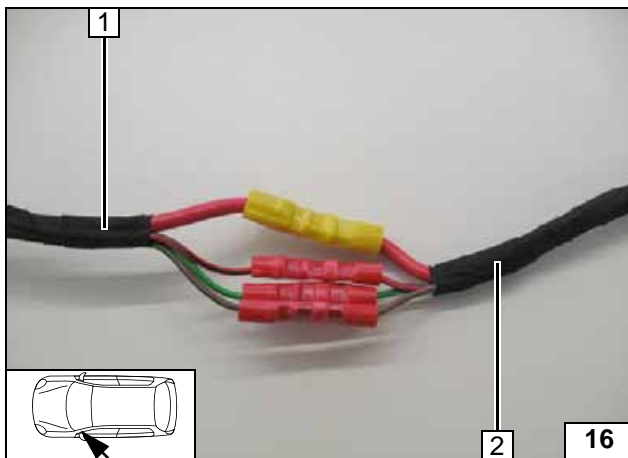


- 1 Passenger compartment relay and fuse holder wiring harness
- 2 Heater wiring harness

Connecting same colour wires of wiring harnesses

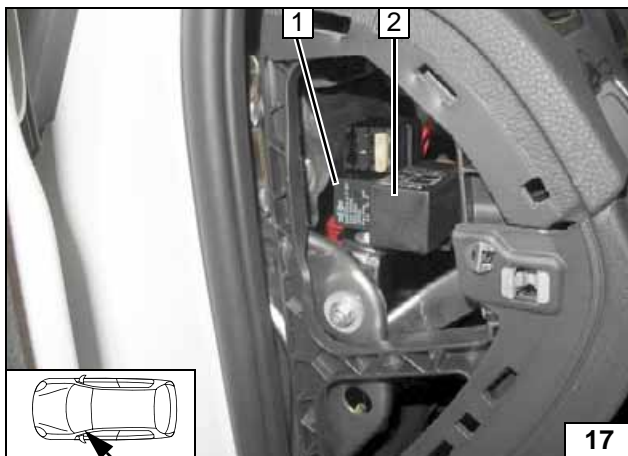


- 1 Relay K1
- 2 PWM-GW

Installing relay K1 and PWM GW

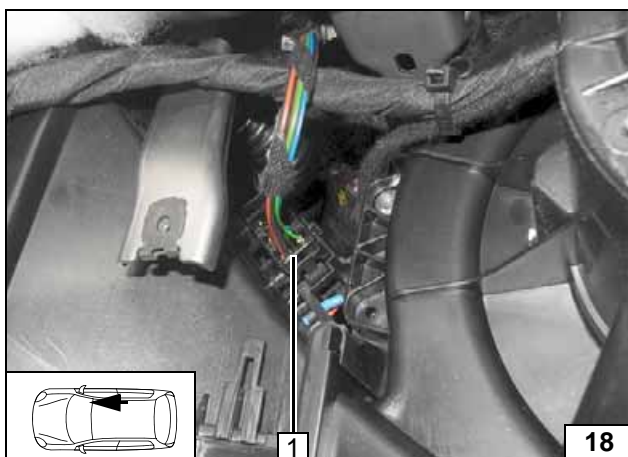

- 1 Pull off 6-pin connector T6ag

Connecting fan unit

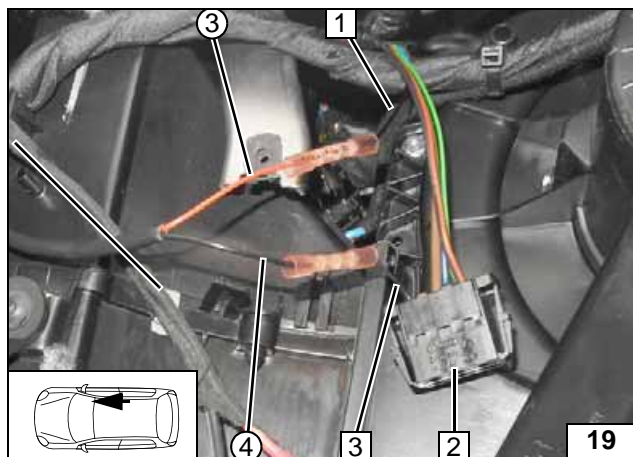


Connection to 6-pin connector T6ag 2.

- 1 Black (sw) wire from A/C control unit
- 3 Black (sw) wire from connector T6ag, pin 6
- ③ Red (rt) wire of PWM GW/IN
- ④ Black (sw) wire of PWM GW/OUT



**Connect-
ing fan unit**

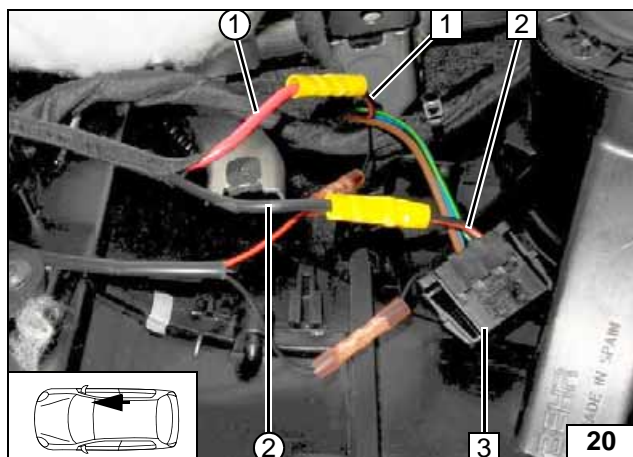


Connection to 6-pin connector T6ag 3.

- 1 Black/red (sw/rt) wire of fuse F24
- 2 Black/red (sw/rt) wire from connector T6ag, pin 2
- ① Red (rt) wire of K1/87a, fan wiring harness
- ② Black (sw) wire of K1/30, fan wiring harness



**Connect-
ing fan unit**

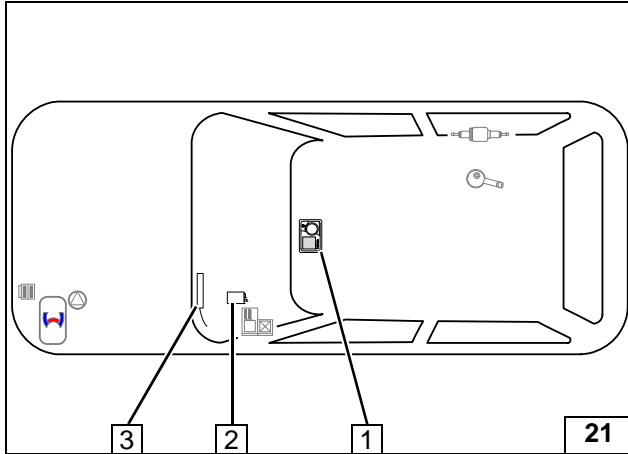


Heater Control Installation

- 1 MultiControl CAR
- 2 Telestart / ThermoCall receiver
- 3 Telestart / ThermoCall aerial




Installation Overview

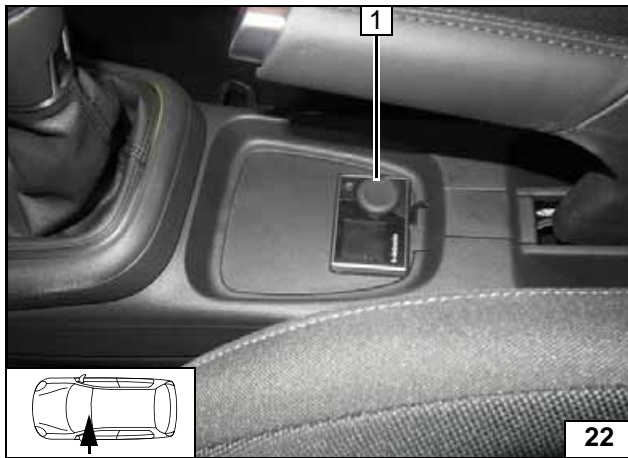

MultiControl CAR Option



Installing MultiControl CAR

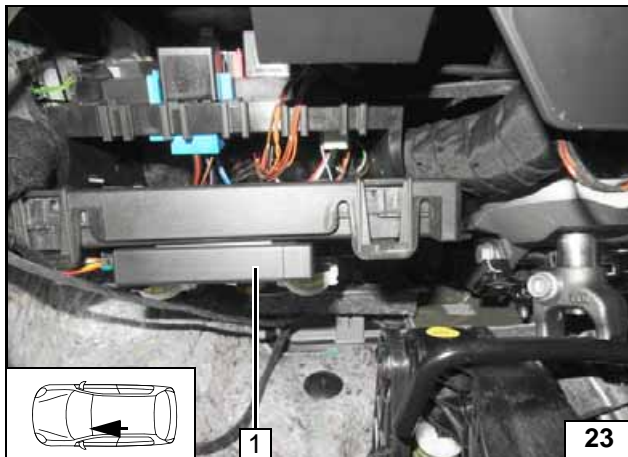


Remote Option (Telestart)

Fasten receiver 1 with double-sided adhesive tape.




Installing receiver

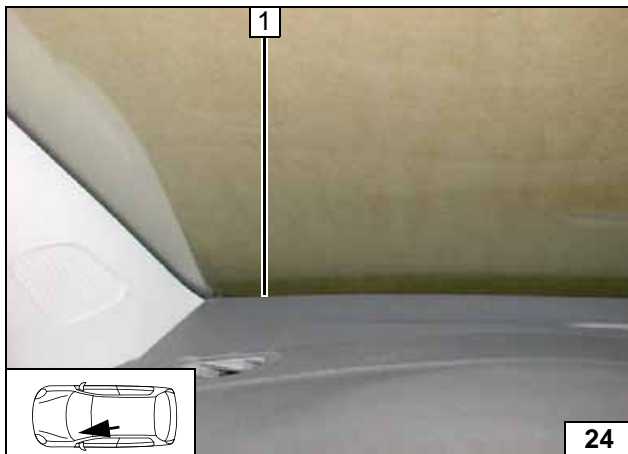

- 1 Aerial

Installing aerial

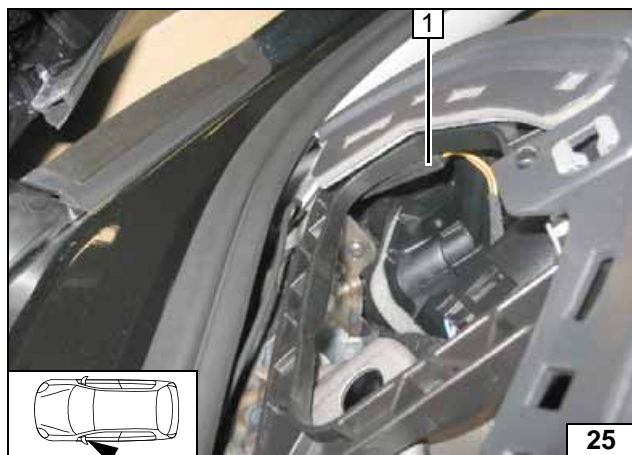


Temperature sensor T100 HTM

Fasten temperature sensor 1 with double-sided adhesive tape.



Installing temperature sensor

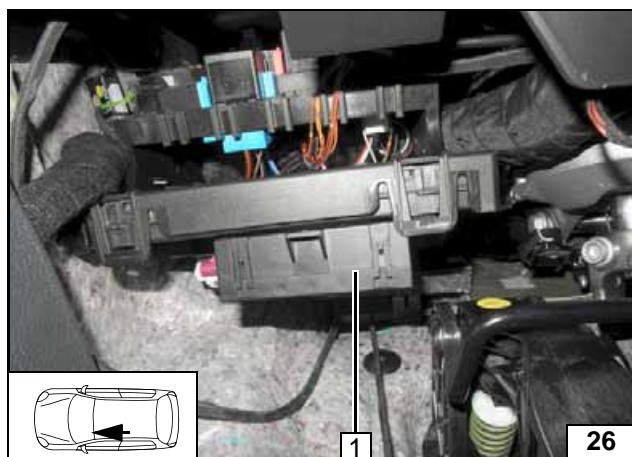


ThermoCall Option

Fasten receiver 1 with double-sided adhesive tape.





Installing receiver

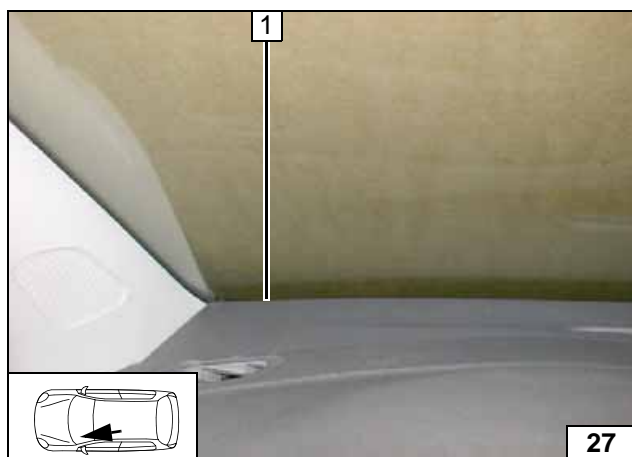

1 Aerial (optional)

Installing aerial

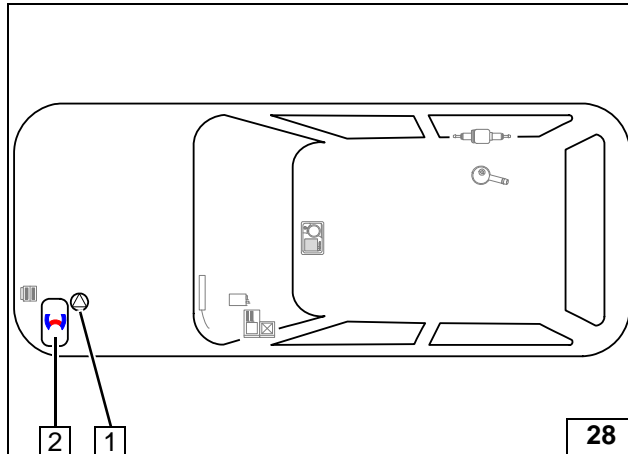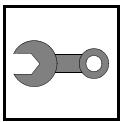


Preparing Installation Location

- 1 Circulating pump
- 2 Heater




Installation Overview

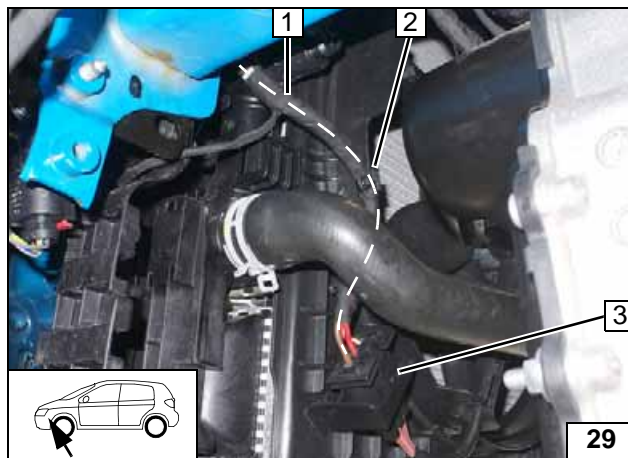


- 1 Original vehicle wiring harness
- 2 Edge clip cable tie
- 3 Dismantle original vehicle relay (will be installed during the final work phase)

Routing original vehicle wiring harness

- 1 9.1 mm dia. hole; M6 rivet nut

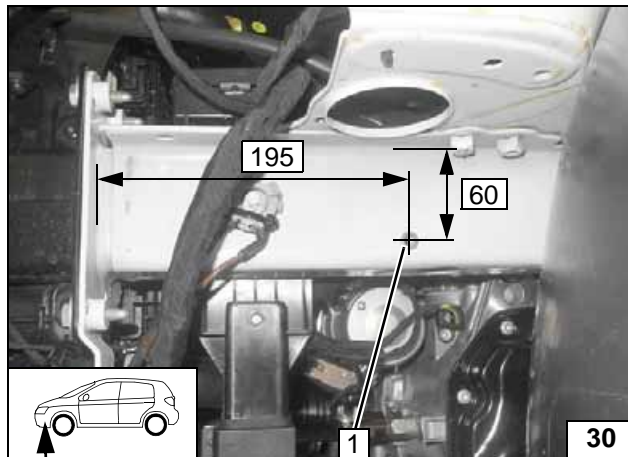

Installing rivet nut


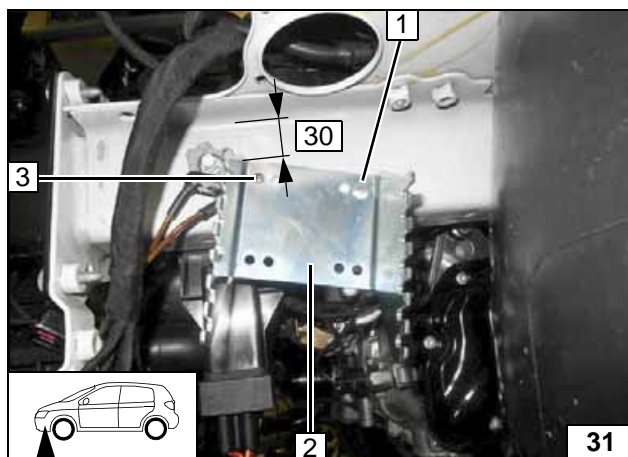


Loosely install bracket 2 and align as shown.

- 1 M6x20 bolt
- 3 Copy hole pattern



Copying hole pattern

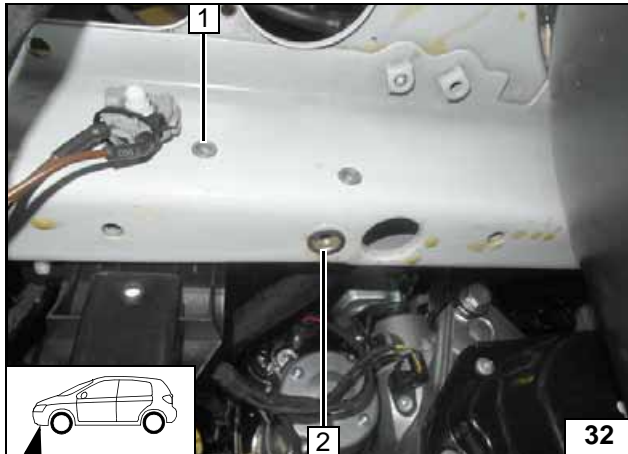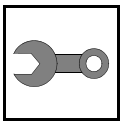


Remove bracket.

- 1 9.1 mm dia. hole; M6 rivet nut
- 2 Original vehicle hole, M10 rivet nut




Installing rivet nuts

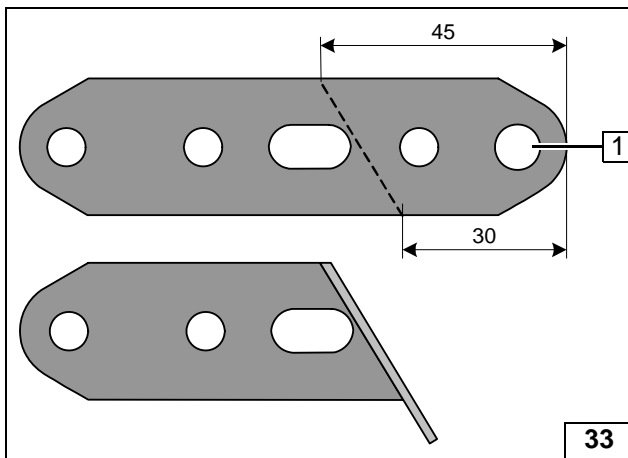


- 1 Drill out hole to 8.5 mm dia.

Bending perforated bracket A by 90°

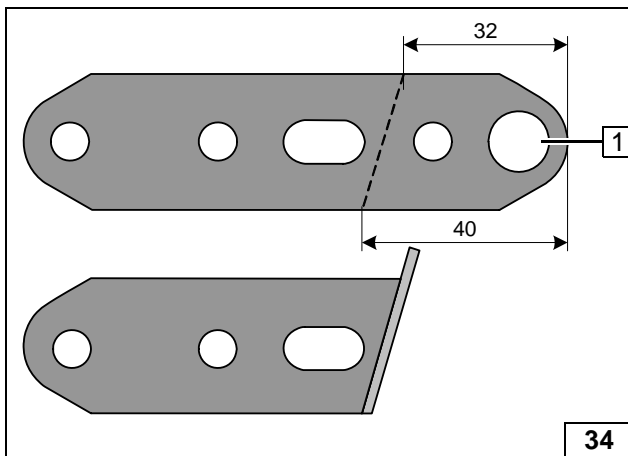



- 1 Drill out hole to 10.5 mm dia.

Bending perforated bracket B by 90°

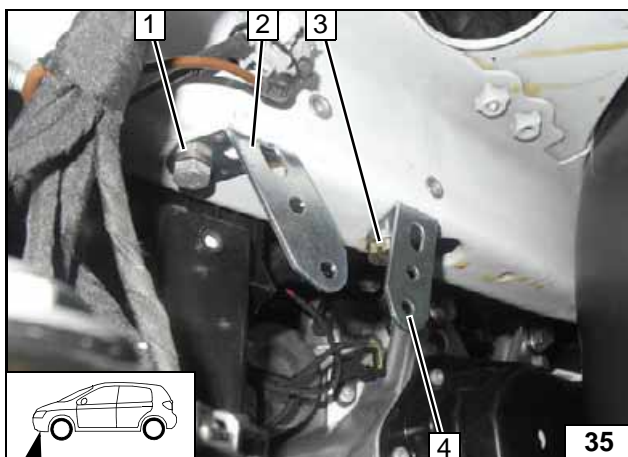

- 1 M8x20 bolt, spring lockwasher, existing threaded hole
- 2 Perforated bracket A
- 3 M10x16 bolt, spring lockwasher
- 4 Perforated bracket B

Loosely installing perforated brackets

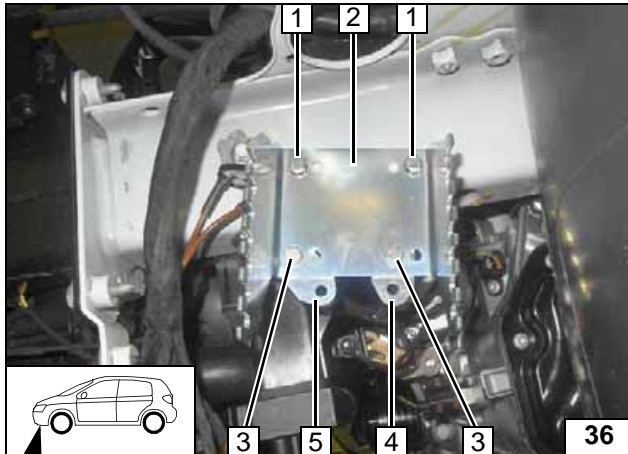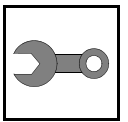


Tighten loose screw connections.


- 1 M6x20 bolt, spring lockwasher [2x each]
- 2 Bracket
- 3 M6x12 bolt, flanged nut [2x each]
- 4 Perforated bracket B
- 5 Perforated bracket A



Installing bracket

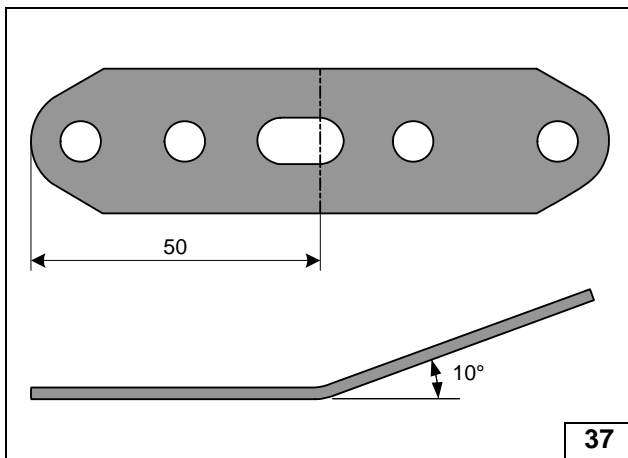


Bending perforated bracket C

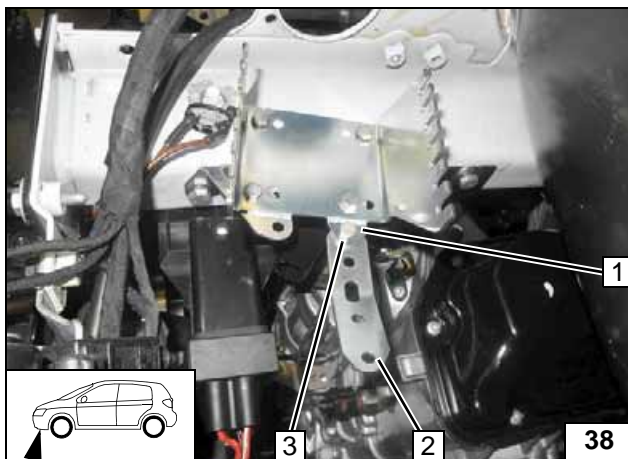

- 1 Perforated bracket B
- 2 Perforated bracket C
- 3 M6x12 bolt, flanged nut

Installing perforated bracket C loosely


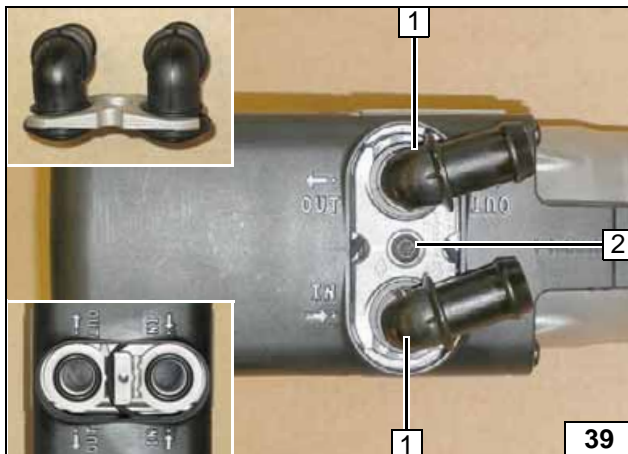


Preparing Heater

- 1 Water connection piece, sealing ring [2x each]
- 2 5x15 self-tapping bolt, retaining plate of water connection piece




Installing water connection piece

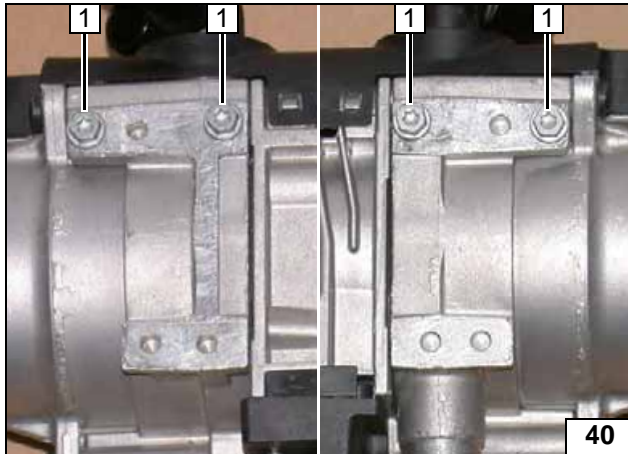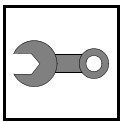

Screw 5x13 self-tapping bolts **1** [4x] into existing holes by a maximum of 3 thread turns.




Premounting bolts loosely

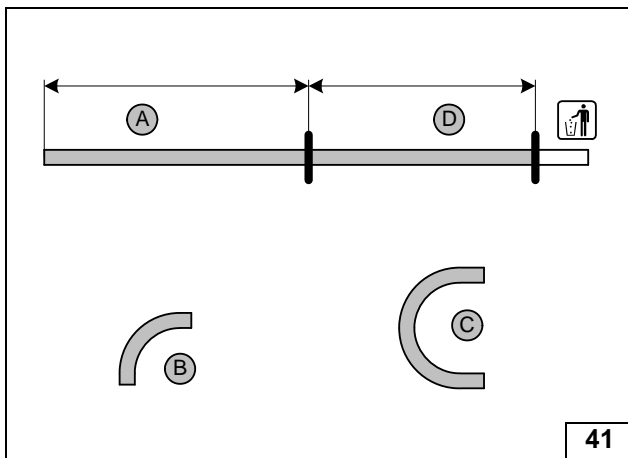

- A = 900
- B = 90°, 18mm dia.
- C = 180°, 18mm dia.
- D = 830

Cutting hoses to length

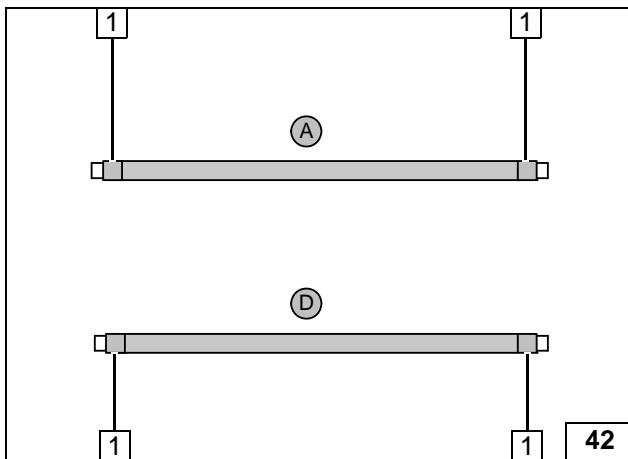


Push braided protection hoses onto hoses **A** and **D** and cut to length. Cut heat shrink plastic tubing to size.



- 1** 50 mm long heat shrink plastic tubing [4x]


Preparing hoses

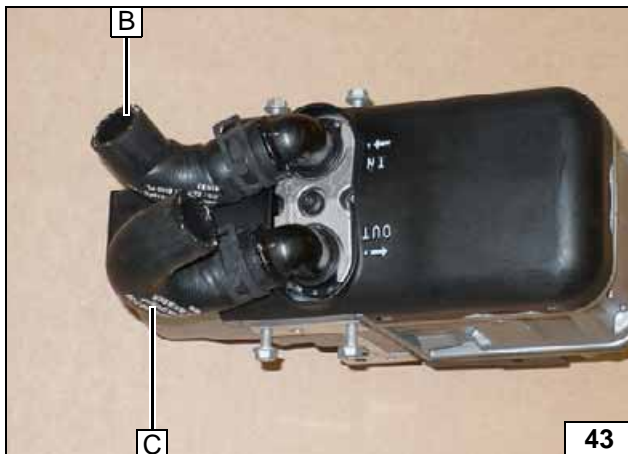

All spring clips 25 mm dia.




Premounting hoses

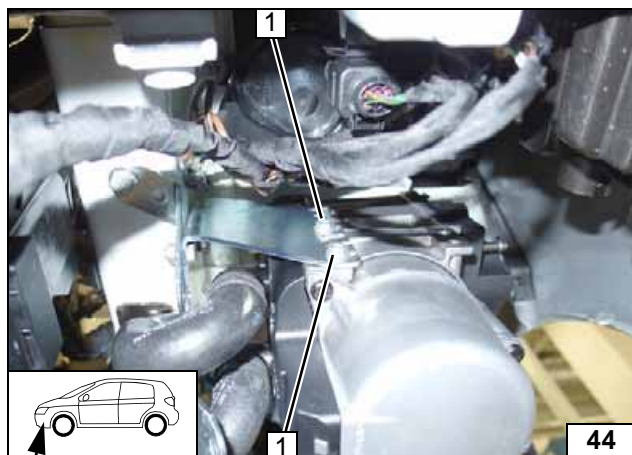

Installing Heater


- 1 Tighten 5x13 self-tapping bolt [2x]

Installing heater

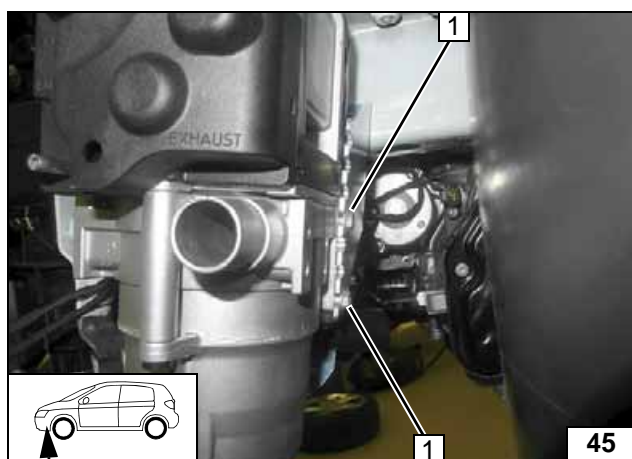


- 1 Tighten 5x13 self-tapping bolt [2x]

Installing heater

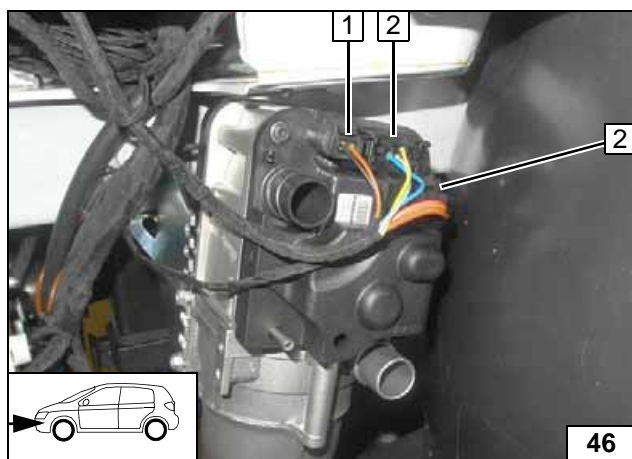

- 1 Connector of circulating pump wiring harness
- 2 Heater wiring harness connector [2x]

Installing wiring harnesses


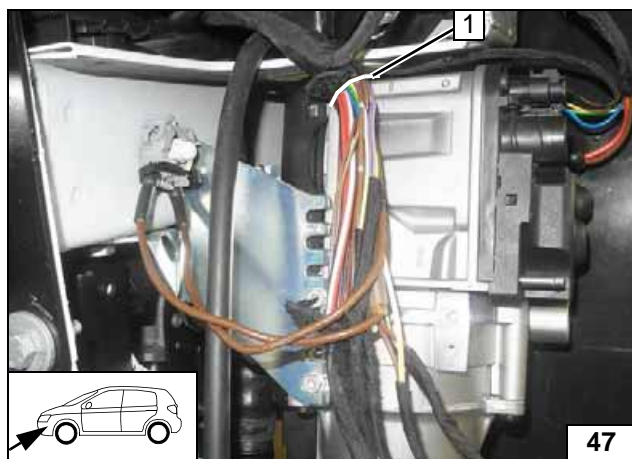


Moving the horn

Remove insulation of original vehicle wiring harness up to marking 1.



Preparing wiring harness

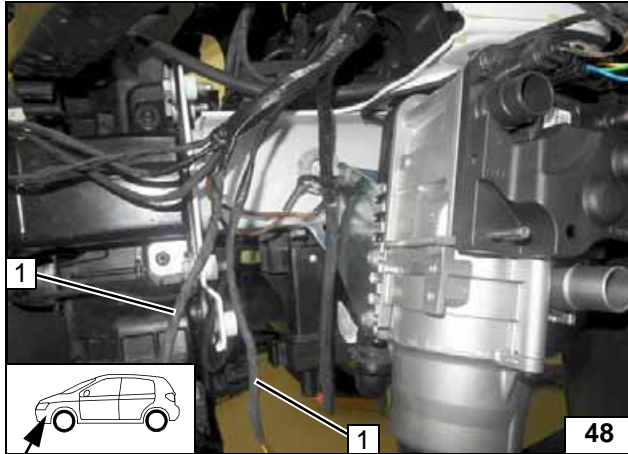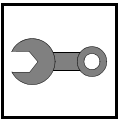


Wrap original vehicle wiring harnesses individually with new insulating tape as shown.



- 1 Wiring harness of horn [2x]


Preparing wiring harnesses

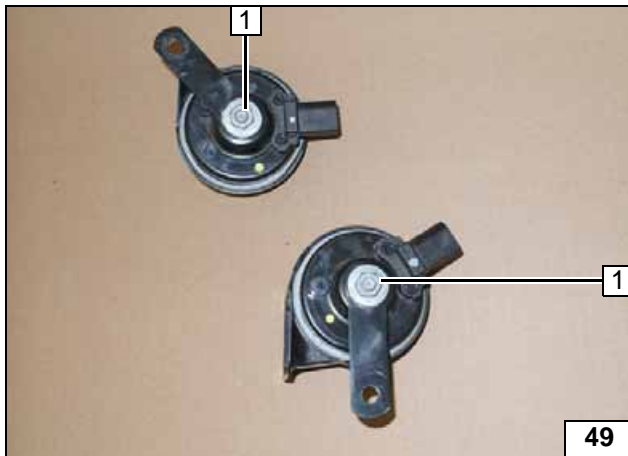

The number of horns depends on the equipment, one or two horns. Detach screw fitting at position 1 [2x].



Removing horn

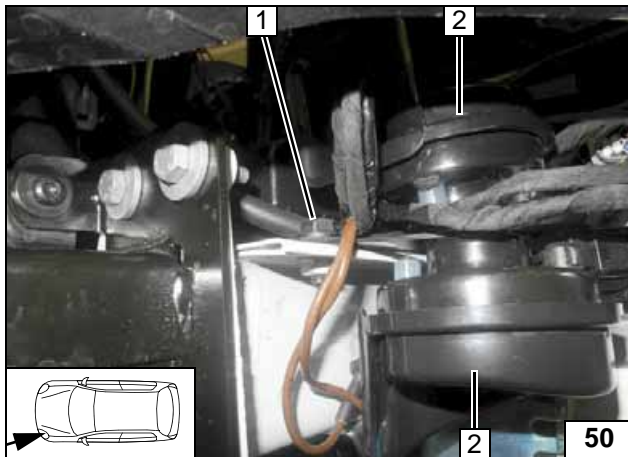

Loosely mount horn 2 [2x] with bracket on original vehicle bolt 1.



Loosely installing horns




Lower horn 2, identical installation position in case of one horn, align as shown. Ensure sufficient distance from neighbouring components, correct if necessary.



- 1 Attach wiring harness of horn [2x]

Aligning lower horn

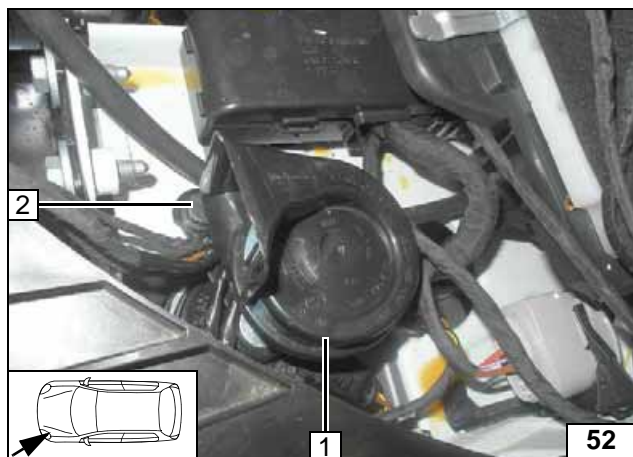


Align upper horn **1** as shown. Ensure sufficient distance from neighbouring components, correct if necessary.




2 Tighten original vehicle bolt

Aligning upper horn

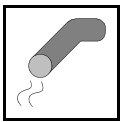


Exhaust System Section 1

a1 = 350
a2 = 160

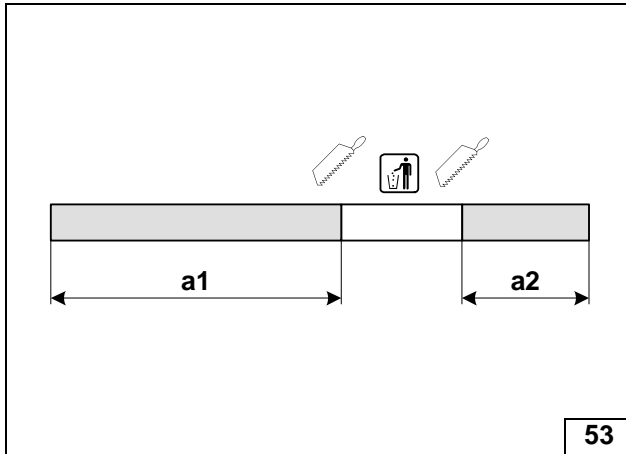

Preparing exhaust pipe


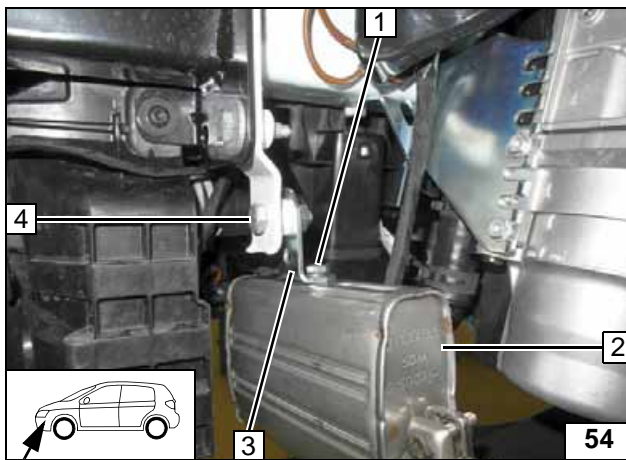


Replace original vehicle bolt at position 4 with M8x40 bolt.




- 1 M6x16 bolt, spring lockwasher
- 2 Silencer
- 3 Angle bracket
- 4 8x40 bolt, flanged nut

Installing silencer

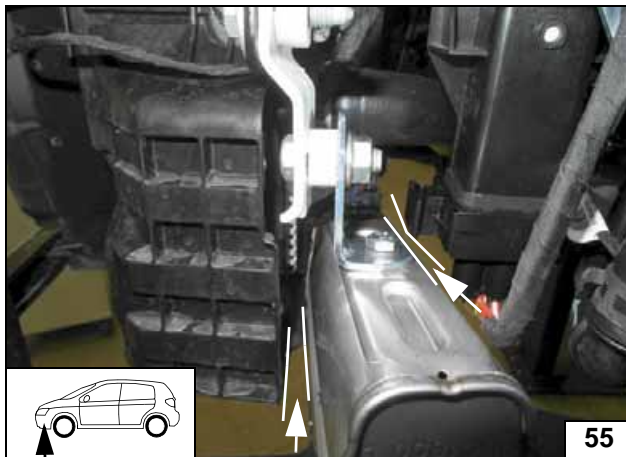

Aligning silencer

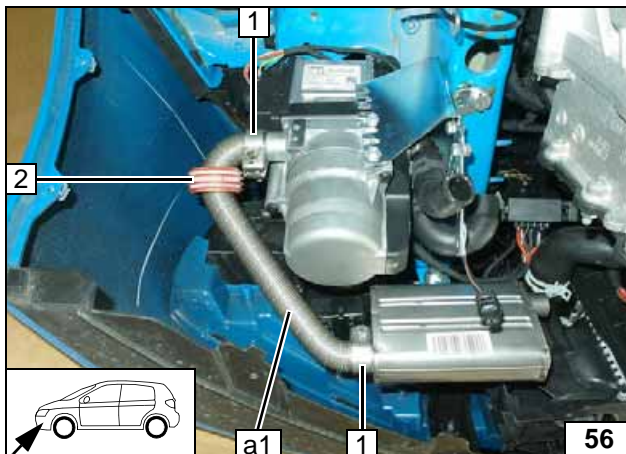

- 1 Hose clamp [2x]
- 2 Spacer bracket

Installing exhaust pipe a1




Coolant Circuit








Any coolant running off should be collected in an appropriate container. Route hoses kink-free. Unless specified otherwise, always fasten using cable ties. Position clamps so that other hoses cannot be damaged. The heater must be filled with coolant when installing the hoses.





The connection should be modelled on an 'inline' circuit and based on the following diagram:

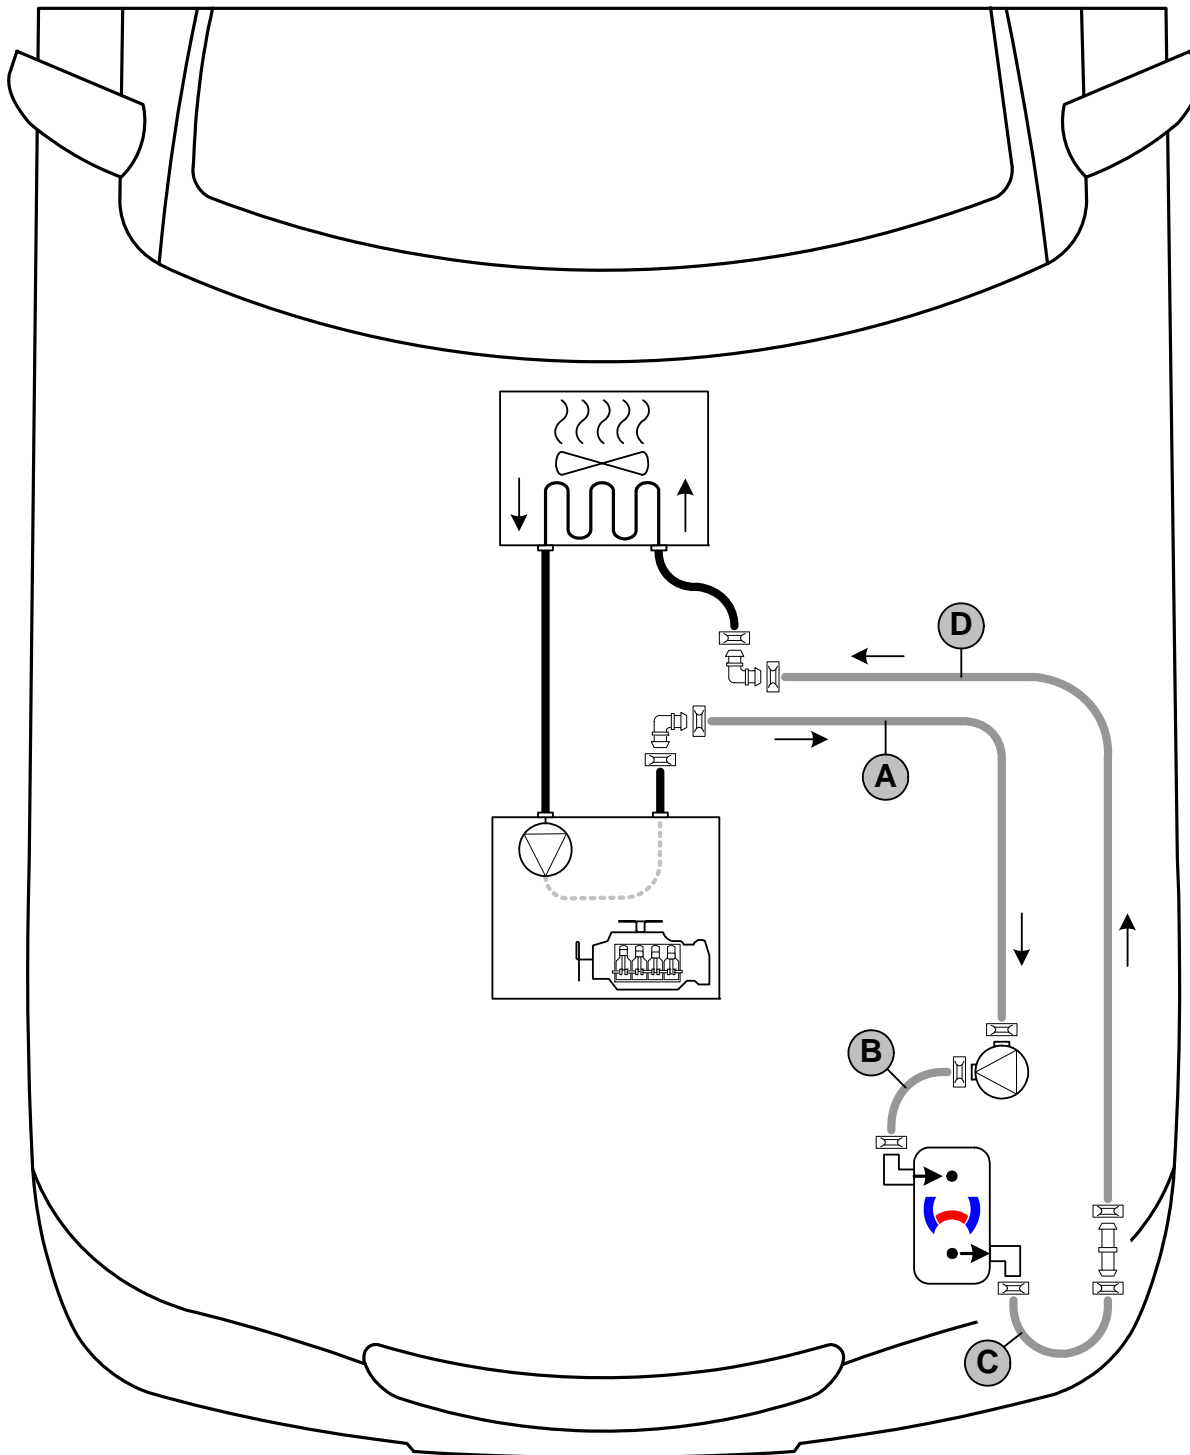

Hose routing diagram


All spring clips without a specific designation  = 25 mm dia. All connecting pipes  and  = 18x18mm dia.
1 = Original vehicle spring clip . **2** = Black (sw) rubber isolator 
3 = Coupling piece of engine outlet.



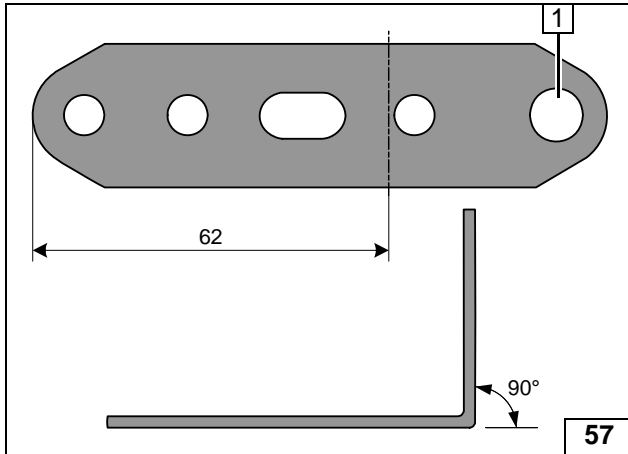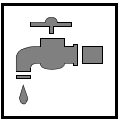


1 Drill out hole to 8.5 mm dia.

Preparing perforated bracket D

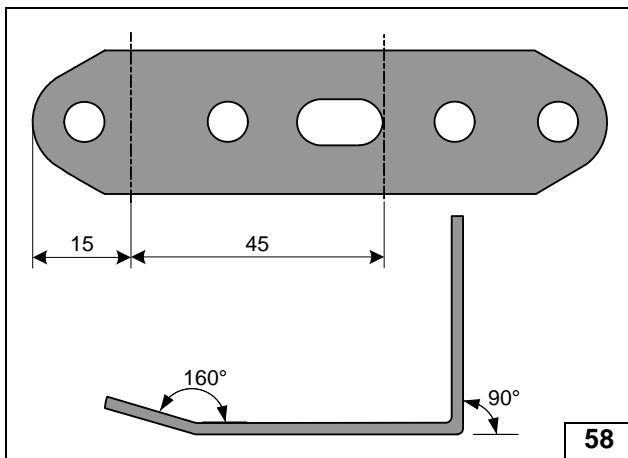


Preparing perforated bracket E

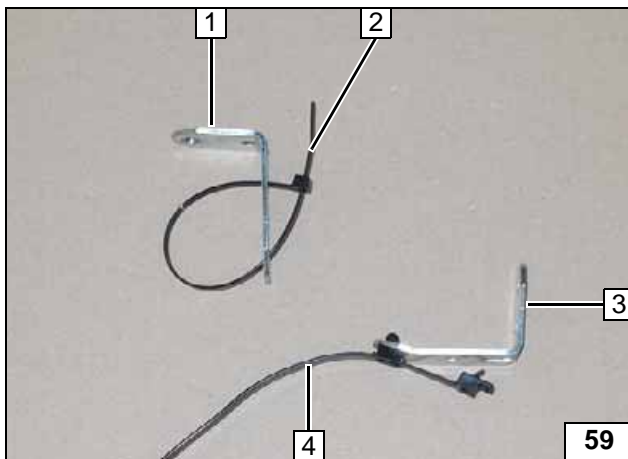


- 1 Perforated bracket D
- 2 Cable tie
- 3 Perforated bracket E
- 4 Clip-type cable tie

Preparing perforated bracket D and E

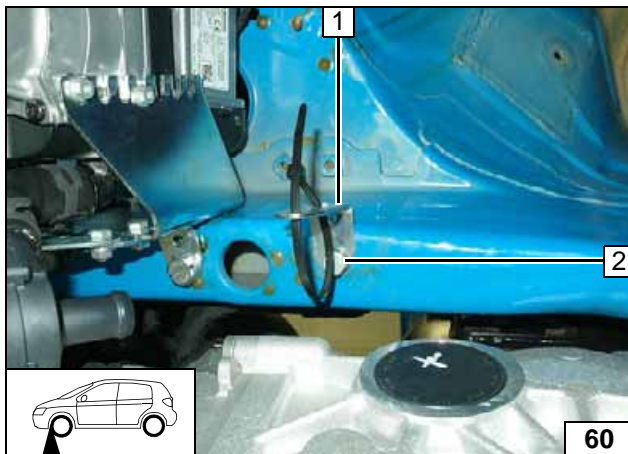


- 1 Perforated bracket D
- 2 M8x20 bolt, spring lockwasher, existing threaded hole

Installing perforated bracket D

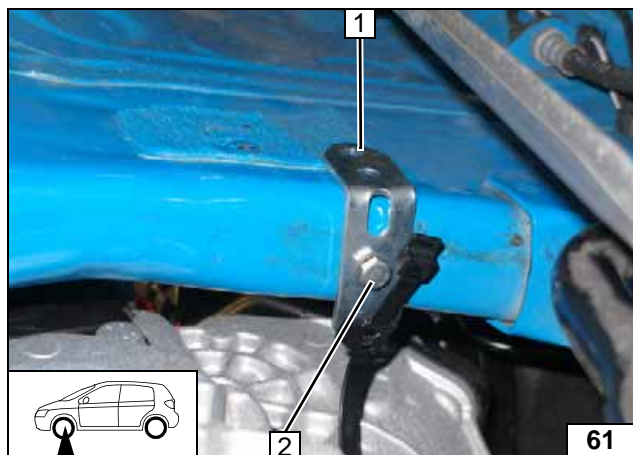


- 1 Perforated bracket E
- 2 M6x20 bolt, spring lockwasher, existing threaded hole

Installing perforated bracket E

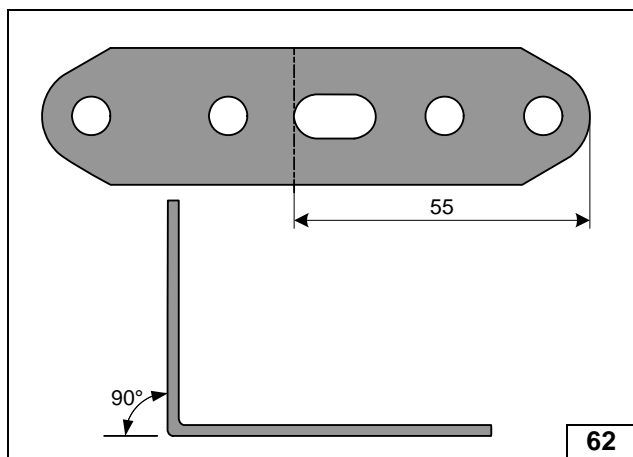

Bending perforated bracket F

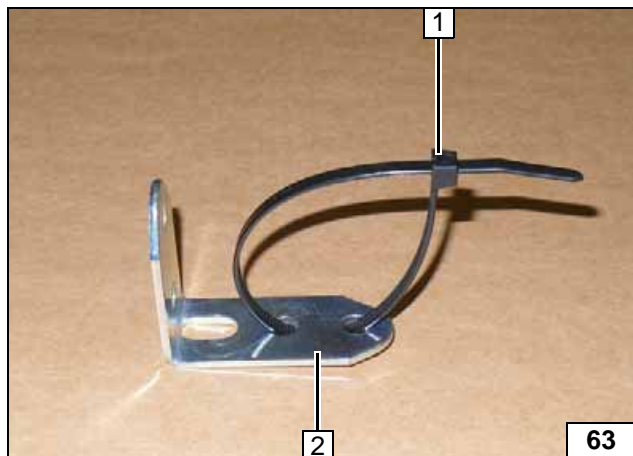


- 1 Cable tie through both holes, do not pull tight
- 2 Perforated bracket F

Preparing perforated bracket F




- 1 Discard retaining clamp

Removing retaining clamp

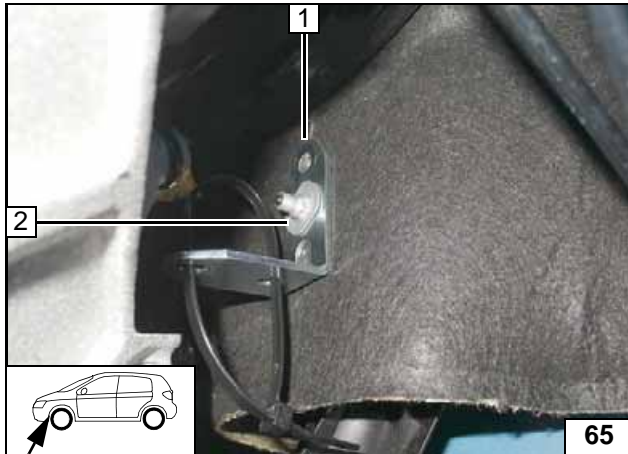

- 1 Perforated bracket F
- 2 Plate nut on original vehicle stud bolt

Installing perforated bracket F

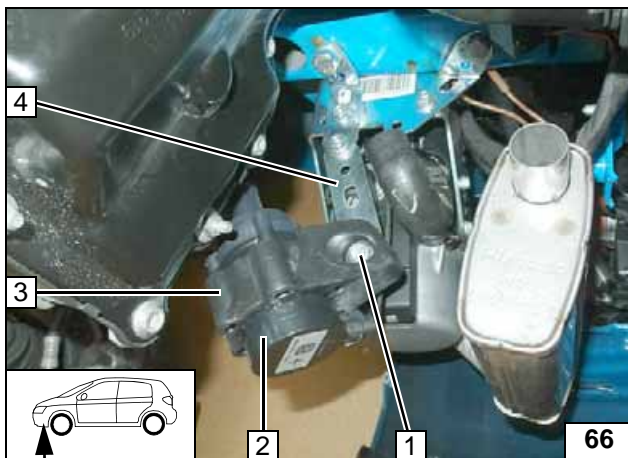


Use lower hole of perforated bracket C 4.



- 1 M6x25 bolt, flanged nut
- 2 Circulating pump
- 3 Circulating pump mount

Installing circulating pump

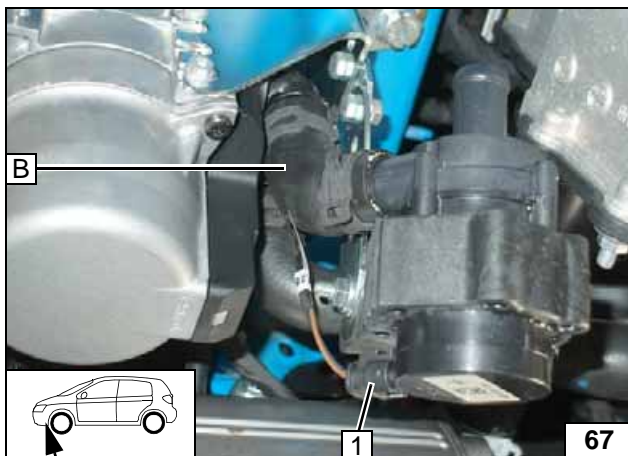


- 1 Connector of circulating pump wiring harness



Connecting circulating pump



Tighten perforated bracket C bolt.

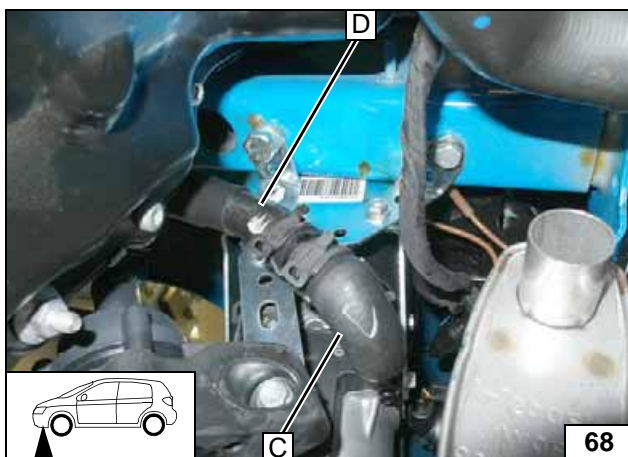


Connecting heater

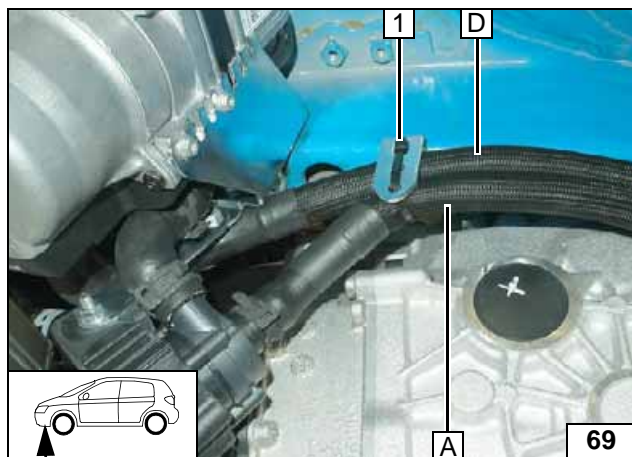

Route hose **A** and hose **D** on frame side member through cable tie **1** of perforated bracket **D**. Align hoses, tighten cable tie.




Connect-
ing circulat-
ing pump

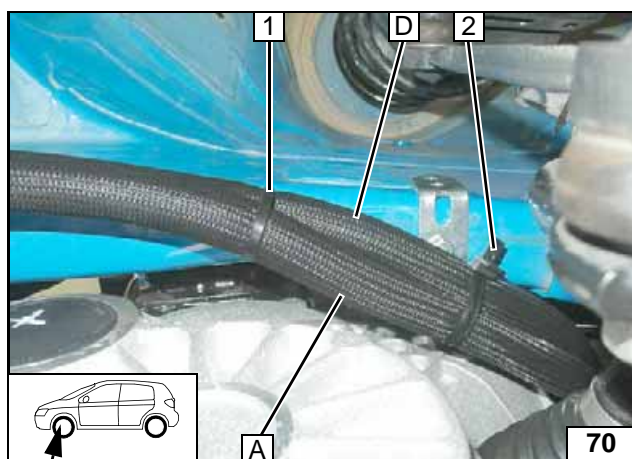

Route hose **A** and hose **D** on frame side member through clip-type cable tie **2** of perforated bracket **E**. Align hoses, tighten cable tie.

1 Cable tie


Routing in
engine
compart-
ment

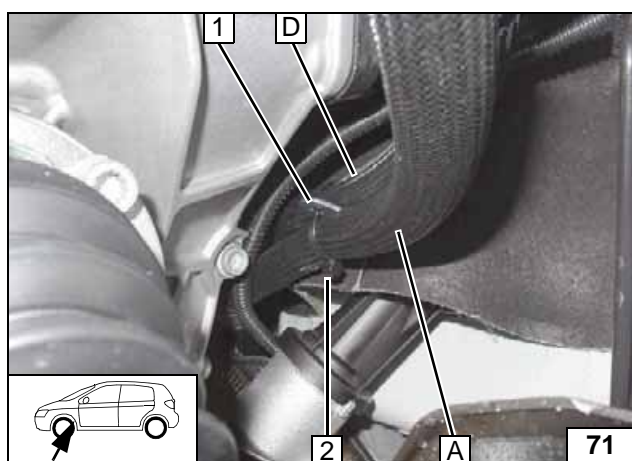

Route hose **D** above and hose **A** under perforated bracket **F 1** and through cable tie **2**. Align hoses, tighten cable tie.



Routing in
engine
compart-
ment


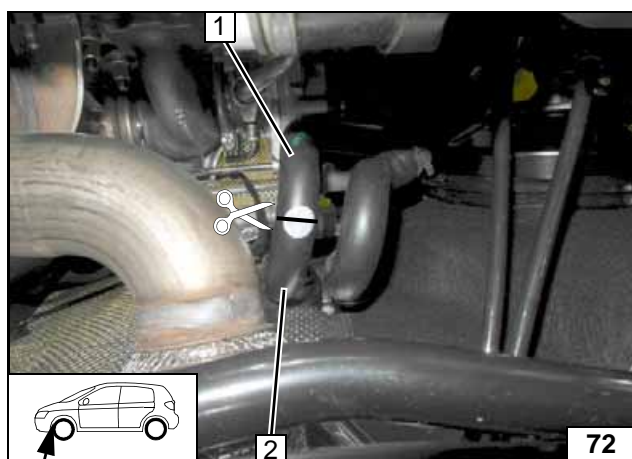


Cut off hose on engine outlet/heat exchanger inlet at marking.

- 1** Engine outlet hose section
- 2** Heat exchanger inlet hose section




Cutting
point

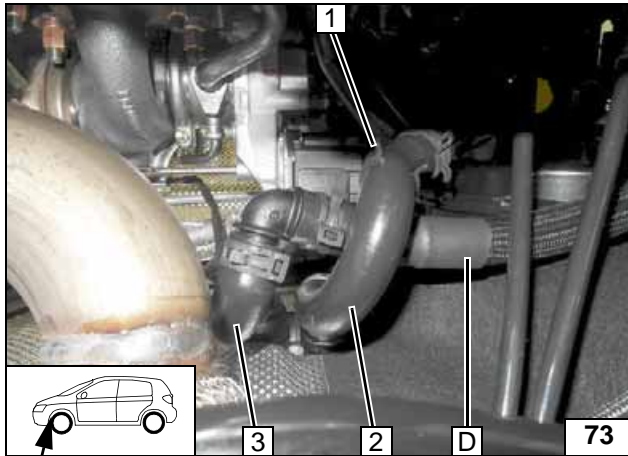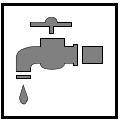

- 1 20x20 hose bracket between hose of heat exchanger outlet **2** and hose **D**
- 3 Heat exchanger inlet hose section

**Connect-
ing heat ex-
changer
inlet**

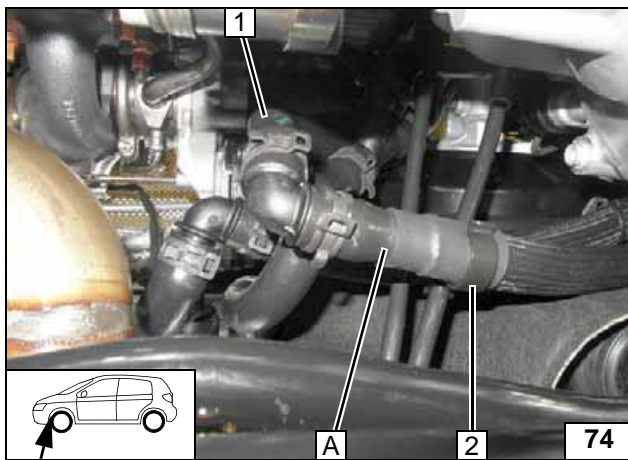

- 1 Engine outlet hose section
- 2 10x20 hose bracket between gear-shift cable and hose **A**


**Connect-
ing engine
outlet**



Ensure sufficient distance from neighbouring components, (at least 5mm between hoses and transmission), correct if necessary.



**Aligning
hoses**

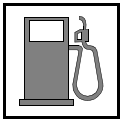

Fuel



Open the vehicle's fuel tank cap, ventilate the tank and then re-close the tank lock.


Catch any fuel running off in an appropriate container.

Route fuel line and metering pump wiring harness so that they are protected against stone impact. Unless specified otherwise, always fasten using cable ties.



Provide rub protection for fuel line and wiring harness in areas where there are sharp edges.


The fuel line and wiring harness are routed to the metering pump as shown in the wiring harness routing diagram.

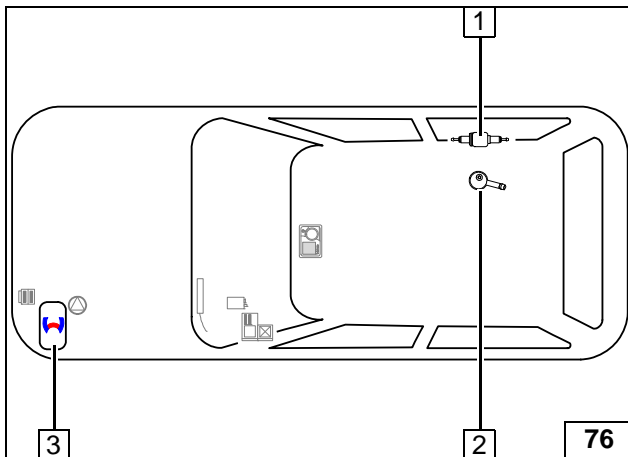


- 1 Metering pump
- 2 FuelFix
- 3 Heater



Installation Overview

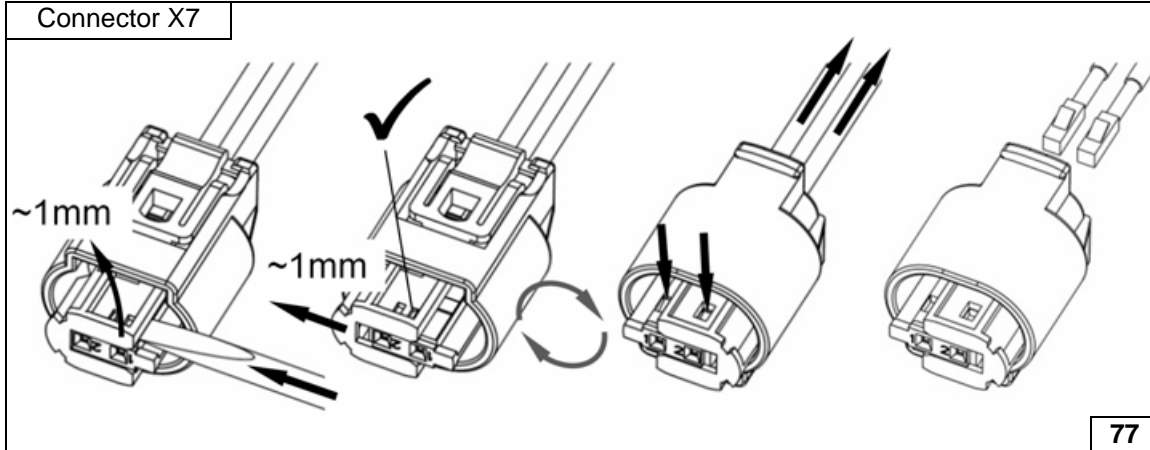

Dismantling metering pump connector

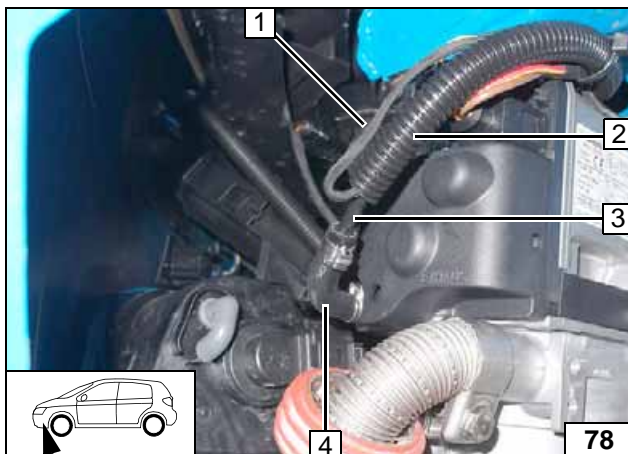


Pull fuel line **3** and metering pump wiring harness **1** into 10 mm dia. corrugated tube **2**. Route 10 mm dia. corrugated tube **1** in the engine compartment and secure using a cable tie.

- 4 90° moulded hose, 10 mm dia. clamp [2x]




**Connect-
ing heater**

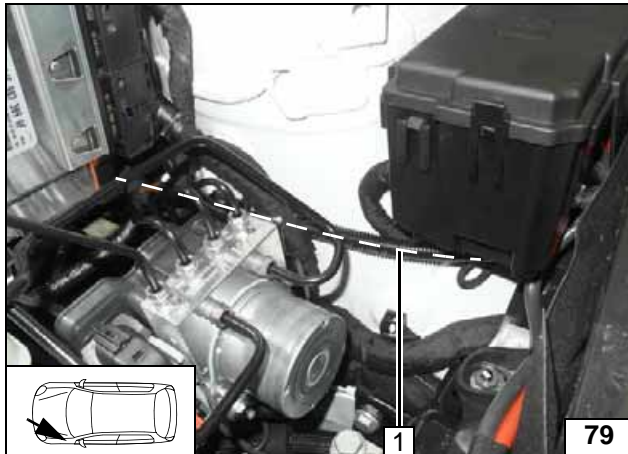

- 1 Fuel line and wiring harness of metering pump in 10mm dia. corrugated tube


Routing lines

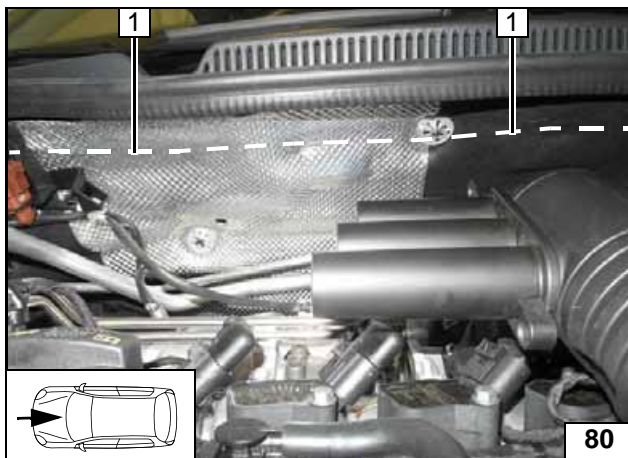

Route fuel line and metering pump wiring harness 1 along the marking behind the insulation mat to the right side of the vehicle.



Routing lines

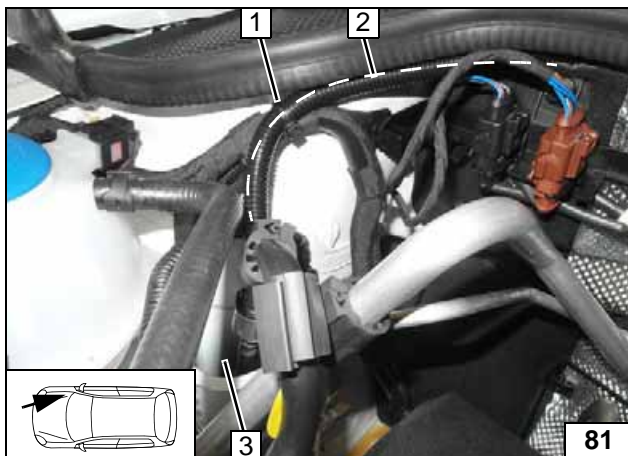

Route fuel line and wiring harness of metering pump through original vehicle line duct 3 to underbody.

- 1 Cable tie
- 2 Fuel line and wiring harness of metering pump in 10mm dia. corrugated tube





Routing lines




- 1 Fuel line, metering pump wiring harness
- 2 Original vehicle pass through of fuel lines

Routing lines

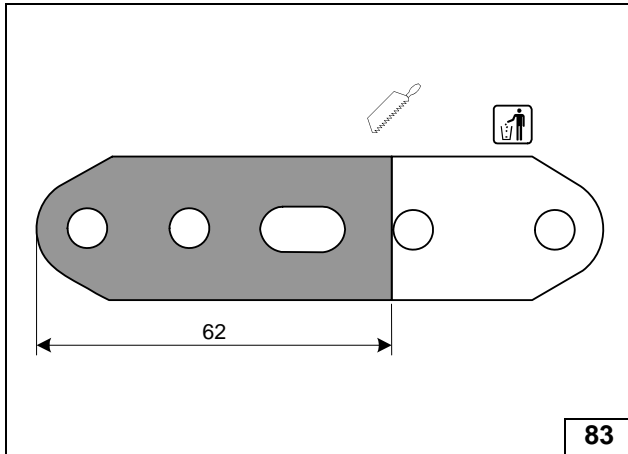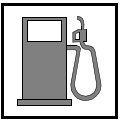

83

Cutting perforated bracket G to length

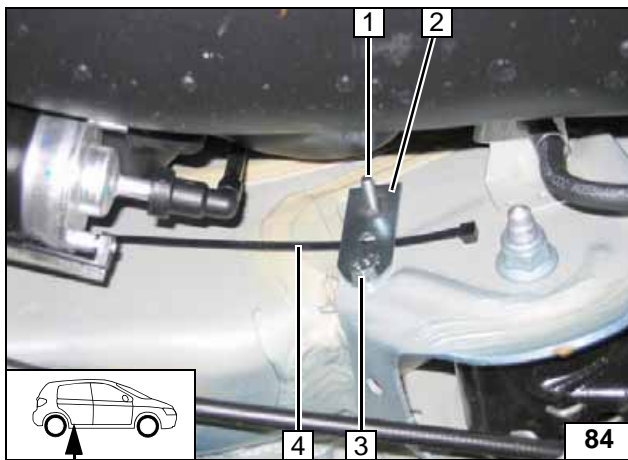


84

Insert cable tie 4 between perforated bracket G 2 and body.

- 1 M6x25 bolt, premount pin lock
- 3 M6x20 bolt, flanged nut, original vehicle hole

Installing perforated bracket

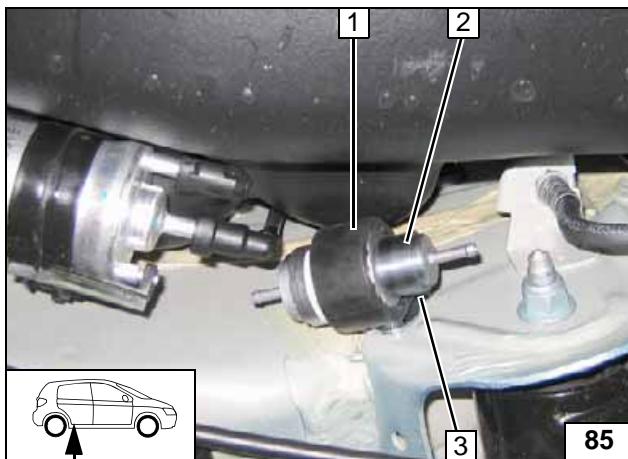


85

Attach metering pump mount 1 with support angle bracket and flanged nut on M6x25 bolt. Close cable tie 3 around the metering pump mount 1 .

- 2 Metering pump



Installing metering pump

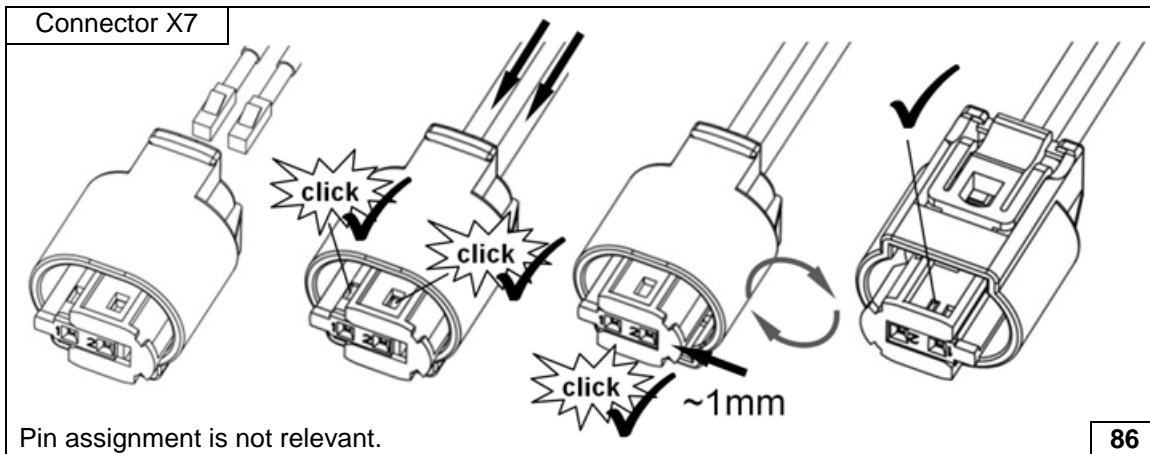

Pin assignment is not relevant.

86


Completing metering pump connector

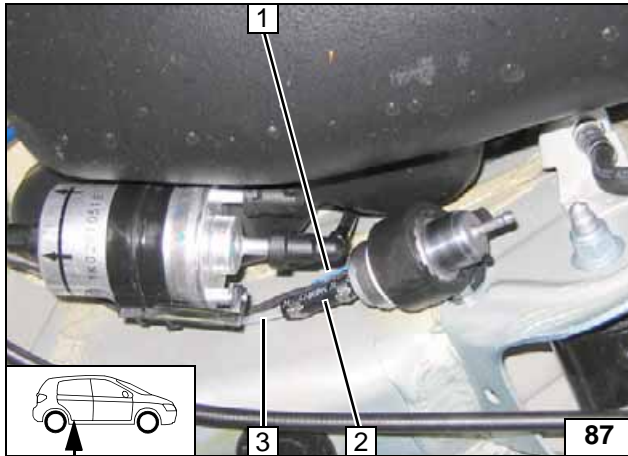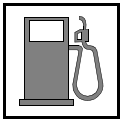


- 1 Metering pump wiring harness, connector X7 mounted
- 2 Hose section, 10mm dia. clamp [2x]
- 3 Fuel line of heater




**Connect-
ing meter-
ing pump**

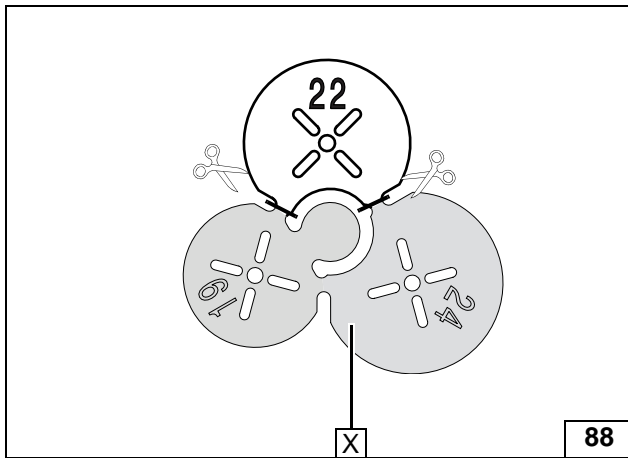

Installing FuelFix



**Preparing
drilling tem-
plate**

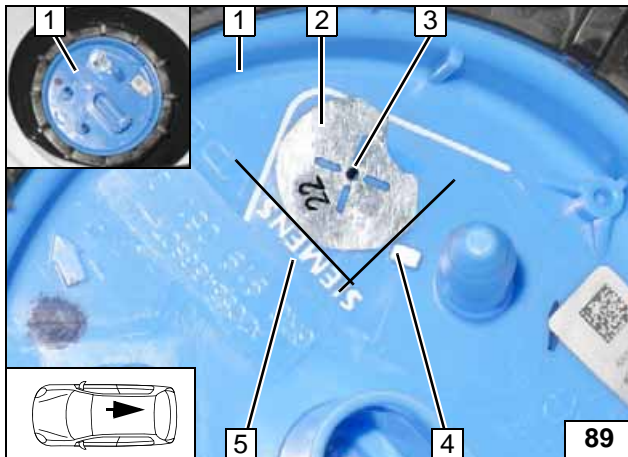


Work steps F1, F2 and F3.

- 1 Fuel tank sending unit
- 2 Position template, copy hole pattern
- 3 Hole made with provided drill
- 4 Contact point with raised part
- 5 Contact point with writing (text may vary)



**Hole for
FuelFix**


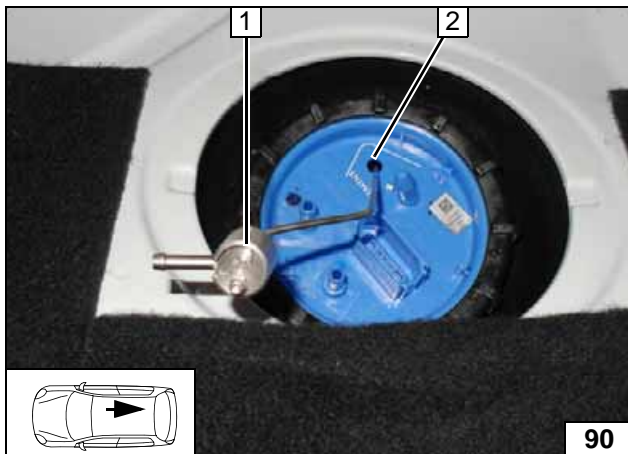


Work steps F4 and F5.


Bend FuelFix 1 according to template and cut to length. Insert into hole 2.




**Preparing
and insert-
ing FuelFix**

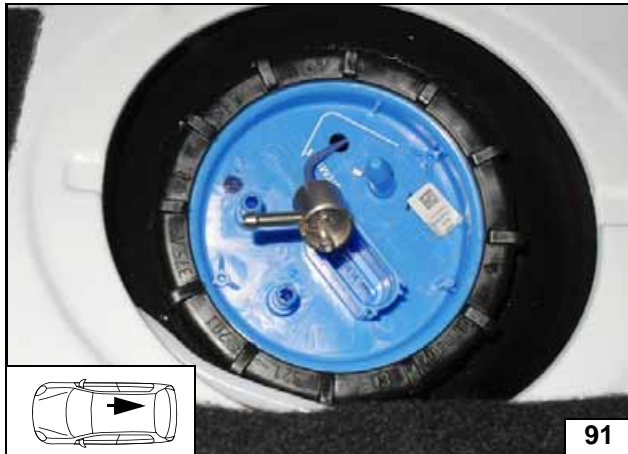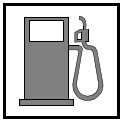

Inserting FuelFix

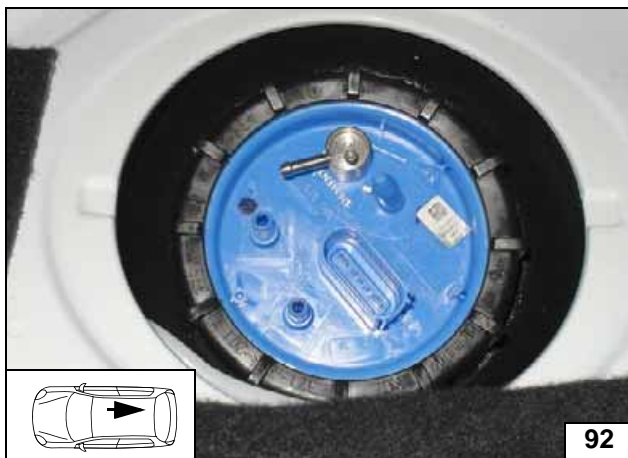

Inserting FuelFix

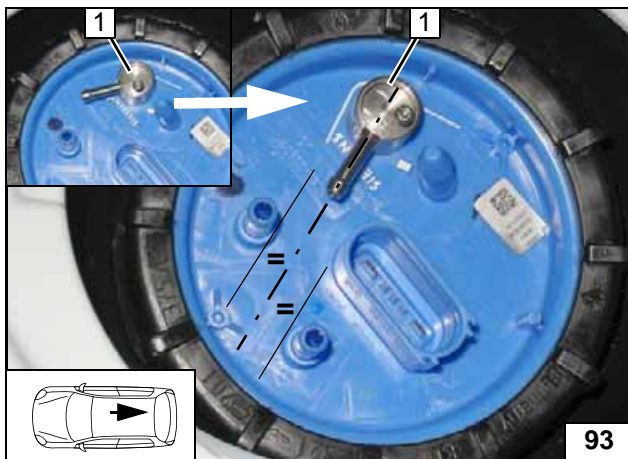


Work steps F5.3 and F5.4.

Align FuelFix 1 as shown.





Aligning FuelFix

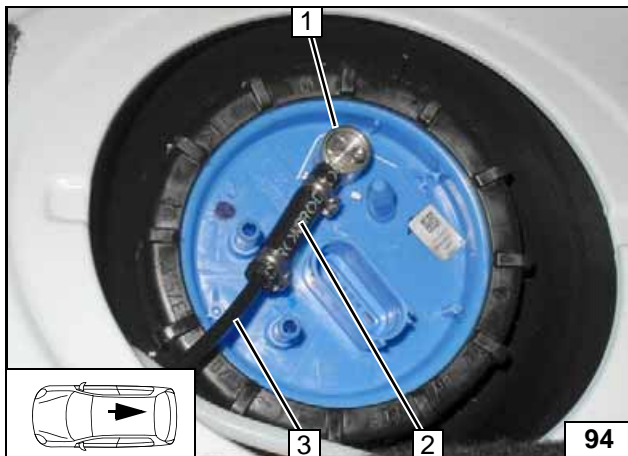

Work step F6.

- 1 FuelFix
- 2 Hose section, 10mm dia. clamp [2x]
- 3 Fuel line


Connecting fuel line

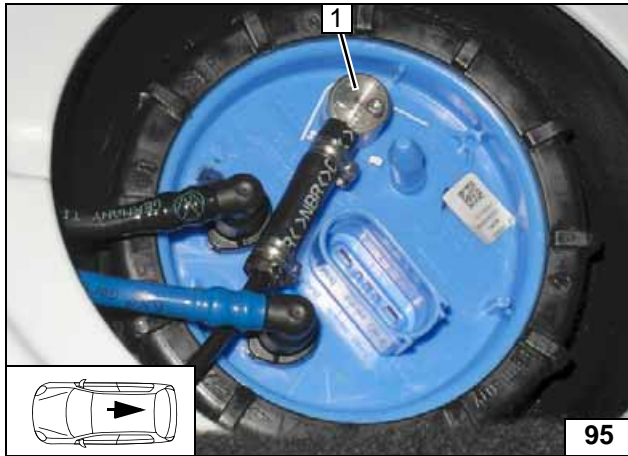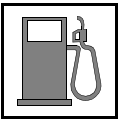

Install original vehicle fuel lines. Align and install FuelFix 1 as shown in the following figure.



Installing FuelFix

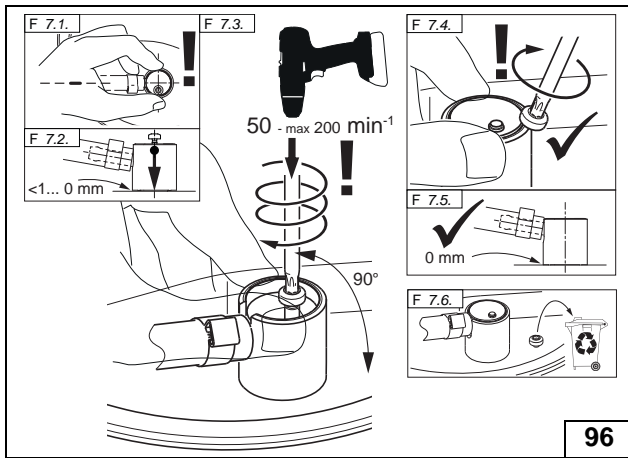

Work step 7.



Installing FuelFix




Work step F8.

Ensure firm seating of FuelFix and positioning of clamping piece 2 with respect to upper edge 1 of the housing.



Checking FuelFix


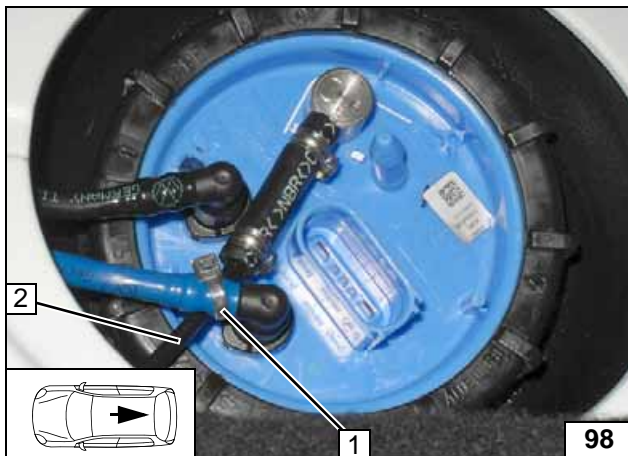


Work step F8.

- 1 Cable tie as tension relief
- 2 Fuel line of FuelFix

Securing fuel line



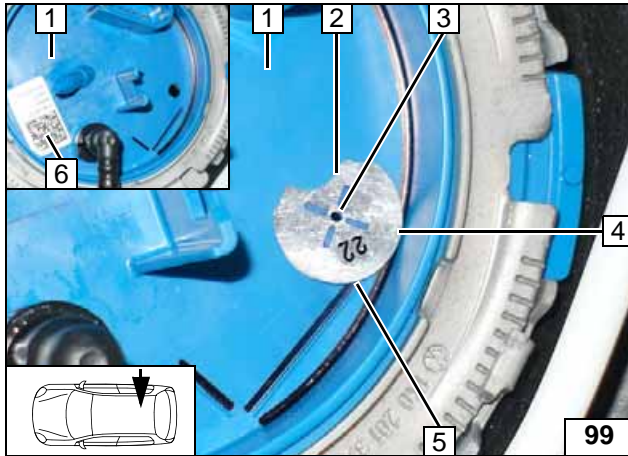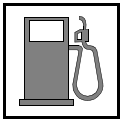

99


Version 2

Work steps F1, F2 and F3.

- 1 Fuel tank sending unit
- 2 Position template, copy hole pattern
- 3 Hole made with provided drill
- 4 Contact point with rim of fuel tank sending unit
- 5 Contact point with end of raised part
- 6 Barcode label, moved



Hole for FuelFix

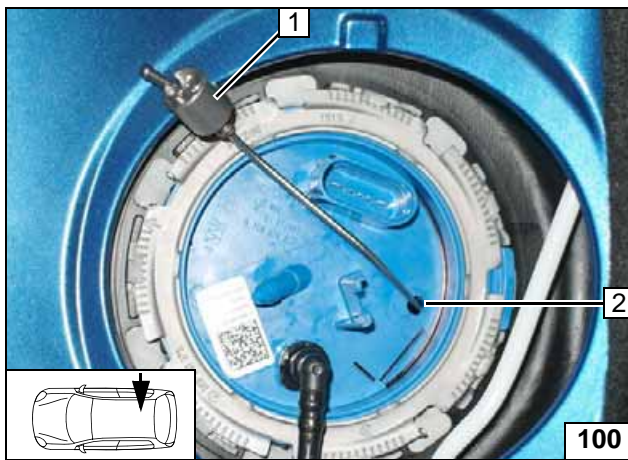

100

Work steps F4 and F5.

Bend FuelFix 1 according to template and cut to length. Insert into hole 2.



Preparing and inserting FuelFix



101

Inserting FuelFix



102

Inserting FuelFix




Work steps F5.3 and F5.4.

Align FuelFix 1 as shown.



Aligning FuelFix

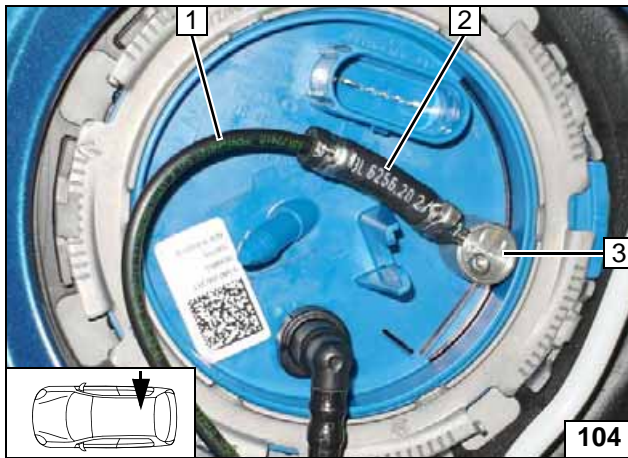

Work step F6.

- 1 Fuel line
- 2 Hose section, 10mm dia. clamp [2x]
- 3 FuelFix


Connecting fuel line



Install original vehicle connector. Align and install FuelFix 1 as shown in the following figure.




Installing FuelFix

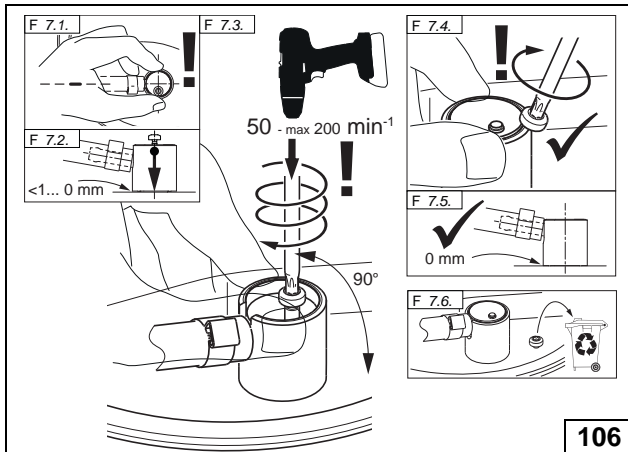

Work step F7.



Installing FuelFix

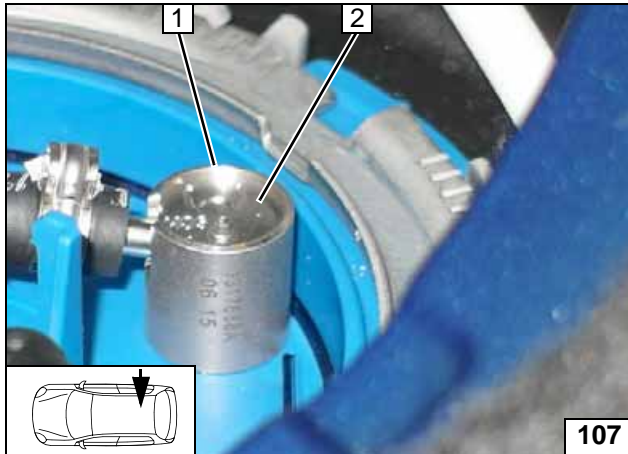


Work step F8.

Ensure firm seating of FuelFix and positioning of clamping piece 2 with respect to upper edge 1 of the housing.




Checking FuelFix

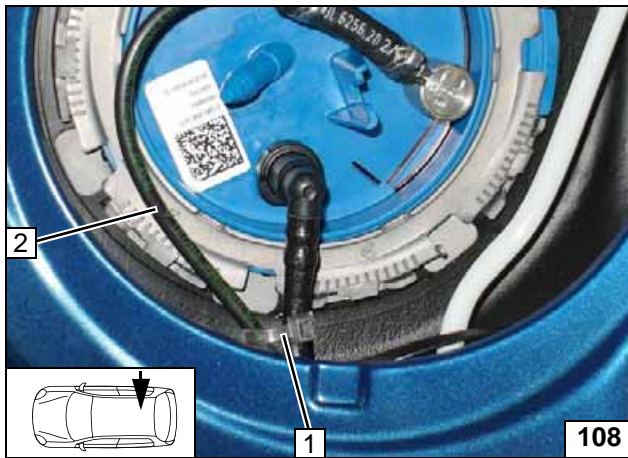

Work step F8.

- 1 Cable tie as tension relief
- 2 Fuel line of FuelFix

Securing fuel line

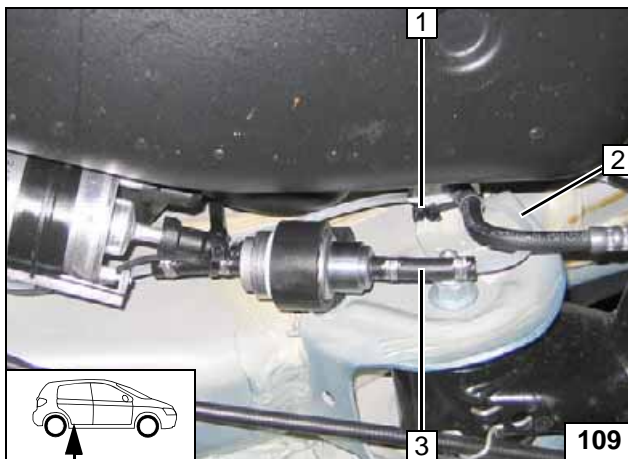



All vehicles

Check the position of the components; adjust if necessary. Check that they have freedom of movement.

- 1 Cable tie
- 2 Fuel line of fuel standpipe
- 3 Hose section, 10mm dia. clamp [2x]




Connecting metering pump

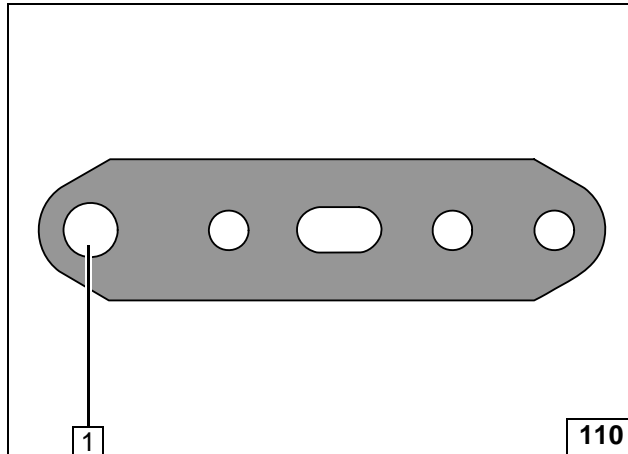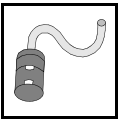

Combustion Air

- 1 Drill out hole to 8.5 mm dia.


Preparing perforated bracket H

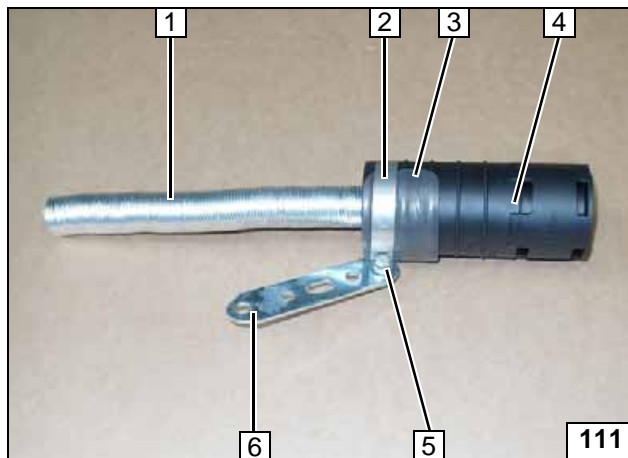

- 1 Combustion air pipe
- 2 51mm dia. clamp
- 3 Self-adhesive foam strip
- 4 Silencer
- 5 M5x16 bolt, flanged nut
- 6 Perforated bracket G



Premounting combustion air pipe and silencer


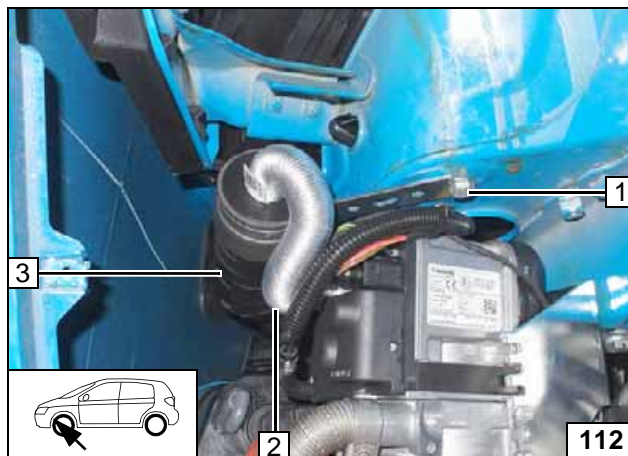


Remove original vehicle bolt at position 1 and discard.

- 1 M8x20 bolt, spring lockwasher, original vehicle thread
- 2 Combustion air pipe
- 3 Silencer




Installing silencer

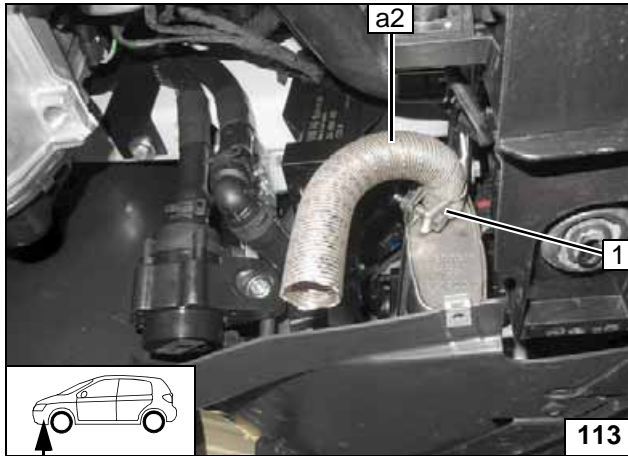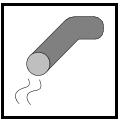

Exhaust System Section 2

- 1 Hose clamp

Installing exhaust pipe a2

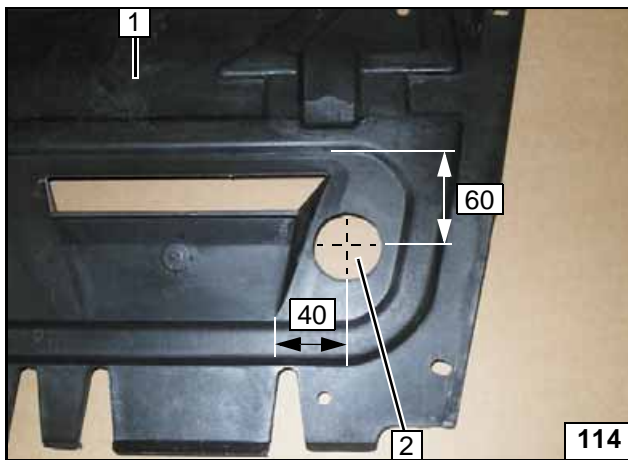


Exhaust End Fastener Installation

Work step E1.

- 1 Underride protection
- 2 Hole




Hole in underride protection

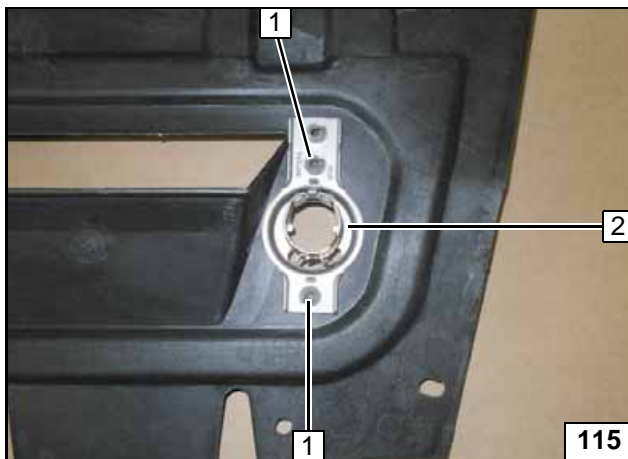

Work step E3.

- 1 Hole pattern [2x]
- 2 Exhaust end fastener


Copying hole pattern

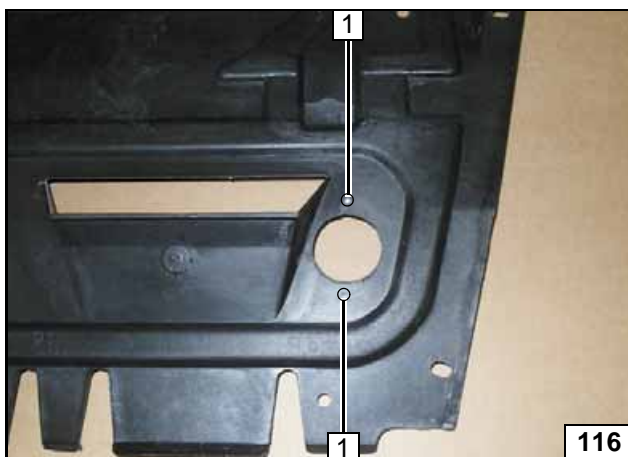

Work step E4.

- 1 Hole [2x]


Holes in underride protection

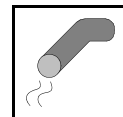

Work step E5.

- 1 5x13 self-tapping screw [2x]

**Installing ex-
haust end
fastener**

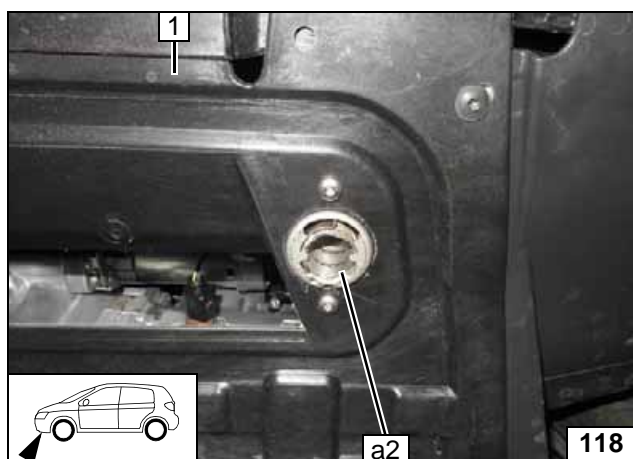

Install underide protection 1.

Work steps E6 - E8.



**Installing
exhaust
pipe a2**






Final Work



Reassemble the components in reverse order. Check all hoses, clamps and all electrical connections for firm seating. Insulate and tie back loose lines. Only use manufacturer-approved coolant. Spray the heater components with anti-corrosion wax (Tectyl 100K).

- **Connect the battery.**
- **Fill and bleed the coolant circuit according to the vehicle manufacturer's instructions.**
- **Program MultiControl CAR, teach Telestart transmitter.**
- **Make settings on the A/C control panel according to the 'operating instructions'.**
- **Place the 'Switch off parking heater before refuelling' caution label near the filler neck.**
- **For initial startup and function check, please see installation instructions.**

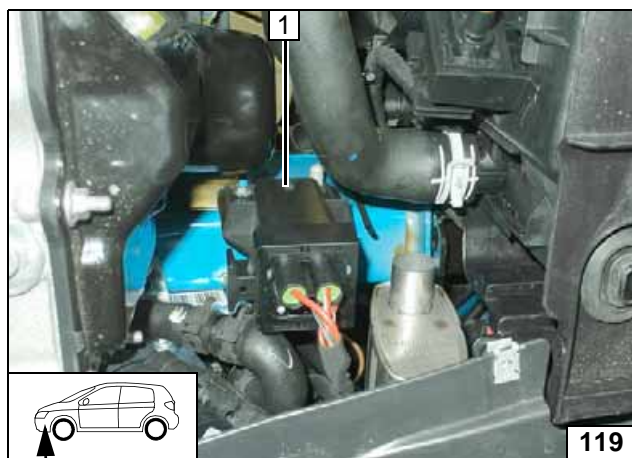

- 1 Original vehicle relay, turned by 180°, reinstalled



Installing original vehicle relay

Webasto Thermo & Comfort SE
 Postfach 1410
 82199 Gilching
 Germany
 Internet: www.webasto.com
 Technical Extranet:
<http://dealers.webasto.com>



FuelFix Template

Top view

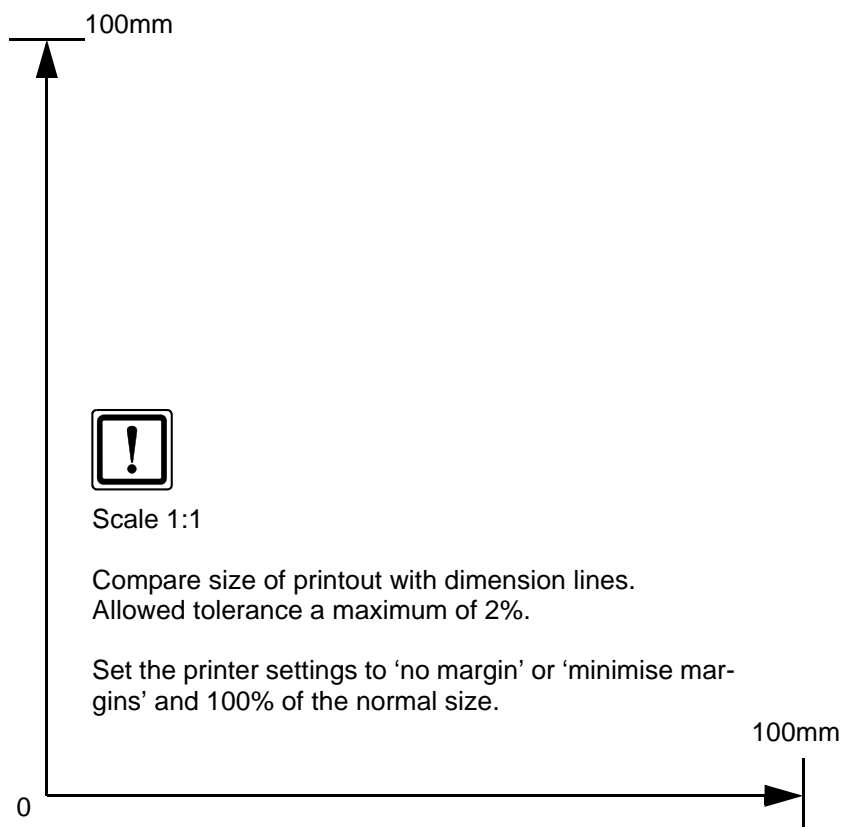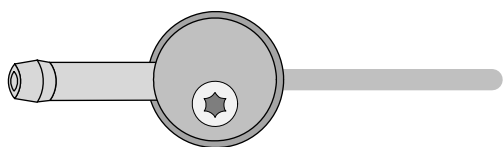

Operating Instructions for Automatic Air-Conditioning

Please remove page and add to the vehicle operating instructions.

Note:

We recommend matching the heating time to the driving time.

Heating time = driving time


Example:

For a driving time of approx. 20 min. (in one direction), we recommend not exceeding a switch-on time of 20 min.


Passenger compartment monitoring, if installed, must be deactivated in addition to the vehicle settings for the heating operation.

For instructions on deactivation, please refer to the operating instructions of the vehicle.


Before parking the vehicle, make the following settings:

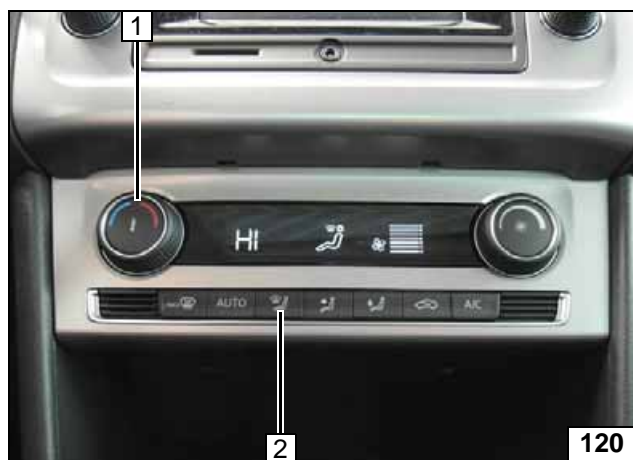

- 1 Set temperature to 'HI'
- 2 Air outlet to windscreen

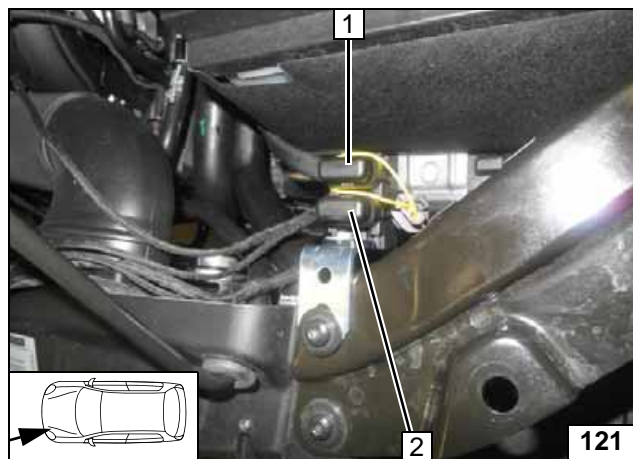

- 1 20A heater fuse F1
- 2 30A passenger compartment main fuse F2

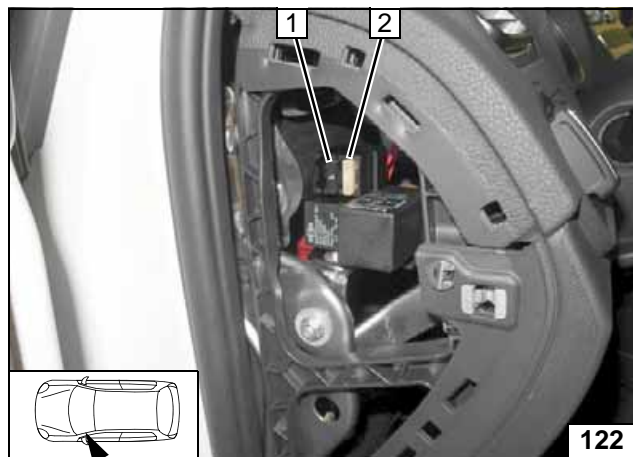

- 1 1A heater control fuse F3
- 2 25A fan fuse F4



A/C control panel

Engine compartment fuses

Passenger compartment fuses

